

General User Manual

Visible Light Face Recognition

Version: 1.0

Date: December 2018

Important Notice

Thank you for choosing our product. Before using this product, please carefully read this instruction manual. This will help prevent unnecessary damage to the product. Follow these instructions to ensure that your product functions properly and completes verifications in a timely manner.

Unless authorized by our company, no group or individual shall take excerpts of or copy all or part of these instructions nor transmit the contents of these instructions in any way.

The products described in this manual may include software that is copyrighted by our company and its possible licensors. No one may copy, publish, edit, take excerpts of, decompile, decode, reverse-engineer, rent, transfer, sublicense, or otherwise infringe upon the software's copyright unless authorized by the copyright holder. This is subject to relevant laws prohibiting such restrictions.



As this product is regularly updated, we cannot guarantee exact consistency between this product and the information provided in these instructions. We will hear no disputes that arise due to differences between the actual product and the contents of these instructions, and you may not be informed of changes in advance.

About This Manual

- This manual introduces the operations, interfaces and functions of visible light face recognition device, including FaceDepot-7A, FaceDepot-7B and SpeedFace series. For installation, please refer to the *Quick Start Guide* of the product accordingly.
 - Features and parameters with ★ are not available in all devices.
 - All pictures shown are for illustration purpose only. Pictures in this manual may not be exactly consistent with the actual products.
-

Contents

1. Instruction for Use.....	1
1.1 USING YOUR FINGERPRINTS	1
1.2 STARTUP SCREEN	2
1.3 VIRTUAL KEYBOARD	3
1.4 CHANGE THE THEME AND WALLPAPER.....	4
1.5 VERIFICATION METHODS	9
1.5.1 Facial Verification.....	9
1.5.2 Fingerprint Verification	15
1.5.3 Password Verification.....	22
1.5.4 Card Verification ★	27
1.5.5 Combined Verification	27
2. Main Menu	31
3. User Management.....	33
3.1 ADD AN EMPLOYEE.....	33
3.1.1 Register Basic Employee Information	35
3.1.2 Register Employee Photo.....	36
3.1.3 Registration Comparison Methods.....	40
3.1.4 Permission Settings.....	51
3.1.5 Verification Mode Setting	53
3.1.6 Access level ★	56
3.2 SEARCHING FOR AN EMPLOYEE.....	59
3.3 EDIT AN EMPLOYEE	61
3.4 DELETE EMPLOYEE.....	63
4. Attendance Events ★.....	66
4.1 ADD ATTENDANCE EVENTS.....	66
4.2 EDIT ATTENDANCE EVENTS	71
4.3 DELETE ATTENDANCE EVENTS	73
5. Access Settings.....	76
5.1 ACCESS CONTROL PARAMETERS	76
5.2 TIME RULE SETTING ★	78
5.3 HOLIDAY SETTING ★	81
6. Log ★	86
6.1 SEARCH FOR ATTENDANCE RECORDS.....	86
6.2 SEARCH FOR ATTENDANCE PHOTOS.....	90
6.3 SEARCH FOR BLACKLIST PHOTOS.....	94
7. Data Management	95
8. USB Disk Management ★	97
8.1 UPLOAD TO USB DRIVE.....	98
8.2 DOWNLOAD TO A USB DRIVE.....	98
8.3 USB DISK SETTINGS	98
9. Alarm Management ★	99
9.1 ADD ALARMS	99


9.2 EDIT ALARMS.....	104
9.3 DELETE ALARMS.....	106
10. System Settings	110
10.1 NETWORK SETTINGS	111
10.1.1 Ethernet Settings	112
10.1.2 Comm Connection Settings	114
10.2 DATE AND TIME	115
10.2.1 Date and Time Settings	116
10.2.2 Date and Time Format Settings.....	118
10.3 ATT/ACCESS RECORD PARAMETERS	120
10.3.1 Status Mode.....	121
10.3.2 Plugin Function Rules	132
10.3.3 Capture Photo Settings	133
10.3.4 Verification Settings.....	134
10.3.5 Validity Period of User Information.....	136
10.4 CLOUD SERVICE SETTINGS.....	137
10.5 WIEGAND SETTINGS	138
10.5.1 Wiegand In	139
10.5.2 Wiegand Out.....	140
10.6 DISPLAY SETTINGS.....	142
10.7 SOUND SETTINGS	143
10.8 BIOMETRIC PARAMETERS	144
10.9 AUTO-TESTING	146
10.10 ADVANCED SETTINGS	147
10.11 ABOUT THE DEVICE.....	148
11. USB upgrade	149
Statement on the Right to Privacy	150
Eco-friendly Use.....	151

1. Instruction for Use

1.1 Using Your Fingerprints

Recommended fingers: index, middle, or ring fingers; avoid using the thumb or pinky, as they are difficult to accurately press onto the fingerprint reader.


- Diagram of how to correctly press your fingers onto the fingerprint reader.

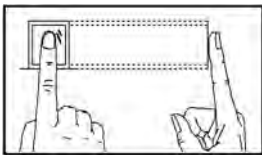


Press your finger onto the fingerprint reader.

Ensure that the center of your finger is aligned with the center of the fingerprint reader.


- Incorrect ways of pressing your fingers onto the fingerprint reader.

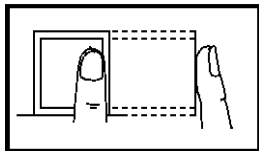


Off-center

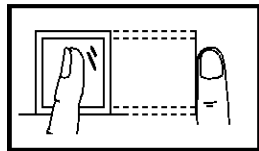

Not the fingerprint's
center

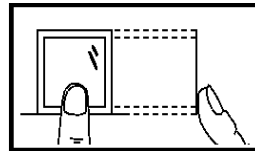

Off-center

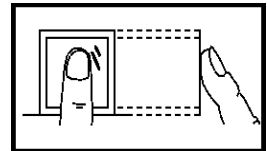

Not the fingerprint's
center

Note: Please use the correct method when pressing your fingers onto the fingerprint reader for registration and identification. Our company will assume no liability for recognition issues that may result from incorrect usage of the product. We reserve the right of final interpretation and modification concerning this point.

1.2 Startup Screen

After plugging in the device, press the On/Off switch located on the side. The following screen will load:




Notes:

- ✧ The wallpaper can be customized. For more details, please refer to “**1.4 Change Theme and Wallpaper**”.
- ✧ Tap on  to enter the personnel ID Input screen in 1:1 verification mode. For further information about the 1:1 verification process, see section “**1.5 Verification Method**”.
- ✧ Tap on  to enter the main menu. If a super administrator has already been registered for this device, you will need the permission of the super administrator to enter the main menu.

1.3 Virtual Keyboard

- English keyboard

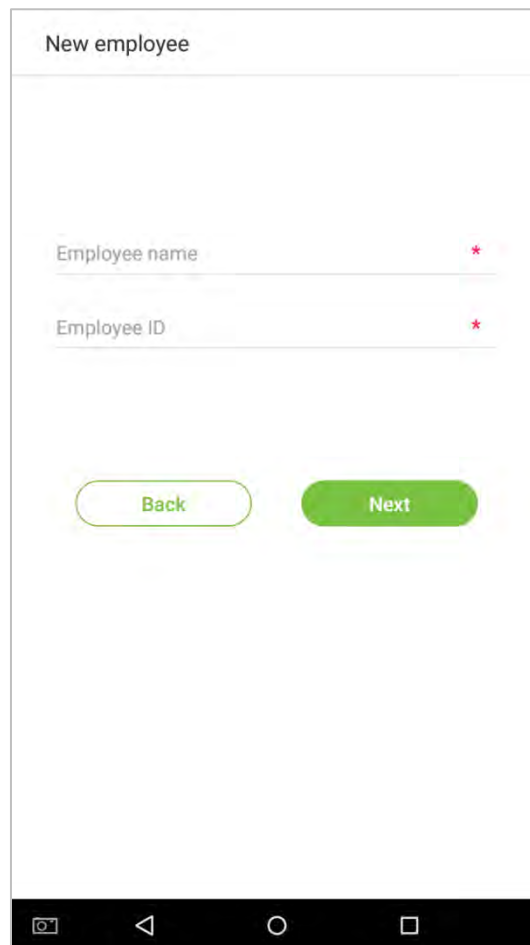

The screenshot shows a mobile application interface for adding a new employee. At the top, there is a title bar labeled "New employee". Below the title bar, there are two input fields: "Employee name" and "Employee ID". Each input field has a red asterisk (*) to its right, indicating a required field. Below the input fields, there are two buttons: a green "Back" button and a green "Next" button. The bottom of the screen shows the Android navigation bar with icons for back, home, and recent apps.

Note: This device supports input methods of Chinese, English, numbers, and symbols. Press [CN] to switch to the Chinese keyboard; press [EN] to switch to the English keyboard; press [?123] to switch to the numbers and symbols keyboard; and press [Back] to return to the alphabet keyboard. If you tap on an input box, the virtual keyboard will pop up on the screen. To hide the keyboard, tap on the downwards arrow ▾.

1.4 Change the Theme and Wallpaper

Note: Please enable the [User defined theme switch] in [System Settings] > [Display Settings].

Tap on any blank area with your finger on the initial interface to change the theme and wallpaper, as shown below:



- **Change the theme**

1. Tap on [Choose theme] and select a theme at the bottom of the interface.




2. After the theme was set successfully, it will be displayed on the standby interface.



- **Change the wallpaper**

1. Press on any blank area on the screen for a while, then tap on the [Change wallpaper] icon, slide from right to left and back in the wallpaper choosing area to choose the desired wallpaper.

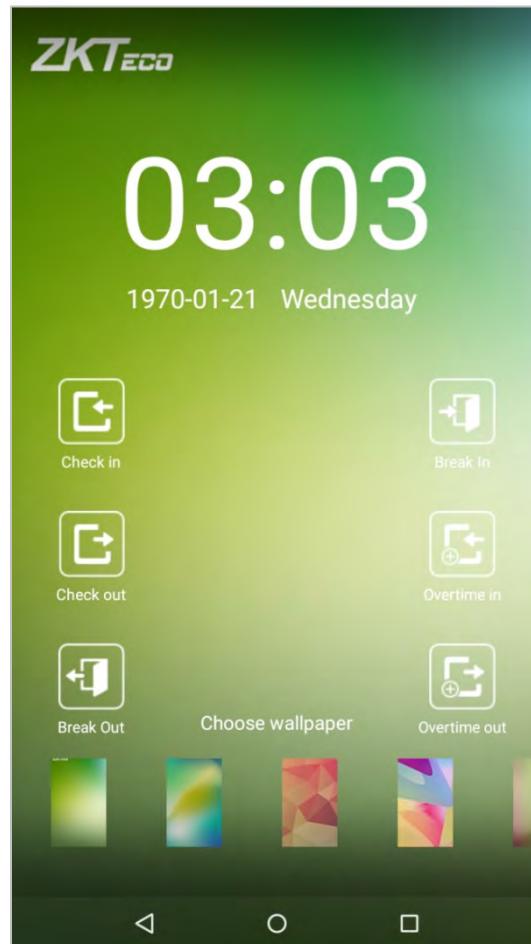

2. The wallpaper is set successfully and displayed on the standby interface.




1.5 Verification Methods

1.5.1 Facial Verification


- **1:N face verification**

Compares the acquired facial images with all of the facial templates that are stored in the device. The device will automatically detect faces nearby. Align your face into the capture area of the camera.

1. Successfully verified.

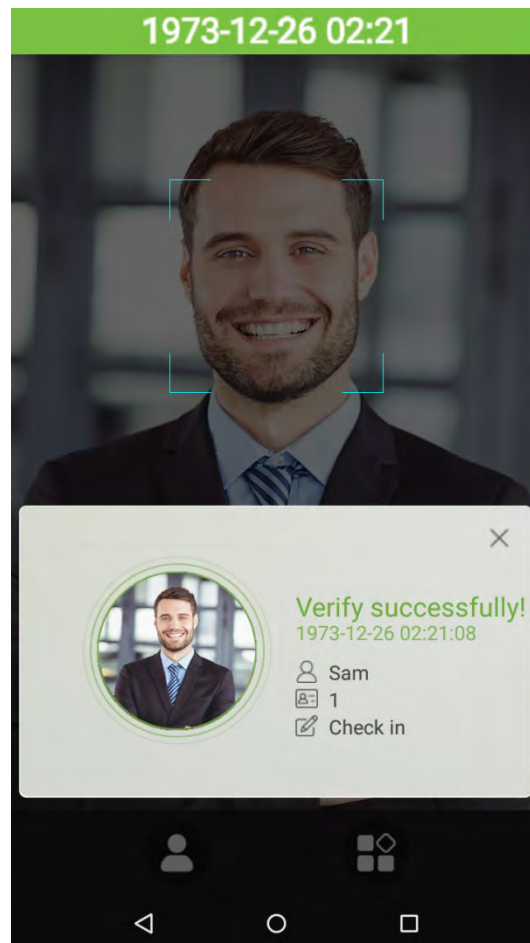


2. Verification is failed.

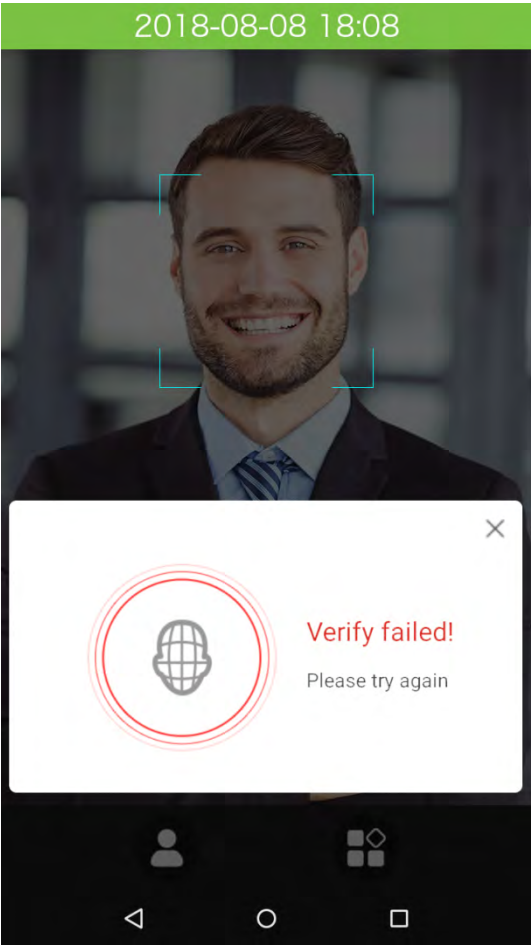


- **1:1 face verification**

Compare the face captured by the camera with the facial template related to the personnel ID input. Press  on the main interface and enter the 1:1 facial verification mode.


1. Input the personnel ID, click on [OK].

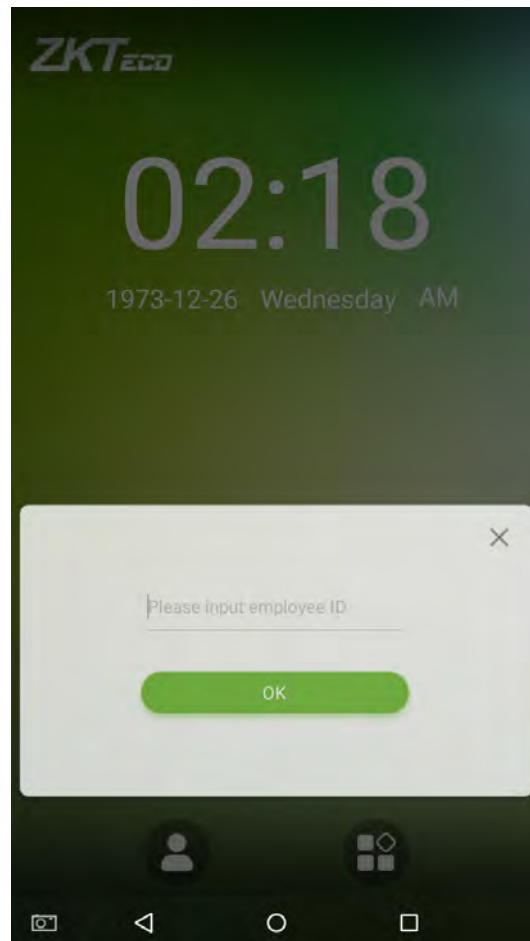


2. Look at the camera; make sure your face stay in the center of the camera.

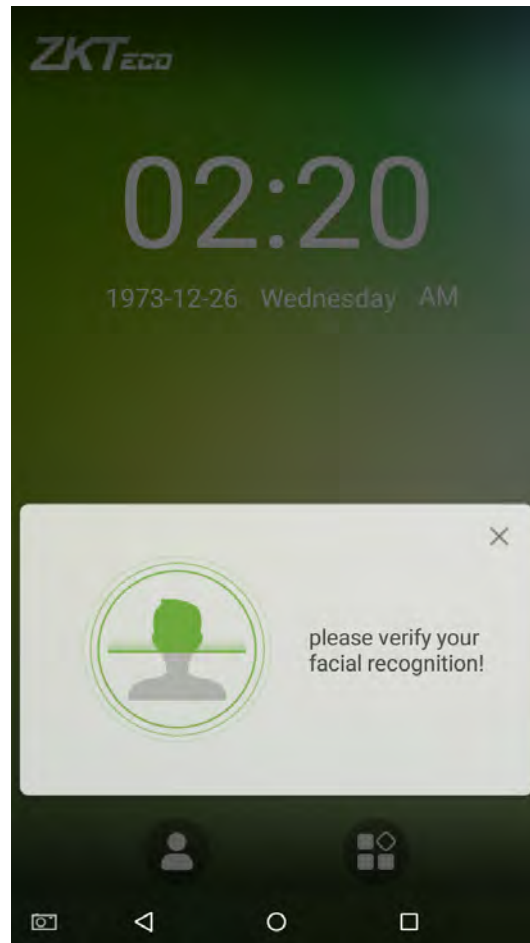

3. Successfully verified.

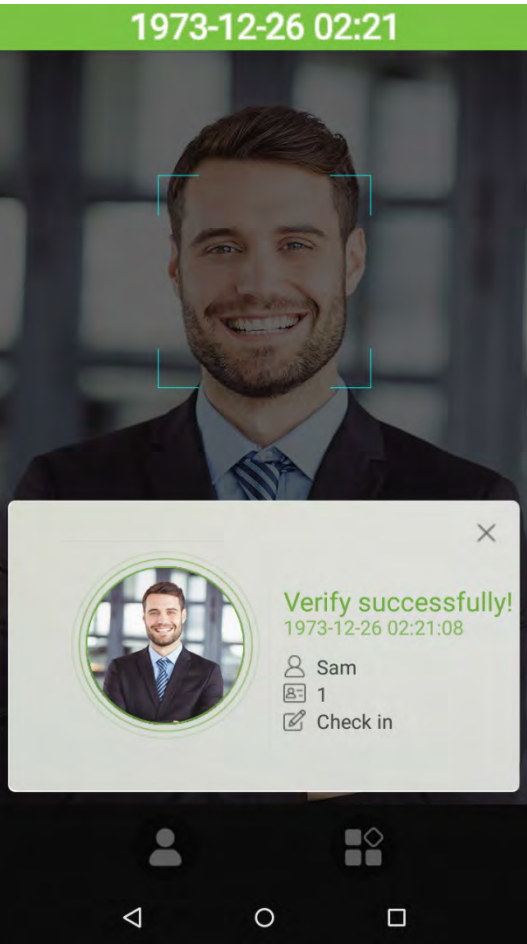

4. Verification is failed.

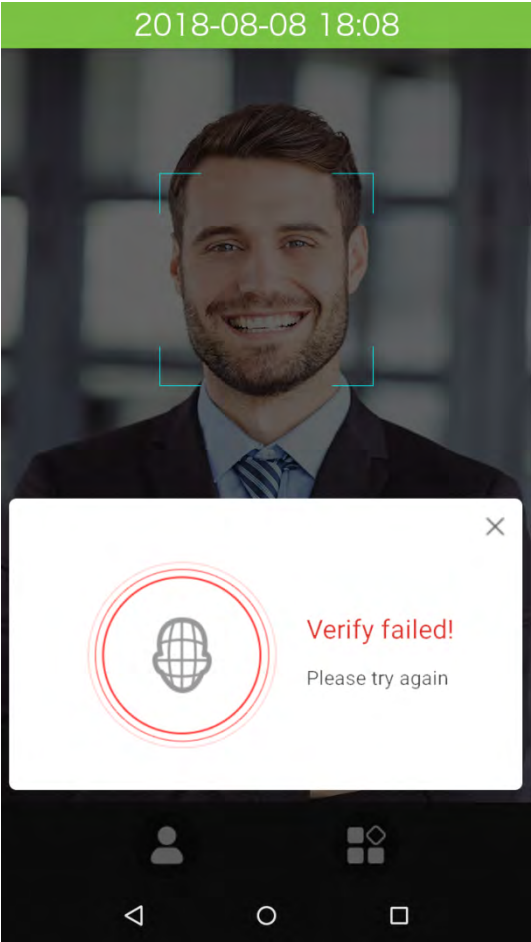

1.5.2 Fingerprint Verification


- **1:N fingerprint verification**

Compare the fingerprint that is being pressed onto the fingerprint reader with all of the fingerprint data that is stored in the device.


To enter fingerprint verification mode, simply press your finger on the fingerprint reader.

Make sure that you correctly press your fingerprint onto the fingerprint reader. Please refer to section “1.1 Using your finger” for further details.

Successful verification:

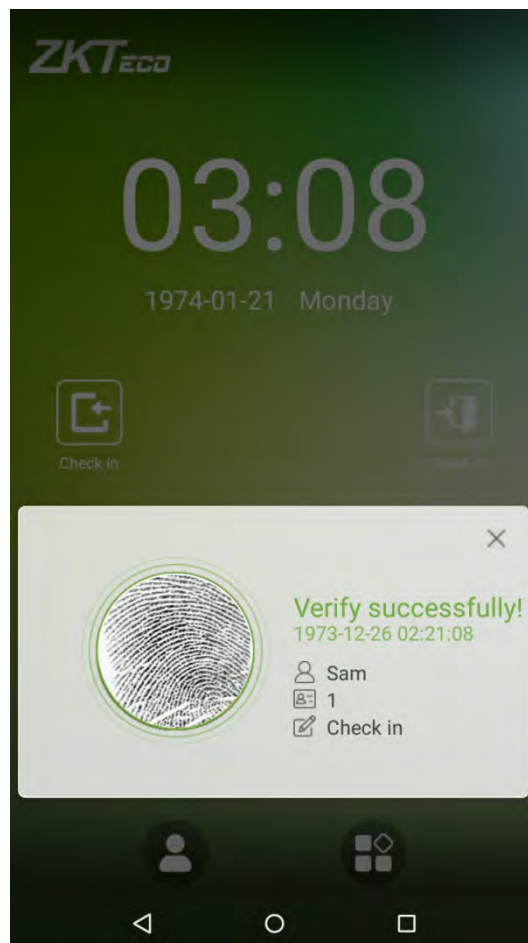

Verification is failed:

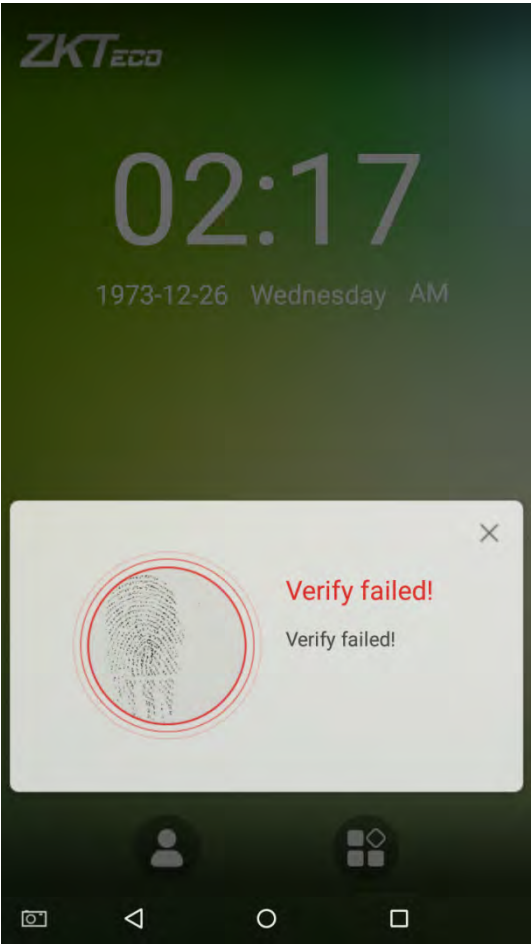


- **1:1 fingerprint verification**


Compares the fingerprint that is being pressed onto the fingerprint reader with the fingerprints that are linked to Employee ID input via the virtual keyboard. This method can be used when the system has trouble recognizing an employee's fingerprints.

Press the  button on the main screen to enter 1:1 fingerprint verification mode:


1. Enter the Employee ID and press [OK].

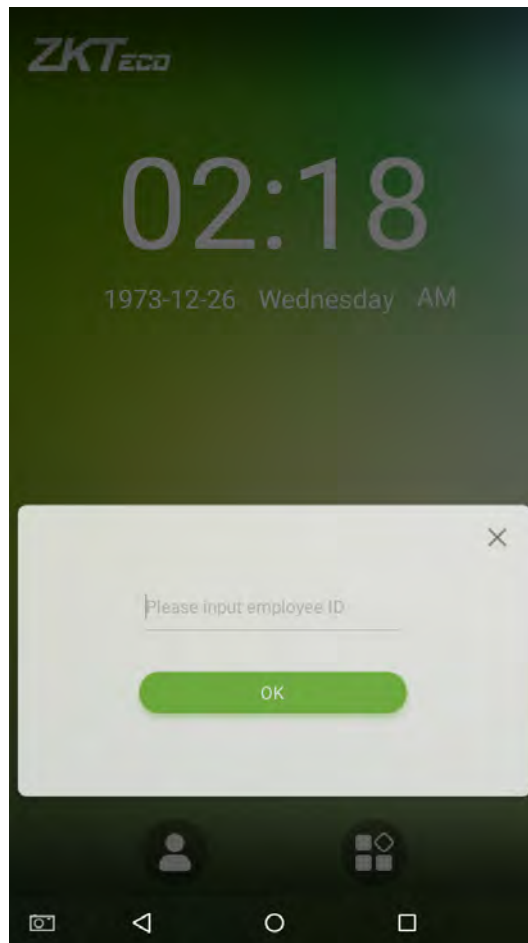


If an employee has registered a face, a password and badge★ in addition to his/her fingerprints and the verification method is set to fingerprint/ password/ badge★/ face verification, the following screen will appear. Select the fingerprint icon  to enter fingerprint verification mode:

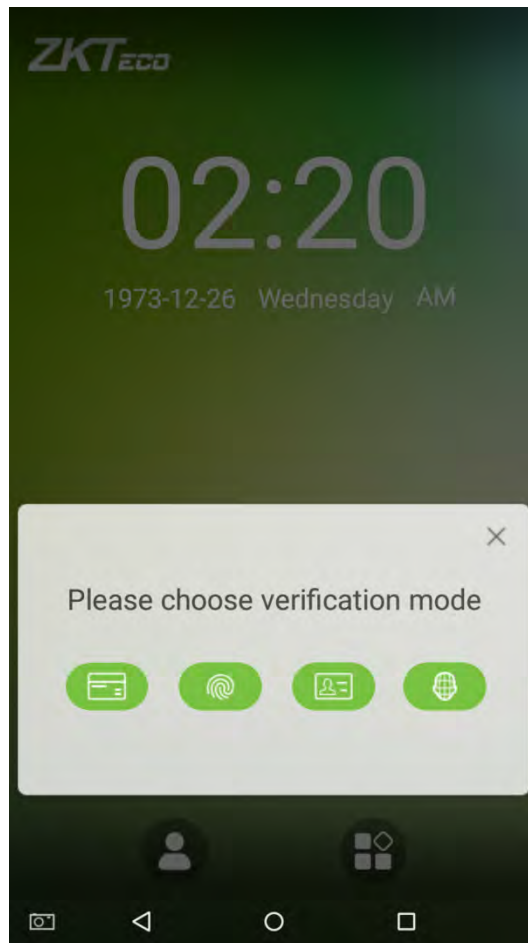


2. Press the finger on the fingerprint reader to proceed with verification.

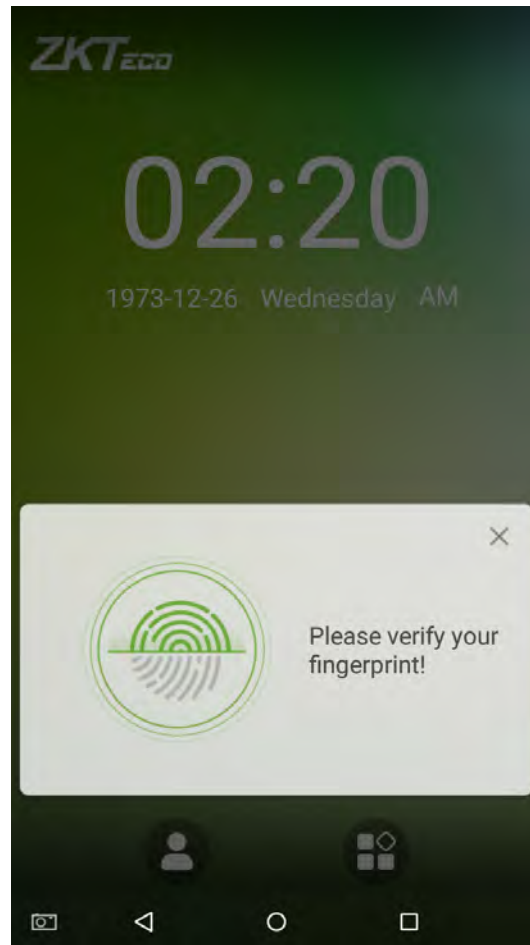

3. Successfully verified.

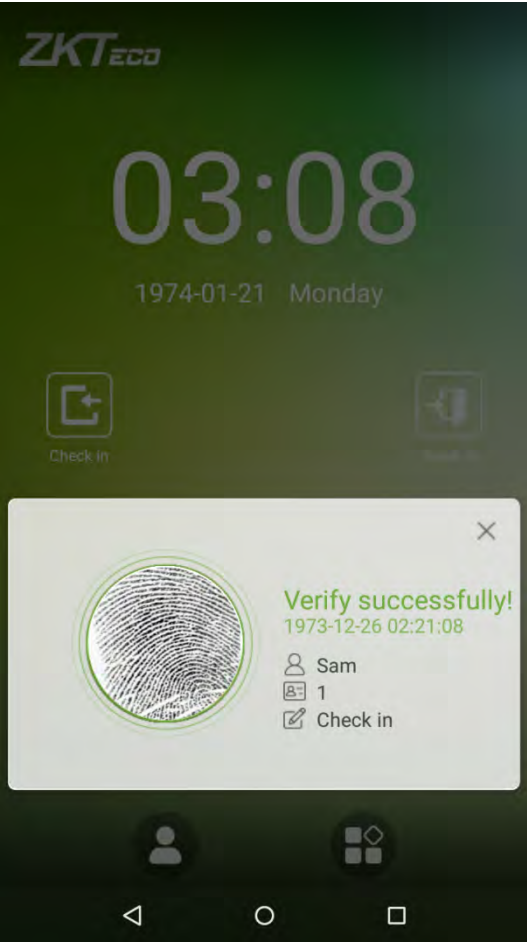

4. Verification is failed.

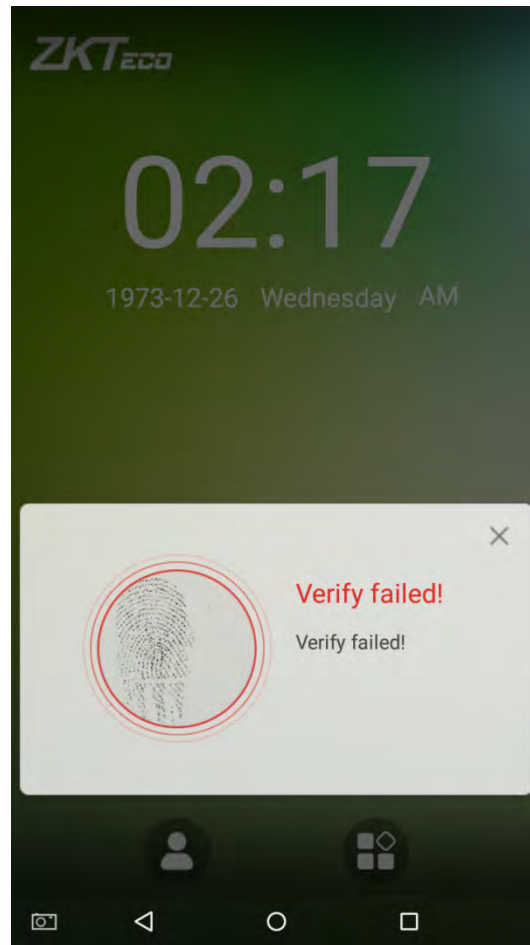


1.5.3 Password Verification


When an employee inputs his/her personnel ID and password into the device, the data will be compared to the personnel IDs and passwords saved in the system.

Tap on the  button on the main screen to enter the 1:1 password verification mode.


1. Enter the employee ID and press [OK].

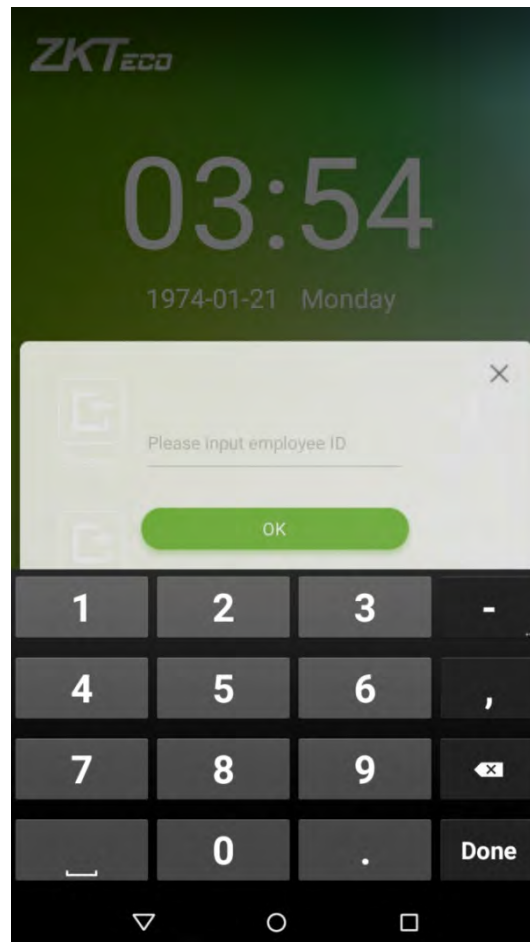


If an employee has registered a face, a fingerprint and badge★ in addition to his/her password and the verification method is set to fingerprint/ password/ badge★/ face verification, the following screen will appear. Select the password icon  to enter password verification mode.

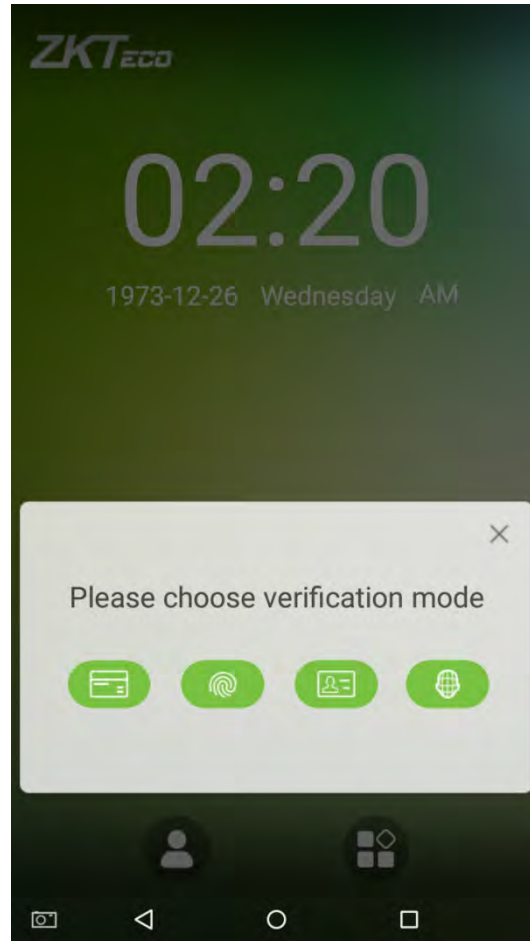


2. Enter a password and press [OK].

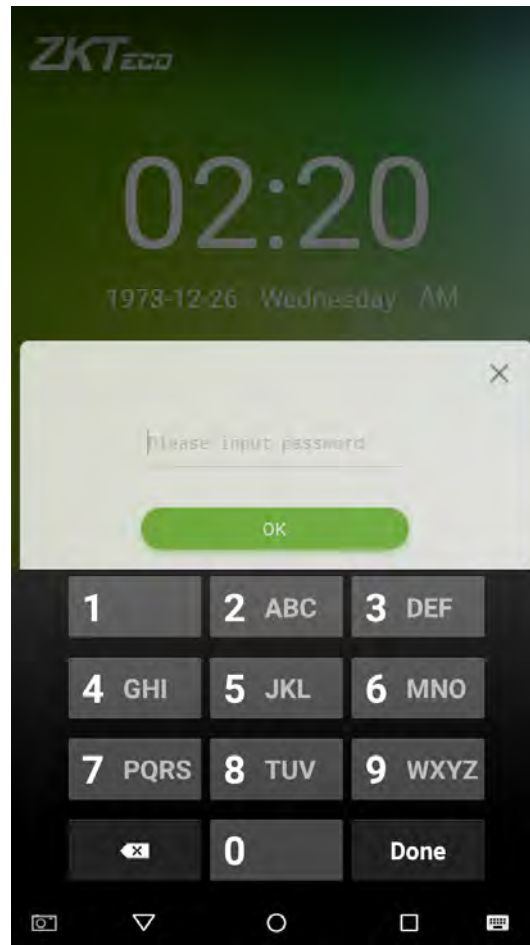

3. Successfully verified.

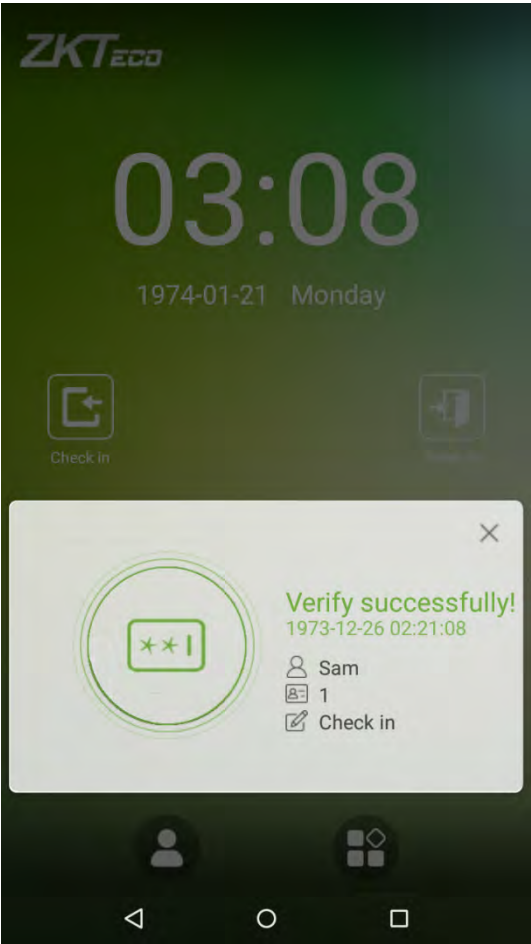

4. Verification is failed.

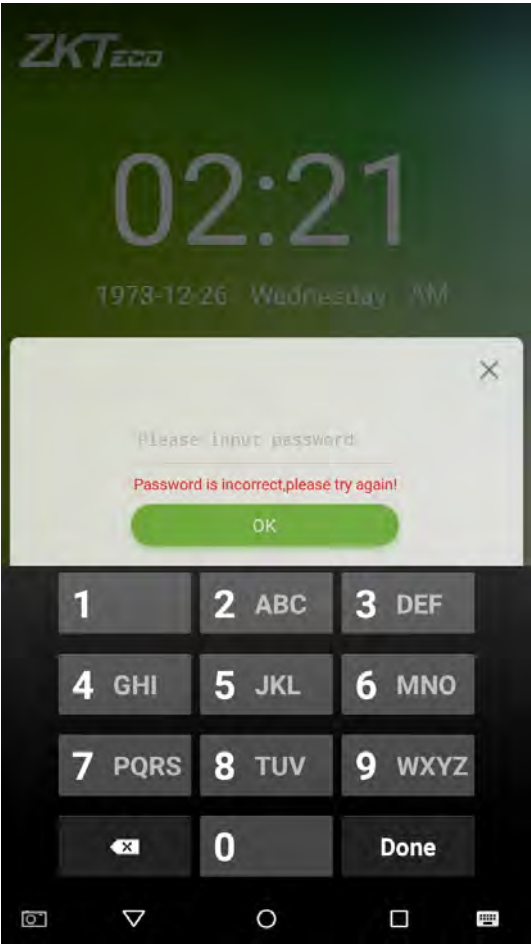


1.5.4 Card Verification★

Only the product with the card module offers the card verification function.

Please place the registered card on the card reader.

1.5.5 Combined Verification

To increase security, this device offers the option of using multiple forms of verification methods. A total of 21★ different verification combinations can be used, as shown below:

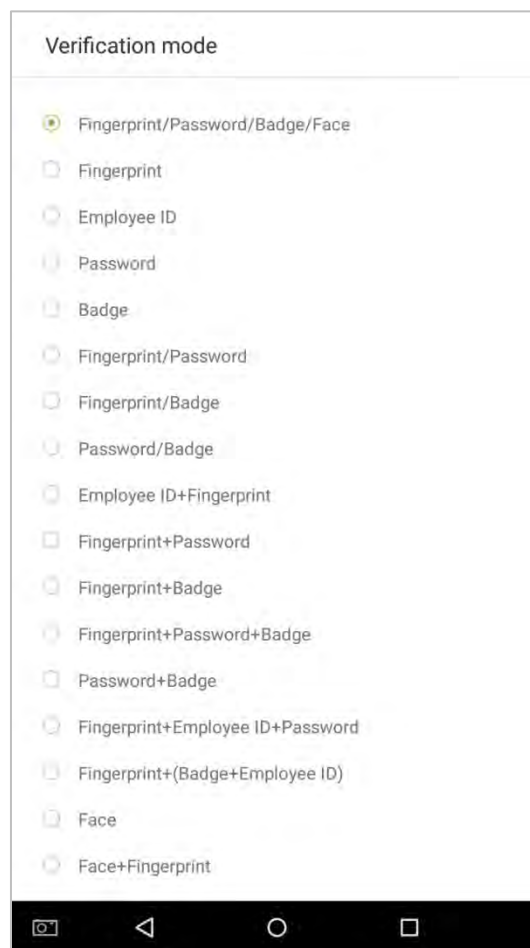


Notes:


1. "/" means "or" and "+" means "and".
2. Combined verification requires employees to register the information needed to complete verification. Otherwise, employees may not be able to complete the verification process. For instance, when employee A registers with his/her fingerprint data, and the system's verification mode is set as "Fingerprint + Password", the employee will not be able to complete the verification process.

The example below shows “Fingerprint + Password” verification. To log in to the system, please follow these steps:


1. Press your finger on the fingerprint reader, then the following window will appear. Enter the password and tap on [OK].

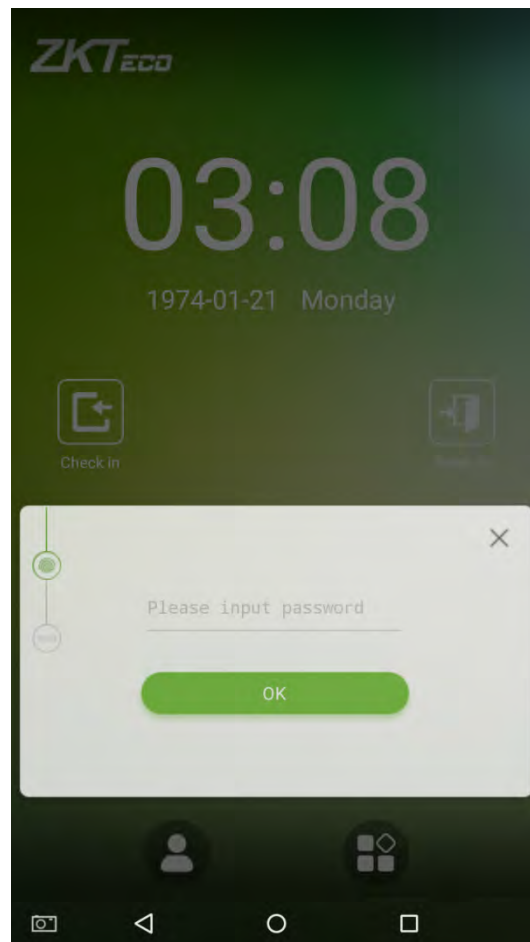

2. Successfully verified.

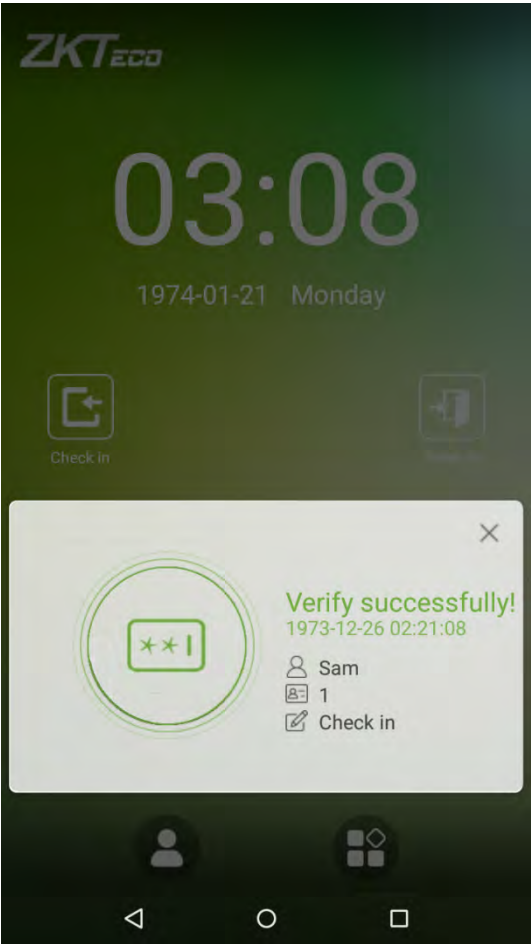


3. Verification is failed.

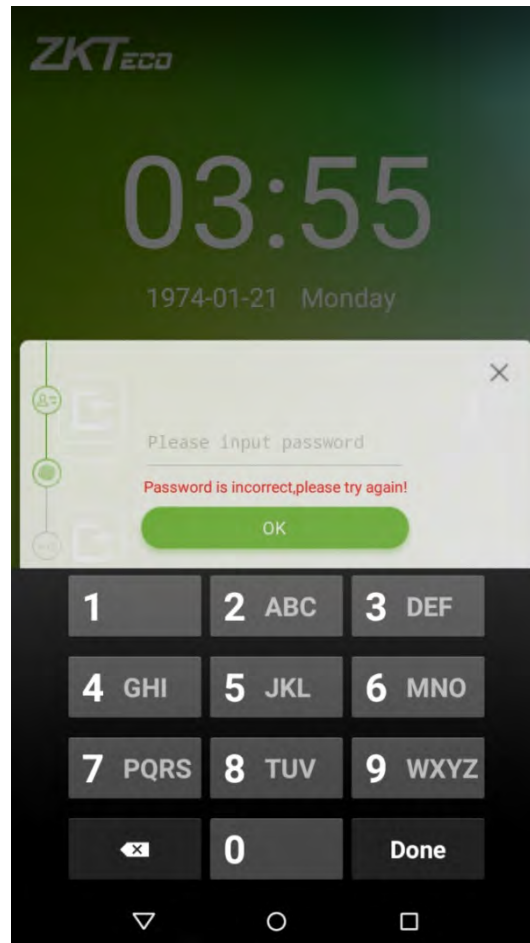

Note: A combined verification method can only be used when an employee has registered a comparison method and that method has been selected in the system. For further details, please see section “**3.1 Add an Employee**” below.

2. Main Menu

On the startup screen, press  to enter the main menu, as shown in the diagram below:

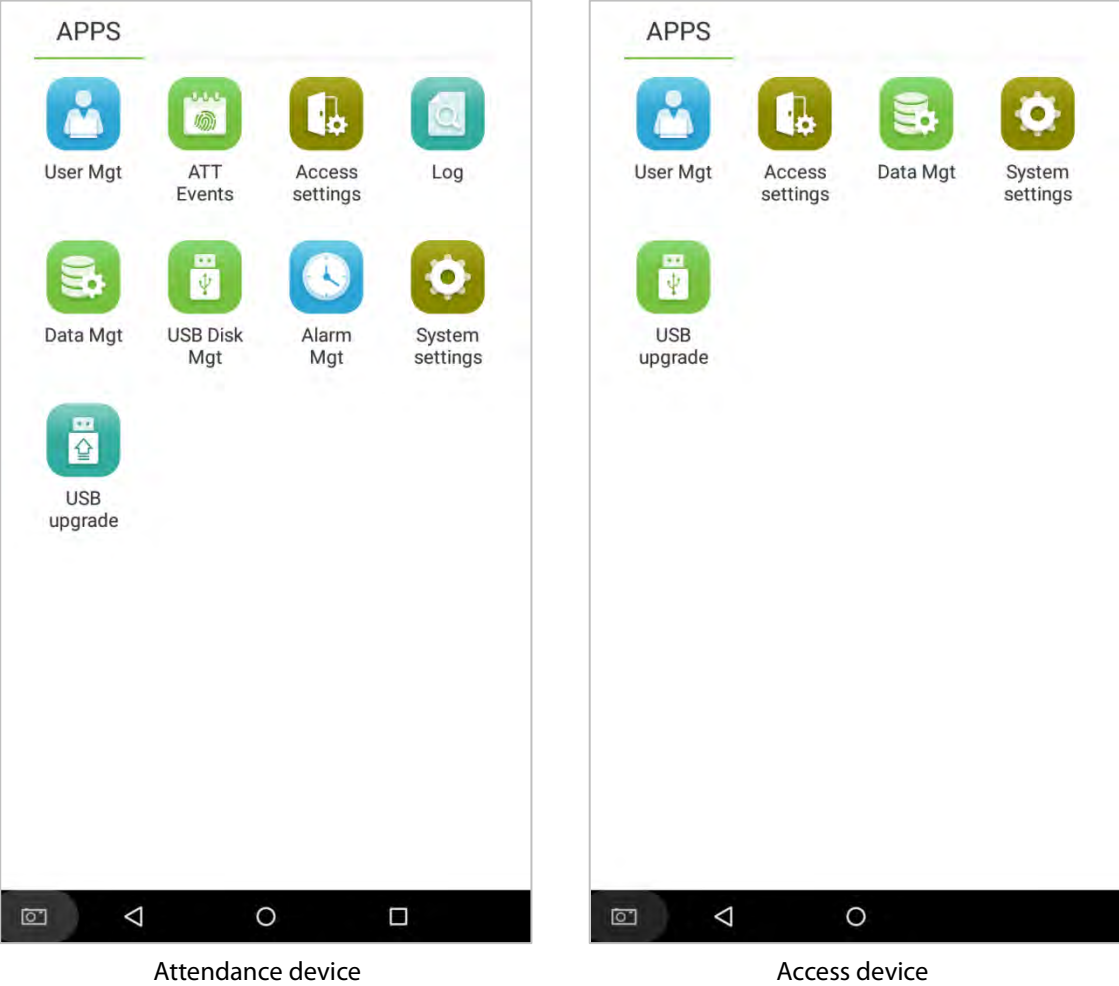

Menu Options	Function Description
User management	Add, view and edit employee information.
Attendance events ★	Records various clock-in or clock-out data based on different attendance status.
Access settings	Achieve simple access control settings.
Log ★	Look up attendance log, view attendance photo and blacklist photo.
Data management	Delete data from the device.
USB Disk management ★	Use a USB drive to upload and download.
Alarm management ★	Once an alarm has been set, the device will automatically play preselected ringtone when the designed time is reached. It will stop ringing after the alarm time elapsed.
System settings	Set the network, date, time, attendance parameters, cloud server, Wiegand, display, sound settings, biometric parameters, automatic test, advanced settings of the device.
USB upgrade	Upgrade the firmware of the device with the upgrade file in a USB drive

Note: If the device does not have a super administrator, any user can enter the menu by pressing the  key; after a super administrator has been set on the device, ID verification will be required to enter the menu. Once password verification is successful, users can enter the menu. To ensure the security of the device, we recommend registering an administrator the first time you use this device. For detailed operating instructions, please see section **“3.1 Add an Employee”**.

3. User Management


3.1 Add an Employee

Tap on [User Management] in the main menu:

1. Tap on  on the [User Management] interface to enter the employee creation wizard.




2. Tap on [Start] on the employee creation wizard.

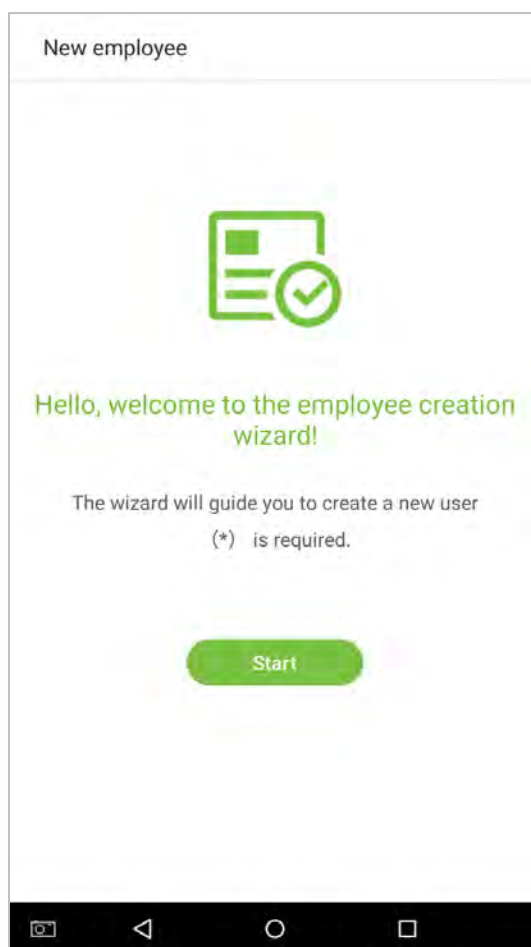

3.1.1 Register Basic Employee Information

Enter the employee name in the [Employee Name] field, and the personnel ID in the [Employee ID] field:

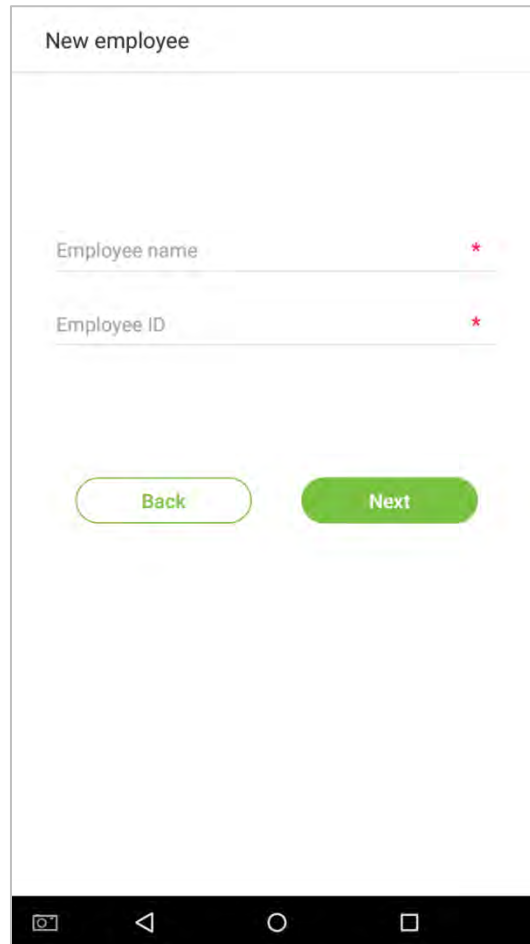A screenshot of a mobile application interface for registering a new employee. The title bar at the top says "New employee". Below it, there are two input fields: "Employee name" and "Employee ID". Each field has a red asterisk icon to its right, indicating a required field. Below the input fields, there are two green buttons: "Back" and "Next". The bottom of the screen shows a standard Android navigation bar with icons for back, home, and recent apps.


Notes:

1. The name refers to the employee's name. Its maximum length is 24 characters.
2. The system supports employee IDs from 1 to 9 digits by default. A maximum of 23 digits can be input. To increase the number of digits that can be input, please contact our pre-sale tech department.
3. Employee IDs can be changed the first time that they are used to log in to the system. After they have been used to log in, employee numbers can no longer be edited.
4. The message "This Employee ID is already in use!" indicates that the ID number you have input is already being used. Please input another ID number.


3.1.2 Register Employee Photo

After inputting the employee's basic information, tap on the right arrow to register an employee photo.


1. Tap on the  icon to enter the camera interface.

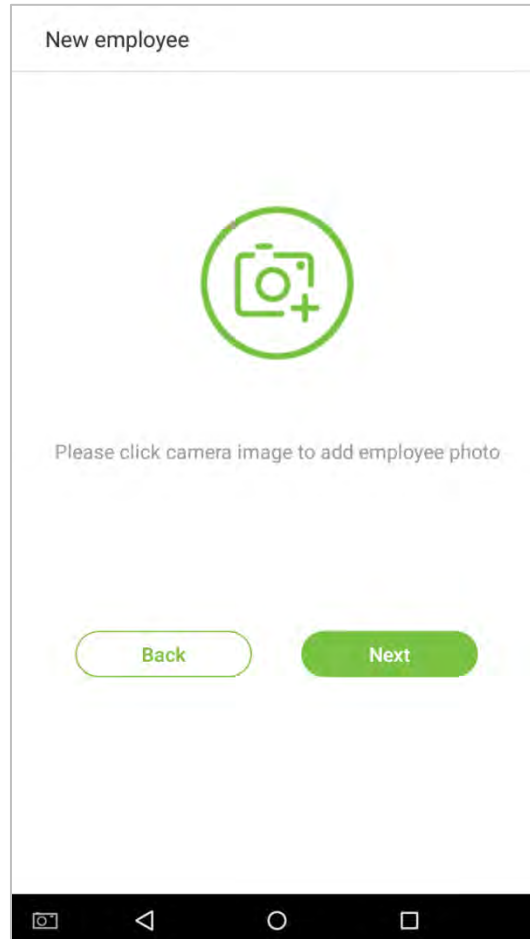


2. Employee should face the lens and then adjust the position. Tap on the  icon to take a photo.

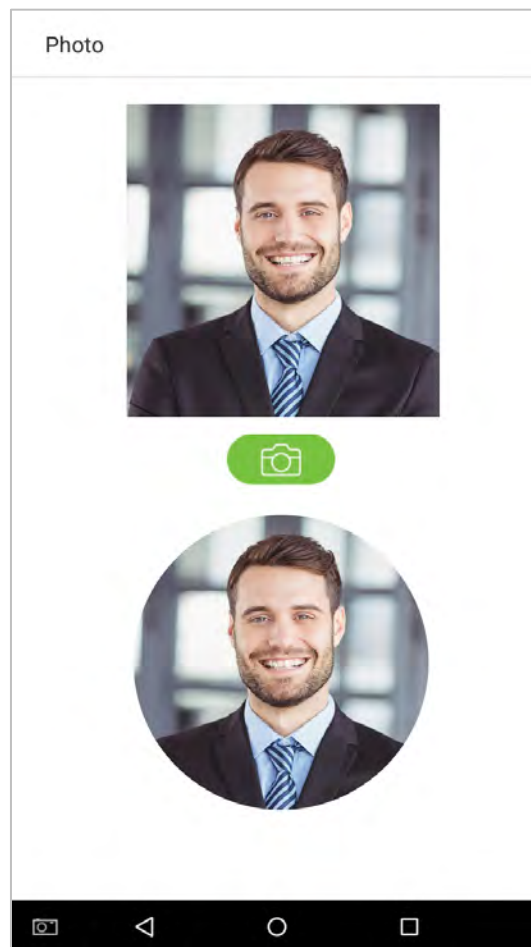

3. Tap on the  icon on the bottom side, select a photo, and then tap on the  icon to continue taking another photo.

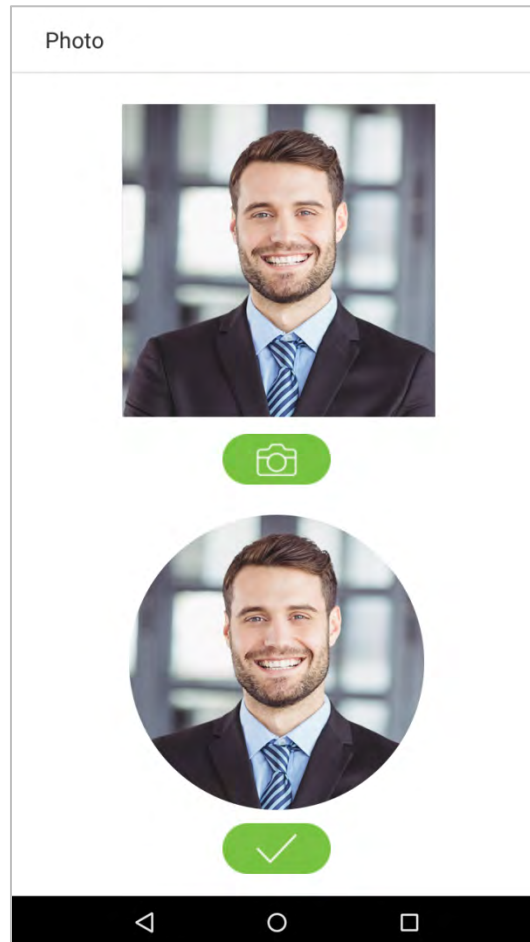


4. Tap on the rightwards arrow to complete adding the photo.

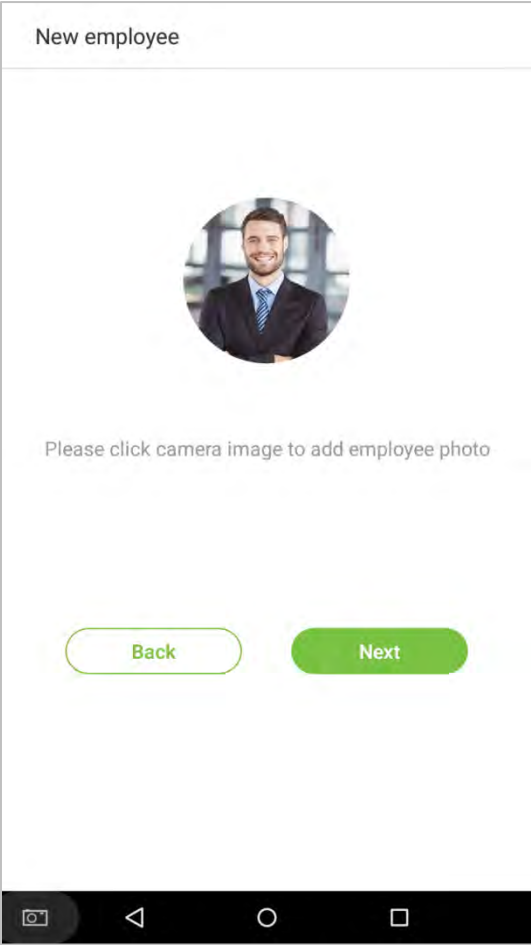

3.1.3 Registration Comparison Methods


The registration comparison method is the method used to verify a login. This includes registering a face, a password, fingerprints, or badge number. Select a registration that best suits your needs.

Click on the rightwards arrow on the interface shown after the message [Employee photo added successfully], then enter the verification method entry page:

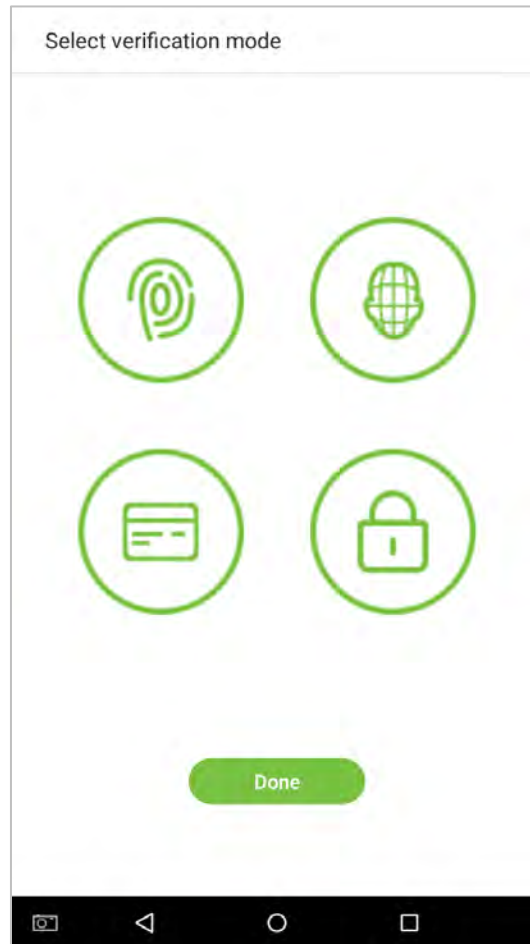

- **Register fingerprints**


1. On the registration method entry interface, tap on the  icon to enter the fingerprint registration page. Select the icon on the left or right side of the screen and then tap on the finger you would like to register a fingerprint for.

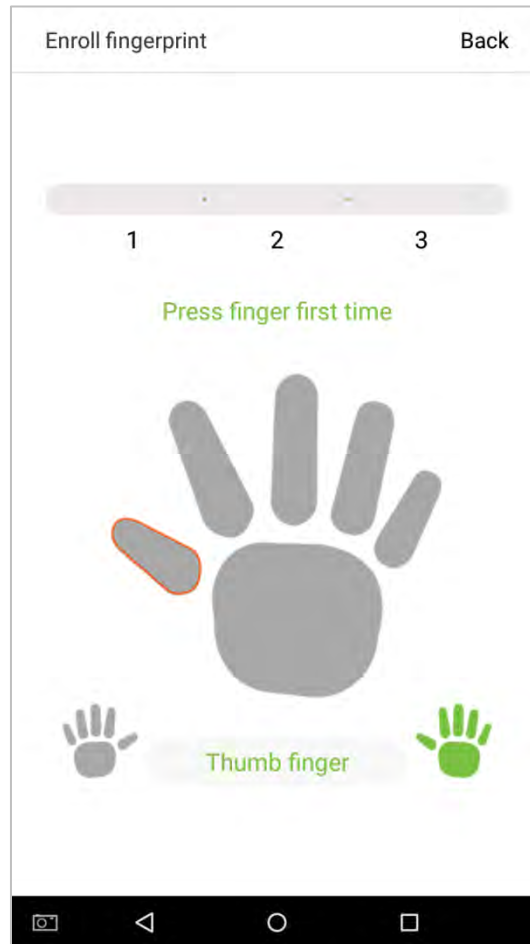

2. Press the same finger on the fingerprint reader three times. Green indicates that the fingerprint was input successfully.

If you press different fingers onto the fingerprint scanner during the 2nd and 3rd contacts, you will be prompted to "Please use the same finger".

3. If fingerprint is successfully registered, a "Continue to enroll the next fingerprint?" dialog box will appear. Tap on [Yes] to record the next fingerprint, or [No] to return to the fingerprint registration interface.

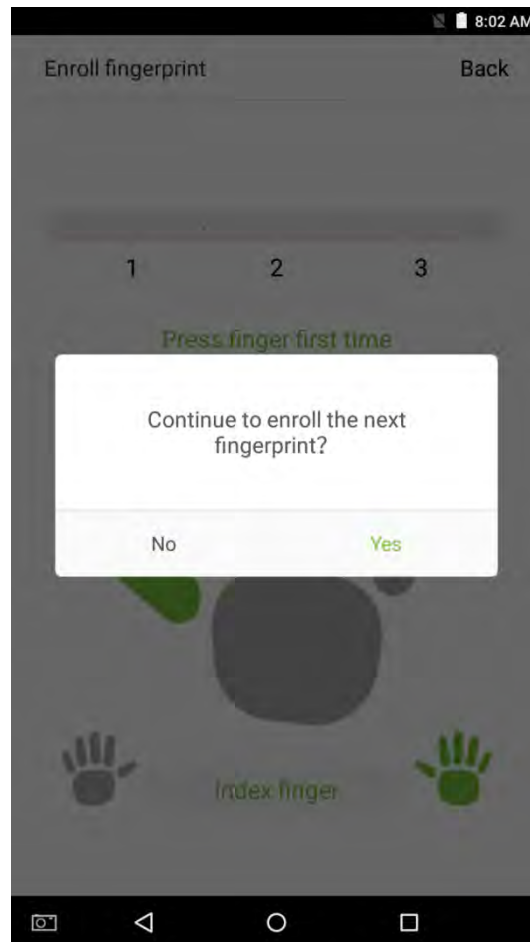


- **Register face**

On the registration method entry interface, tap on the  icon to enter the face registration page. Move and adjust your face on the register area.




- **Register badge number ★**

On the registration method entry interface, tap on the  icon to enter the badge number registration page. Place your badge close to the card swiping area.

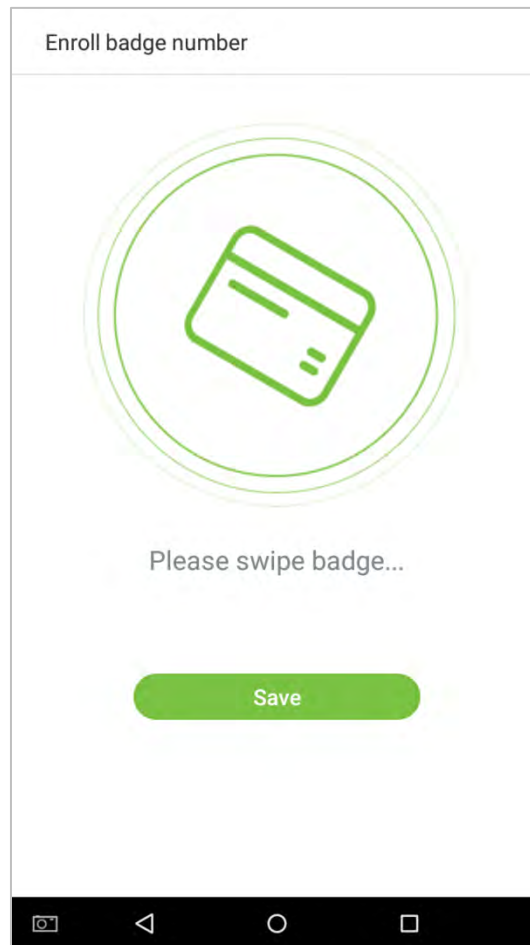


- **Register passwords**

1. On the registration method entry interface, click on the  icon to enter the register password page. Enter a password in the [Enter the password] field, then re-enter the password in the [Confirm password] field. Tap on [Save] (Note: the employee password must be an 8-digit number).

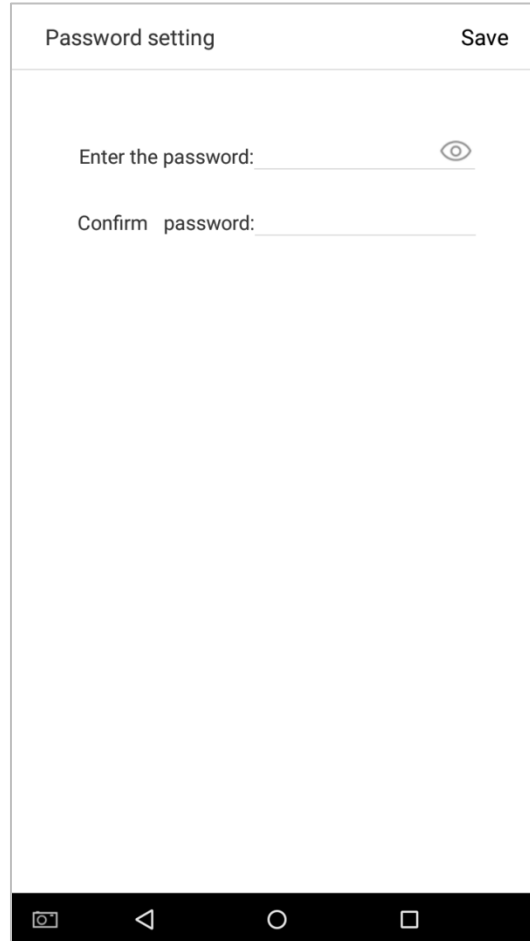

The screenshot shows a mobile application interface for setting a password. At the top, there is a header bar with the text "Password setting" on the left and a "Save" button on the right. Below the header, there are two input fields. The first field is labeled "Enter the password:" and has a small eye icon to its right, indicating a toggle for password visibility. The second field is labeled "Confirm password:" and is positioned directly below the first. At the bottom of the screen, there is a black navigation bar with four white icons: a camera icon, a back arrow, a circle, and a square.

Tap on  to encrypt the password; tap on  to make the password visible, as shown below:

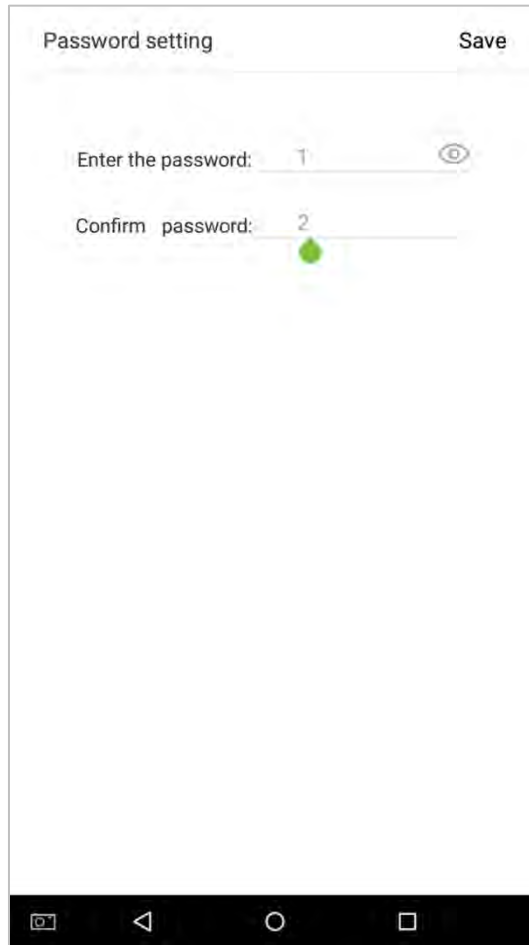

2. If the password you input in both fields does not match, you have to re-enter the passwords.

The screenshot shows a mobile application interface for setting a password. At the top, there is a header bar with the text "Password setting" on the left and a "Save" button on the right. Below the header, there are two input fields. The first field is labeled "Enter the password:" and contains a single asterisk (*). The second field is labeled "Confirm password:" and contains a single vertical bar (|). Below these fields, a red error message is displayed: "(Password did not match, please try again)". At the bottom of the screen, there is a black navigation bar with three white icons: a square, a circle, and a triangle.

3. The password which has been registered can be deleted or covered.

- **Delete/Overwrite registered passwords**

On the User management interface, tap an employee in the employee list to enter the employee information page, and then tap on [Password].

Employee information





Employee name

Sam

Employee ID

1

Admin permission

Normal employee

User's valid time period setting

Fingerprint


1/10

Badge number


1046395815

Password

Press [Delete]/ [Overwrite] in the dialog window that pops up.

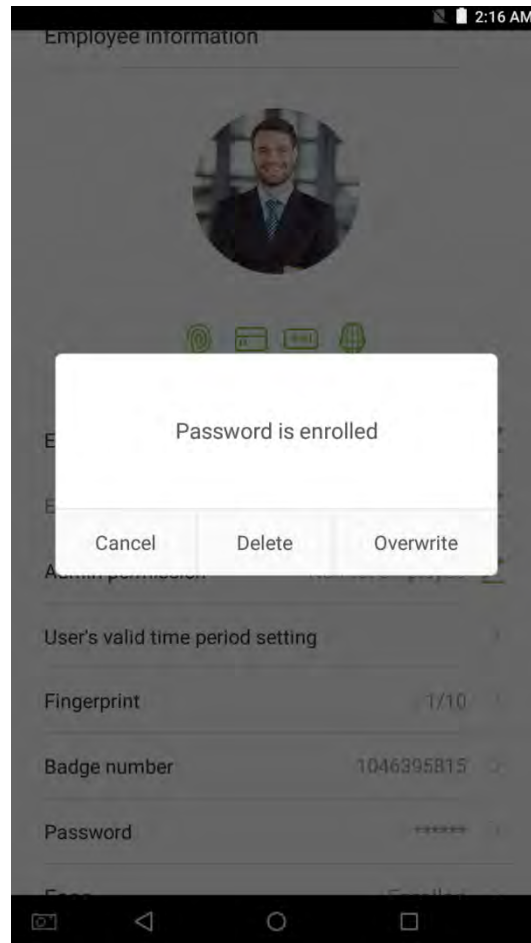


Click [Done] after the registration, a new employee is created successfully.

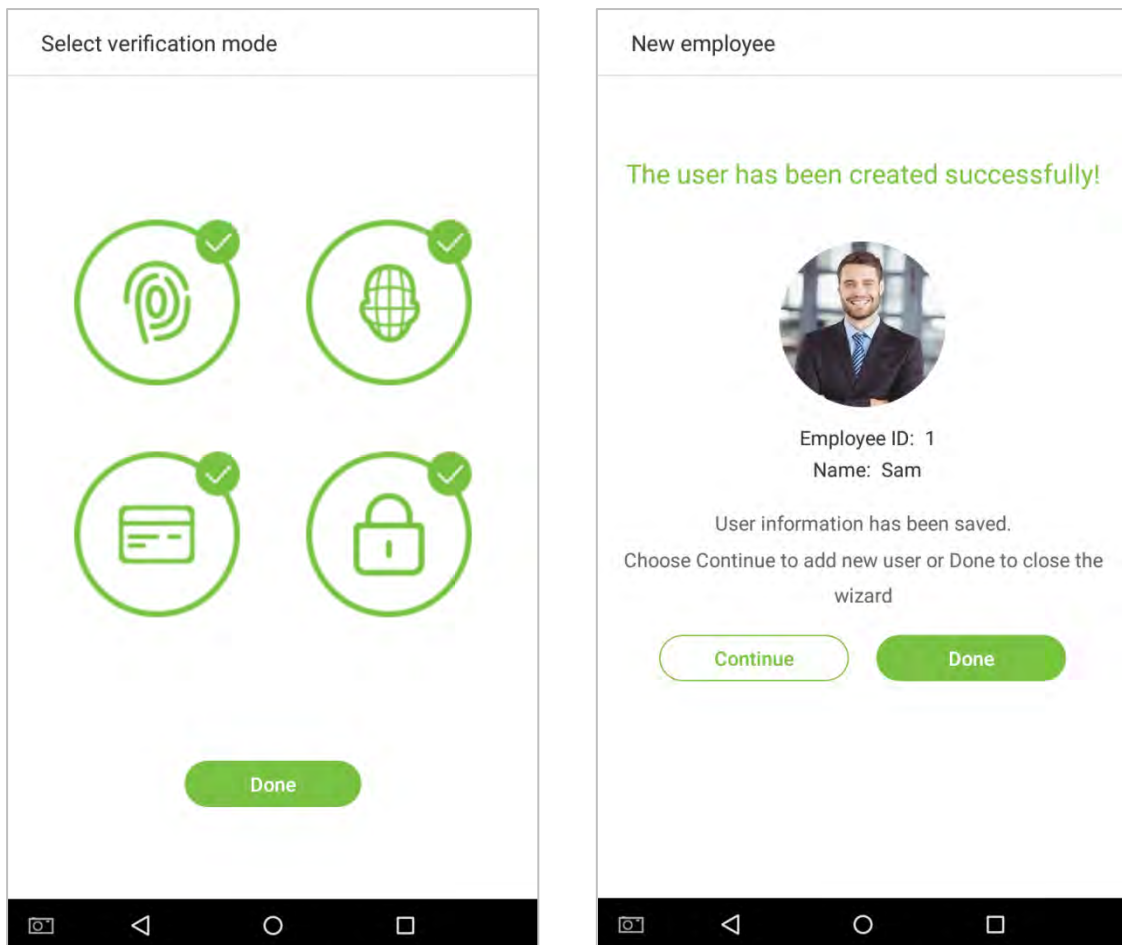


3.1.4 Permission Settings

Personnel who use this device have two types of permissions: normal employee and super administrator. After a super administrator is registered on the device, normal employees can only verify and compare their accounts using methods that have already been registered. Super administrator has the same privileges as normal employees, but can also enter the main menu.

1. On the [User Management] interface, tap on an employee in the employee list to visit the employee's information.

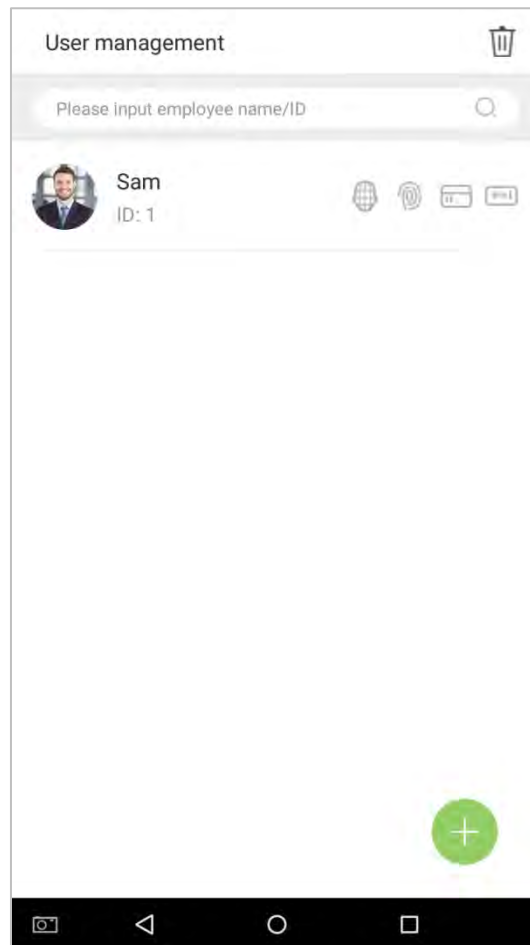

2. Once you have entered the “Employee information” interface, tap on the [Admin permission] column and select [Normal employee] or [Super administrator] in the window that appears.

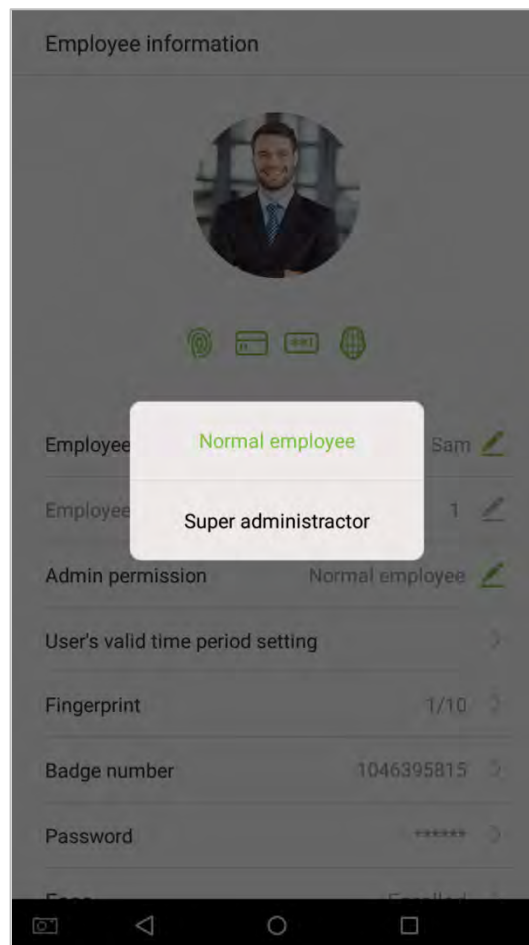


Note: When a user is given super administrator privileges, entering the main menu will require ID verification. The verification process depends on the verification method that was used during user registration. See the description in section “**1.5 Verification Methods**”.

3.1.5 Verification Mode Setting

To improve security, this device features combination verification modes, which can create a total of 21★ verification modes. Enter an applicable verification mode in this line.

1. Tap on the [Verification Mode] field on the “Employee information” interface.

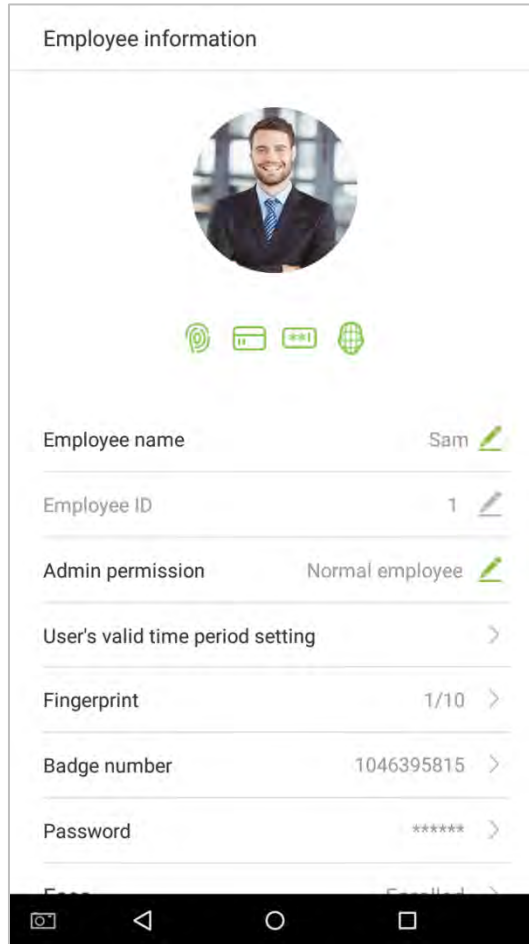

The screenshot displays the 'Employee information' interface. At the top, there is a header 'Employee information'. Below the header is a circular profile picture of a man in a suit. Underneath the picture are four green icons representing different verification methods: a fingerprint, a card, a PIN, and a globe. Below these icons are several fields for employee information, each with a label on the left and a value on the right, followed by an edit icon (a green pencil). The fields are: 'Employee name' with the value 'Sam', 'Employee ID' with the value '1', 'Admin permission' with the value 'Normal employee', 'User's valid time period setting' with a right arrow, 'Fingerprint' with the value '1/10' and a right arrow, 'Badge number' with the value '1046395815' and a right arrow, 'Password' with the value '*****' and a right arrow, and 'Face' with the value 'Enabled' and a right arrow. At the bottom of the screen is a black navigation bar with three white icons: a square, a circle, and a triangle.

Field	Value	Action
Employee name	Sam	Edit
Employee ID	1	Edit
Admin permission	Normal employee	Edit
User's valid time period setting	>	None
Fingerprint	1/10	Edit
Badge number	1046395815	Edit
Password	*****	Edit
Face	Enabled	Edit

2. Select [Verification Mode], and then select a verification mode.

Verification mode

- ☒ Fingerprint/Password/Badge/Face
- ☐ Fingerprint
- ☐ Employee ID
- ☐ Password
- ☐ Badge
- ☐ Fingerprint/Password
- ☐ Fingerprint/Badge
- ☐ Password/Badge
- ☐ Employee ID+Fingerprint
- ☐ Fingerprint+Password
- ☐ Fingerprint+Badge
- ☐ Fingerprint+Password+Badge
- ☐ Password+Badge
- ☐ Fingerprint+Employee ID+Password
- ☐ Fingerprint+(Badge+Employee ID)
- ☐ Face
- ☐ Face+Fingerprint

Verification mode

- ☐ Badge
- ☐ Fingerprint/Password
- ☐ Fingerprint/Badge
- ☐ Password/Badge
- ☐ Employee ID+Fingerprint
- ☐ Fingerprint+Password
- ☐ Fingerprint+Badge
- ☐ Fingerprint+Password+Badge
- ☐ Password+Badge
- ☐ Fingerprint+Employee ID+Password
- ☐ Fingerprint+(Badge+Employee ID)
- ☐ Face
- ☐ Face+Fingerprint
- ☐ Face+Password
- ☐ Face+Badge
- ☐ Face+Fingerprint+Badge
- ☐ Face+Fingerprint+Password

3. Return to the “Employee information” interface and it will display the verification mode you have chosen.

Employee information

Employee name Sam

Employee ID 1

Admin permission Normal employee

User's valid time period setting

Fingerprint 1/10

Badge number 1046395815

Password *****

Notes:

1. “/” means “or” and “+” means “and”.
2. Support 21★ different verification method combinations: fingerprint/ password/ badge/ face; fingerprint; employee ID; password; badge; fingerprint/ password; fingerprint/ badge; password/ badge; employee ID + fingerprint; fingerprint + password; fingerprint + badge; fingerprint + password + badge; password + badge; fingerprint + employee ID + password; fingerprint + (badge + employee ID); face; face + fingerprint; face + password; face + badge; face + fingerprint + badge; face + fingerprint + password.
3. Combined verification requires employees to register the information needed to complete verification. Otherwise, employees may be unable to complete the verification process. For instance, when employee A registers with his/her fingerprints and the system's verification method is set as “Fingerprint + Card”, the employee will not be able to complete the verification process.

3.1.6 Access level★


User access level sets the door unlocking rights of each person, including the access control settings of the group that the user belongs to and the available time zones.

User access level

Access group	1	
Time zone		

- **Access group**

You may assign the registered users to different groups for better management. New users belong to Group 1 by default, and can be reassigned to other groups. The device supports up to 99 access control groups.

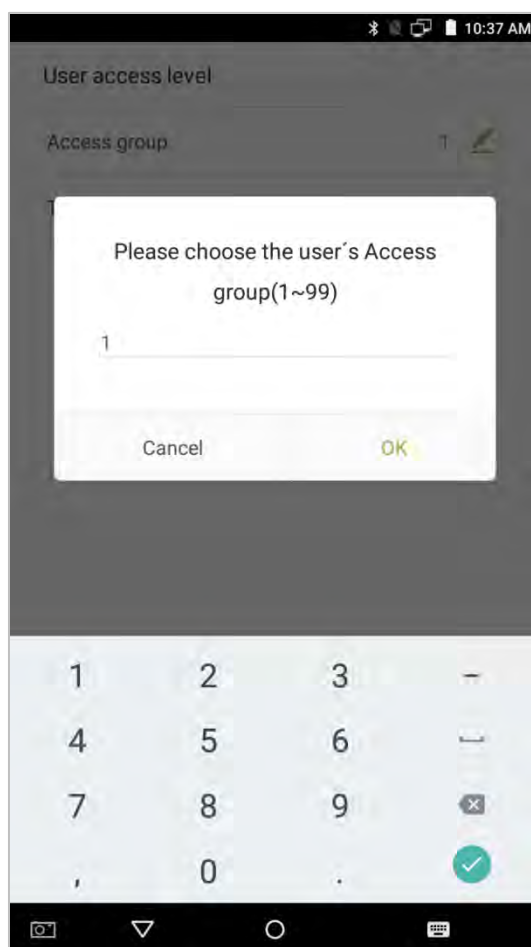

- **Time zone**

Select whether to use the time zone of access for the user. Users follow the settings of their groups by default. If the same time period is not applied, the access time of the specific user should be set. Such arrangement will not affect the time period settings of other group members.


Time zone

- ☒ Time zone1
- ☐ Time zone2
- ☐ Time zone3
- ☐ Time zone4
- ☐ Time zone5
- ☐ Time zone6
- ☐ Time zone7
- ☐ Time zone8
- ☐ Time zone9
- ☐ Time zone10
- ☐ Time zone11
- ☐ Time zone12


Note: A total of 50 time zones can be set. For details, please see section [5.2 "Time rule setting"](#).

3.2 Searching for an Employee

1. Tap on the search bar located on the [User Management] interface and enter a search query (Note: search for users based on their personnel IDs, surnames, or given names).

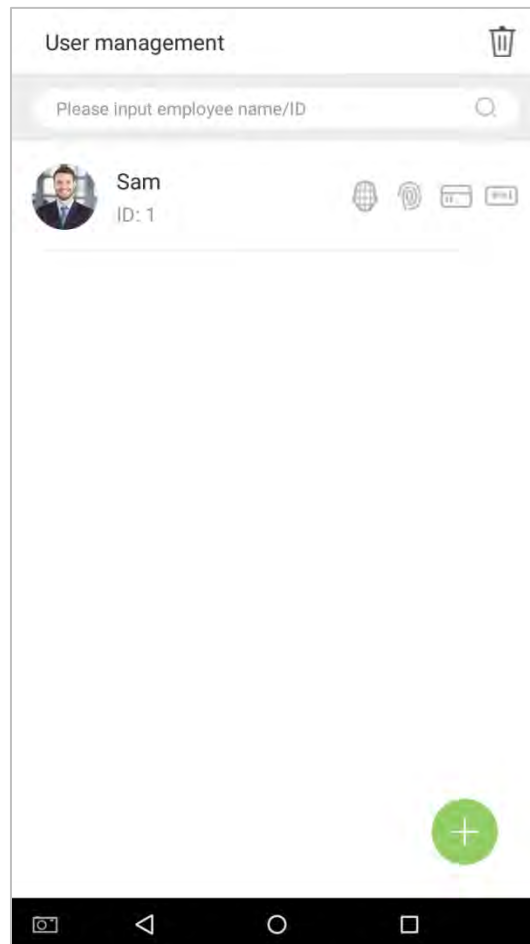


- 2. Automatically finds employees with information that is relevant to the search query.

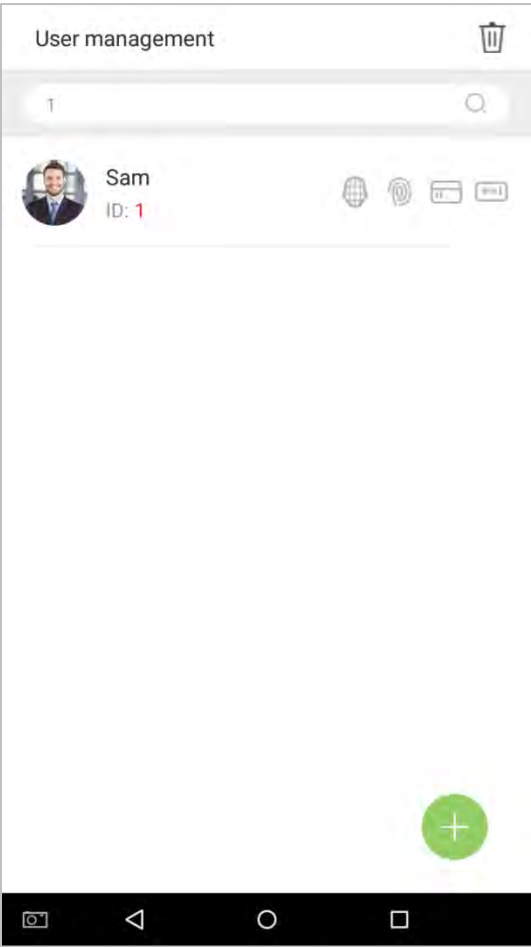

3.3 Edit an Employee

1. Select an employee on the employee list.

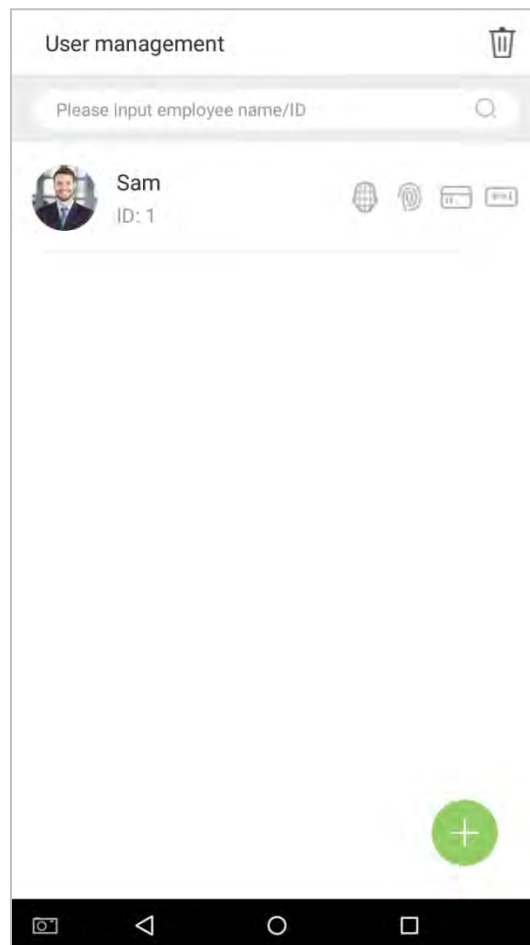

2. Enter the interface where users may edit the employee information.

Employee information





Employee name

Sam

Employee ID

1

Admin permission

Normal employee

User's valid time period setting

Fingerprint

1/10

Badge number

1046395815


Password

Email


Note: Unless an employee ID cannot be modified, other operations are similar to adding a new employee and will not be discussed here. For further information, please see section **“3.1 Add an Employee”**.

3.4 Delete Employee


1. On the “User Management” interface, tap on the  button in the upper right corner.

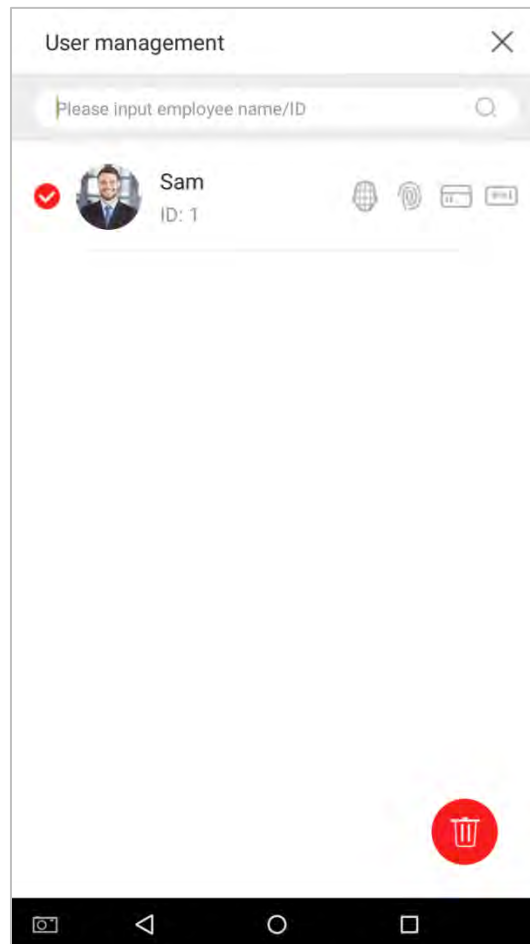

2. Select the employee who you would like to delete, tap on the  button in the lower right corner and a window will pop up. Decide whether or not to check the box next to [Delete attendance log at the same time], tap on [OK] (this option can be checked or left un-checked based on your requirements).

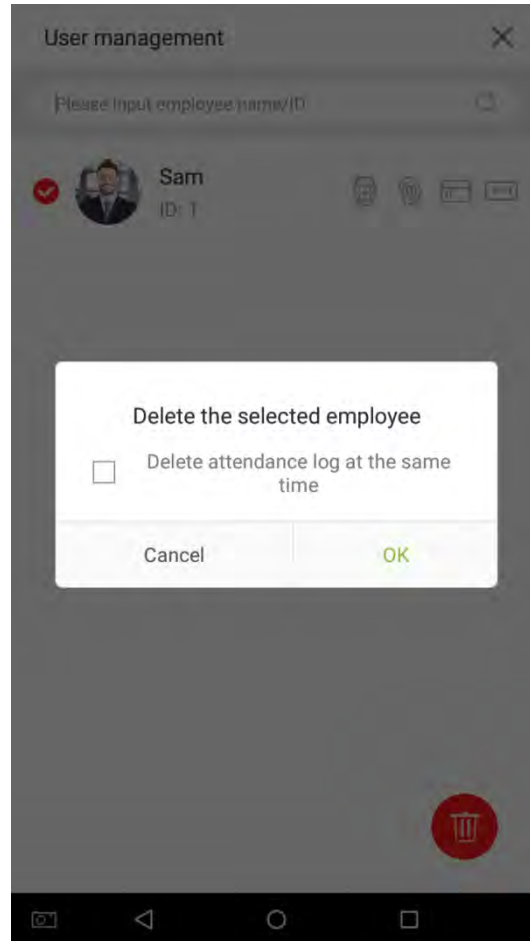

3. The employee now has been deleted and will no longer appear.

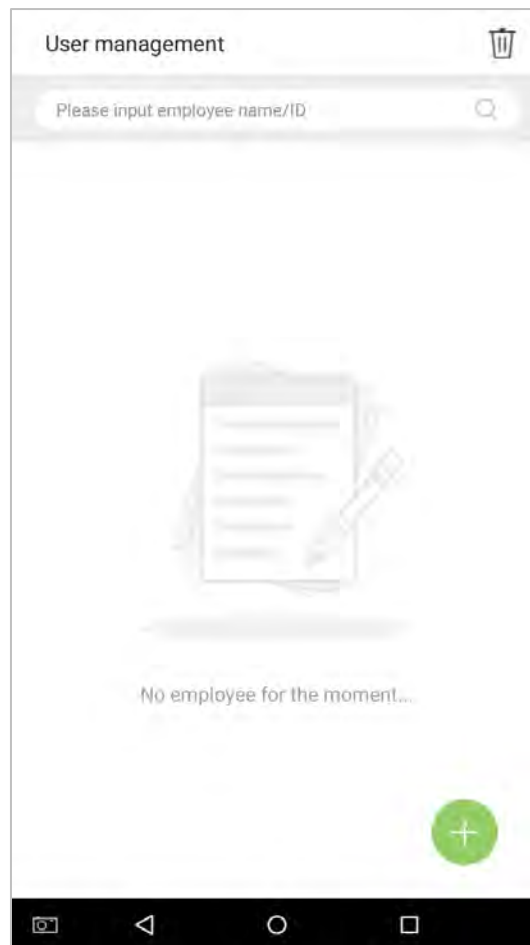

Note: If [Delete Employee] is selected, all of this employee's related information will be cleared.


4. Attendance Events★

Attendance events are used to record clock-in/out status. There are 6 default attendance statuses, including clock in, clock out, break out, break in, overtime in, overtime out. The 6 default statuses cannot be deleted or modified.


4.1 Add Attendance Events

Tap on [Attendance Events] in the main menu:

1. On the “Attendance Events” interface, tap on  to enter the “Attendance Event” interface.

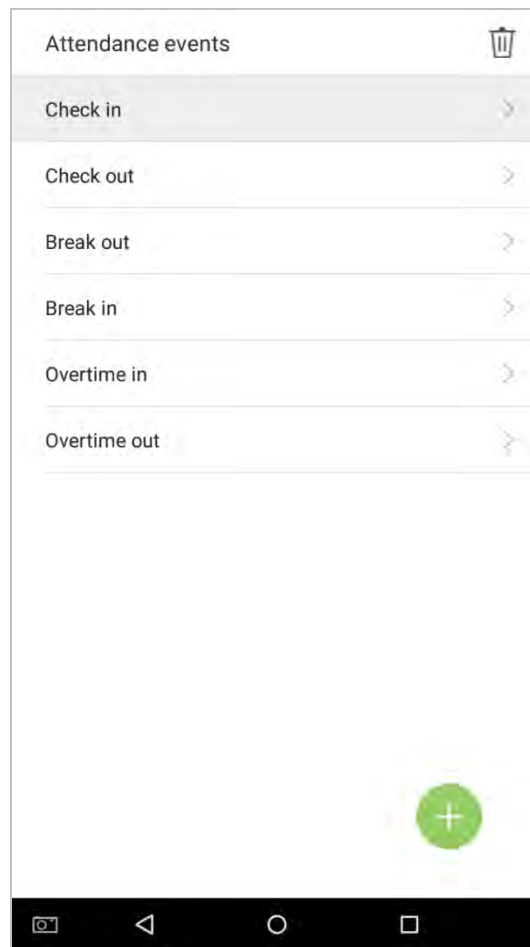

2. In the attendance event creation wizard, tap on [Start].

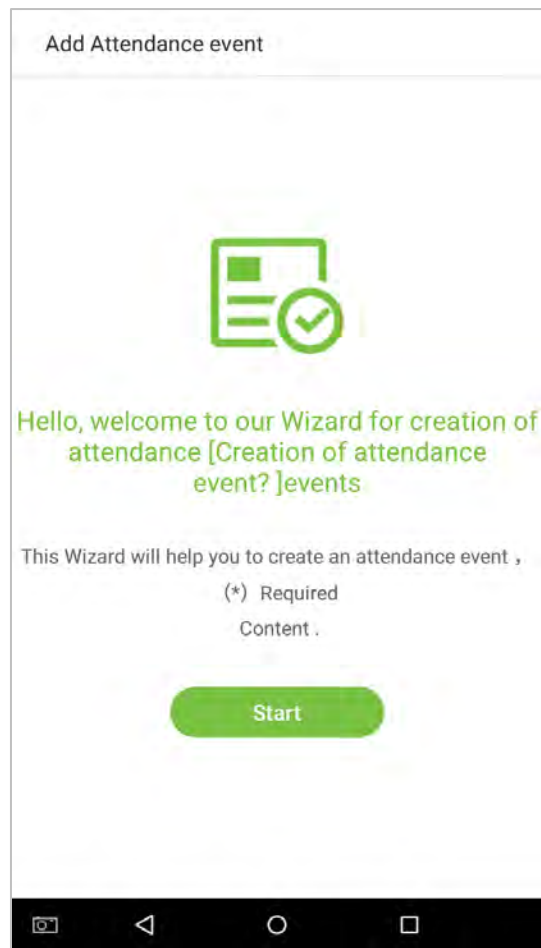

3. Enter the [Name] and [Status Value] of the new attendance event. Tap on the right arrow (note: maximum length of the name is 24 characters; status values must be unique and cannot be duplicated. The value ranges from 6 to 250.)

The screenshot shows a mobile application interface for adding an attendance event. At the top, there is a title bar labeled "Add Attendance event". Below the title bar, there are two input fields. The first field is labeled "Please input name" and has a red asterisk (*) to its right, indicating it is a required field. The second field is labeled "Please input the status value(6~250)" and also has a red asterisk (*) to its right. Below the input fields, there are two buttons: a "Back" button with a green border and a "Next" button with a solid green background. At the bottom of the screen, there is a black navigation bar with standard Android icons: a square, a circle, and a triangle.

If the input status value is a duplicate or exceeds the permitted range, the following message will appear:

Add Attendance event

holiday

*

1


*

(The range of status value is error, please try again)

Back


Next

4. Successfully created.

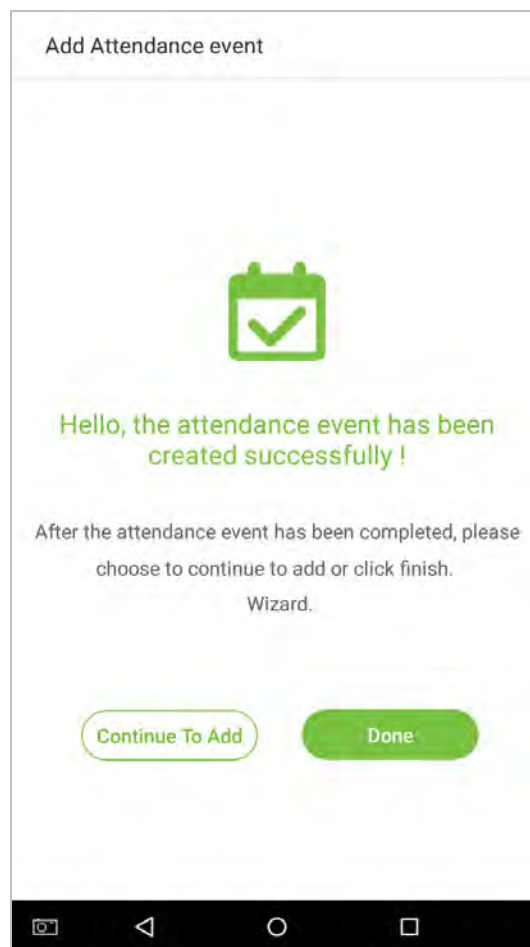

4.2 Edit Attendance Events

- 1. Select an employee attendance event.

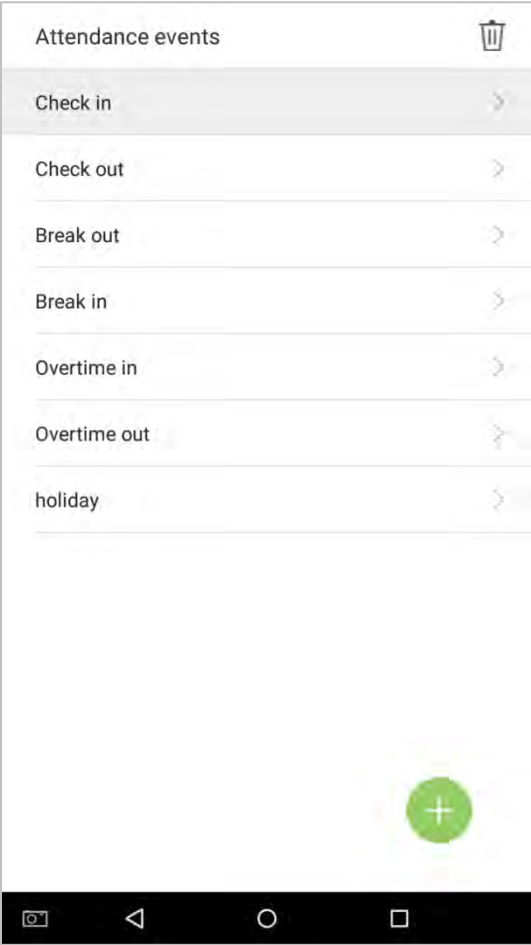

3. Tap on [Name] or [Status Value] to edit (note: the first 6 attendance events cannot be edited; status values must be unique and cannot be duplicated)

Event details



Name

holiday


Status value

6


This operation is similar to adding a new event and will not be described here. For further information, see section "**4.1 Add Attendance Events**".

4.3 Delete Attendance Events


1. Tap on the  icon in the upper right corner and select an attendance event (Note: the first 6 events cannot be deleted, so the delete button will not appear).

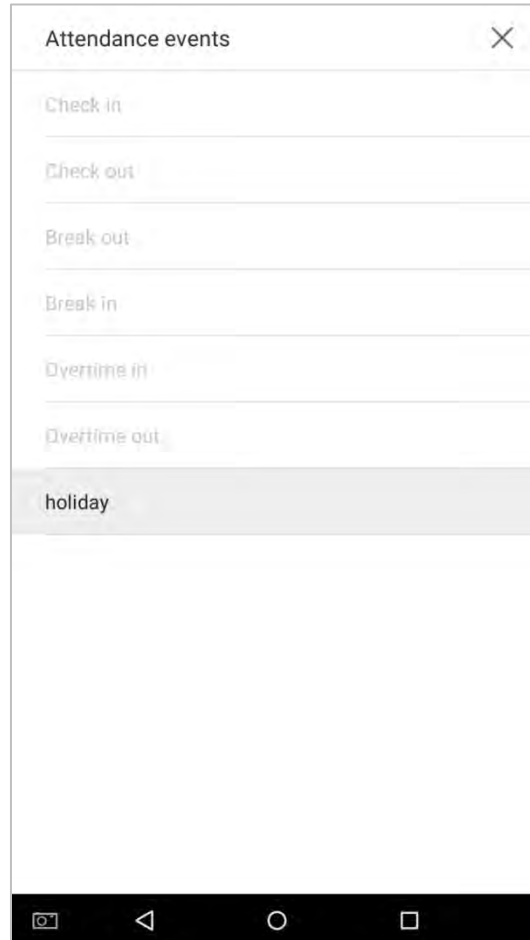

2. A window will appear. Tap on [OK].

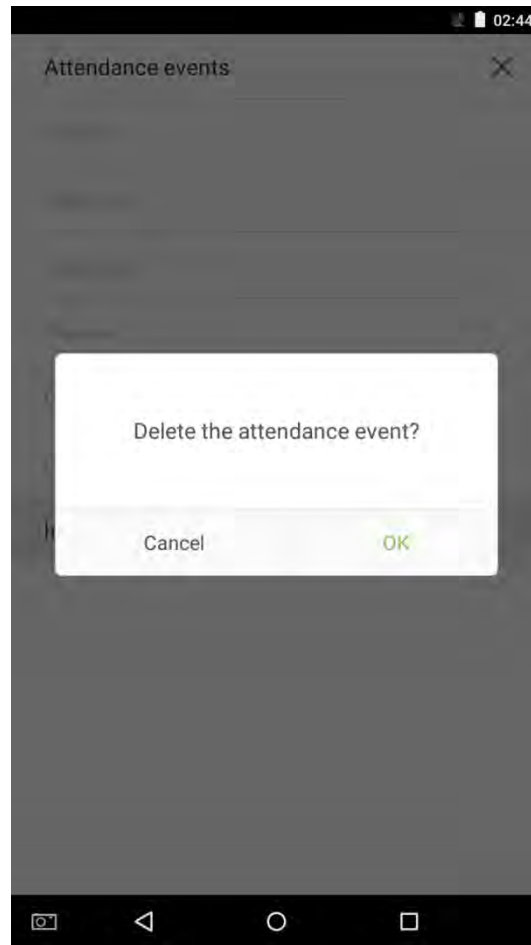

3. The event is now deleted and will not appear on the list.

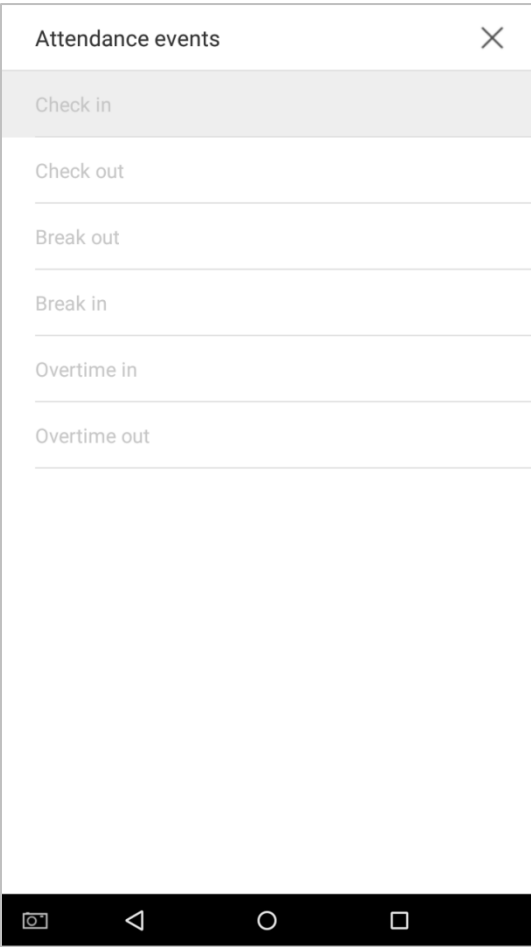


5. Access Settings


5.1 Access control parameters

The access management allows users to set access parameters.

Tap on [Access Settings] in the main menu.

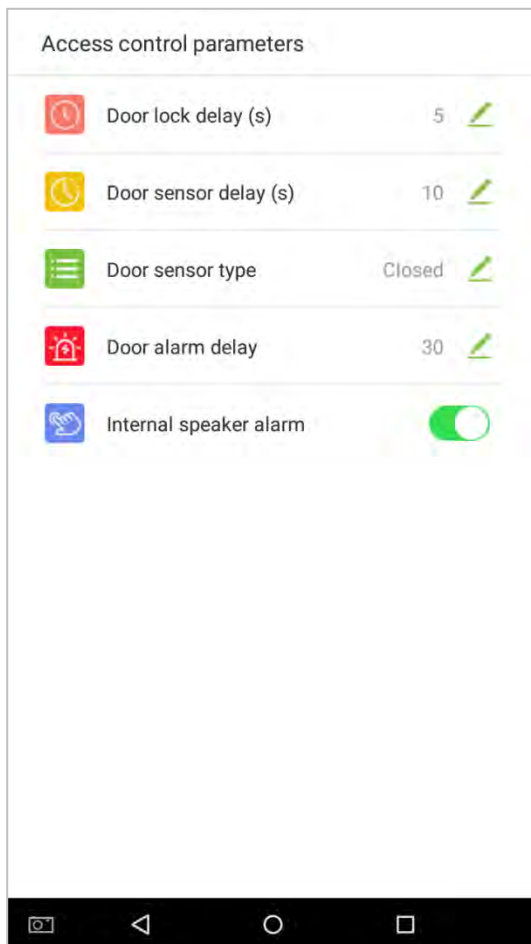

Attendance device

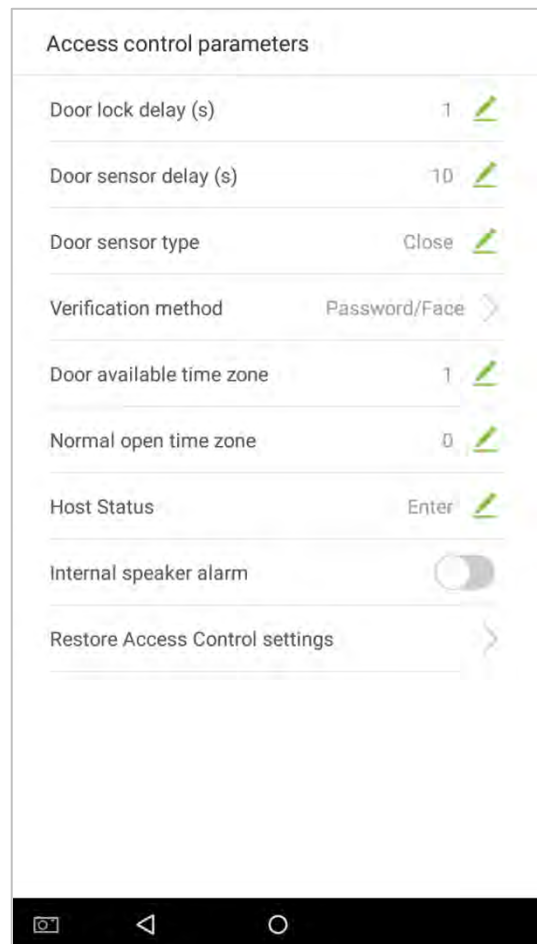

Access device

Menu Options	Function Description
Door lock delay	When the door opens, the lock begins to count down. When the time is over, the lock will close.
Door sensor delay	When the door opens, the door delay timer starts counting down. When the countdown is completed, the system will send an alarm signal from the local, then the door sensor delay timer will continue to be effective.
Door sensor type	There are different types of door sensors. Subject to different locations, the status value of the door sensor is different; the value of the magnetic door in the “always open” mode is the opposite of that in the “always close” mode.
Verification method★	Select verification mode to open door.
Door alarm delay★	When the door delay ends and the status of the door is not “closed”, the door alarm delay timer will start counting down. When the countdown is completed and the status is still not “closed”, an external alarm signal will be transmitted and output to relay.
Door available time zone★	To set time zone for door, so that the door is available only during this.
Normal open time zone★	To set time zone for Normally Open, so that the door is always unlocked during this time zone.
Host status★	When setting up the master and slave, the status of the master can be set to exit on enter. Exit: The record verified on the host is the exit record. Enter: The record verified on the host is the entry record.
Internal speaker alarm	To transmit a sound alarm signal from the local, then send an unpack alarm signal. When the door is closed, the system will cancel the alarm from the local. After the signal is successfully confirmed, the alarm will be cancelled from the local.
Restore Access Control settings★	To reset parameters of Access Control settings.

Note: Registered employees need to fulfill certain conditions before unlocking the system, which means that the current unlock time should be within the effective time period, or the door cannot be opened.

5.2 Time rule setting★

Time Rule is the minimum time unit of access control settings; at most 50 **Time Rule** can be set for the system. Each **Time Rule** consists of 7 time sections (a week) and 3 holiday time schedules, and each time section is the valid time within 24 hrs.

You may set a maximum of 3 time periods for every time rule. The relationship among these time periods is "or". When the verification time falls in any one of these time periods, the verification is valid. The time period format is HH:MM-HH:MM in the 24-hour system with precision to minute.

Time rule(2/50)

Please enter the time rule number (2~50) 

Sunday	00:00 23:59	00:00 23:59	00:00 23:59	>
Monday	00:00 23:59	00:00 23:59	00:00 23:59	>
Tuesday	00:00 23:59	00:00 23:59	00:00 23:59	>
Wednesday	00:00 23:59	00:00 23:59	00:00 23:59	>
Thursday	00:00 23:59	00:00 23:59	00:00 23:59	>
Friday	00:00 23:59	00:00 23:59	00:00 23:59	>
Saturday	00:00 23:59	00:00 23:59	00:00 23:59	>
Holiday 1	00:00 23:59	00:00 23:59	00:00 23:59	>
Holiday 2	00:00 23:59	00:00 23:59	00:00 23:59	>
Holiday 3	00:00 23:59	00:00 23:59	00:00 23:59	>



1. Enter the number of time rule (maximum: 50 rules) in the search bar.

Time rule(3/50)

3

Sunday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Monday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Tuesday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Wednesday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Thursday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Friday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Saturday	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Holiday 1	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Holiday 2	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>
Holiday 3	{00:00 23:59}	{00:00 23:59}	{00:00 23:59}	>

2. Tap the date on which time rule settings is required.

Time setting	
Time zone1	00:00 23:59 >
Time zone2	00:00 23:59 >
Time zone3	00:00 23:59 >

3. Set the starting and ending time, and then press [OK].


Notes:

1. When the ending time is earlier than the starting time, such as 23:57~23:56, it indicates that access is prohibited all day; when the ending time is later than the starting time, such as 00:00~23:59, it indicates that the interval is valid.
2. The effective time period to unlock the door: open all day (00:00~23:59) or when the ending time is later than the starting time, such as 08:00~23:59.
3. The default time zone 1 indicates that door is open all day long, it can't be edited.

5.3 Holiday setting★

Whenever there is a holiday, you may need a special access time; but changing everyone's access time one by one is extremely cumbersome, so you can set a holiday access time which is applicable to all employees, and the user will be able to open the door during the holidays. The time period set here is taken as the standard.

1. Tap on  on the [Holiday setting] interface to enter Add new holiday wizard.

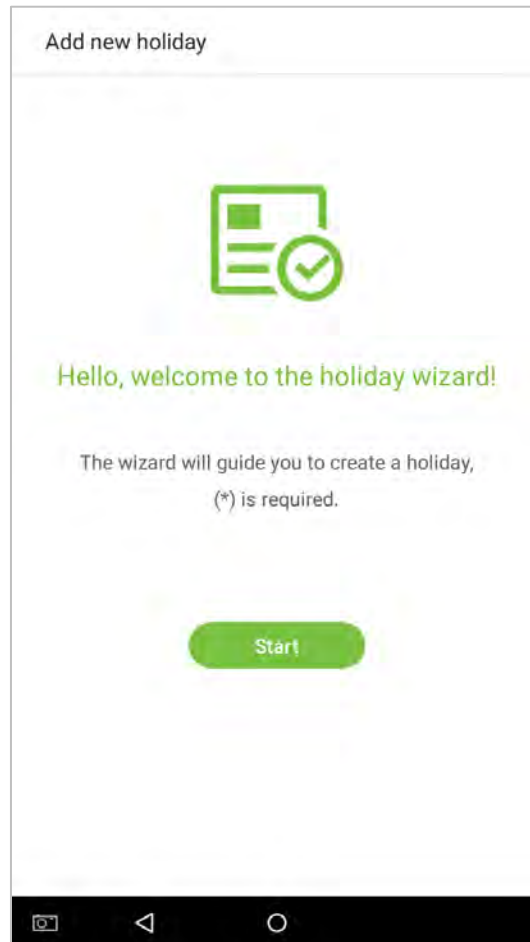

2. Select a date and type of the holiday. Enable [Recurring holiday] to recur the holiday yearly.

Add new holiday

Please select a date


Type of Holiday

Recurring holiday

Back

Next


3. Click [Done], a new holiday is created successfully.

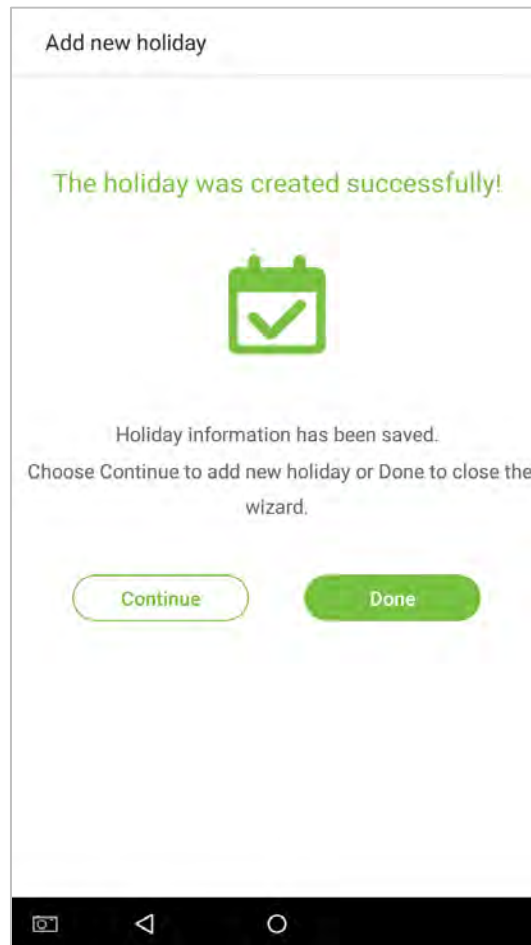



3. Select an employee on the employee list.

- **Delete a holiday**

1. On the "Holiday period" interface, tap on the  button in the upper right corner.

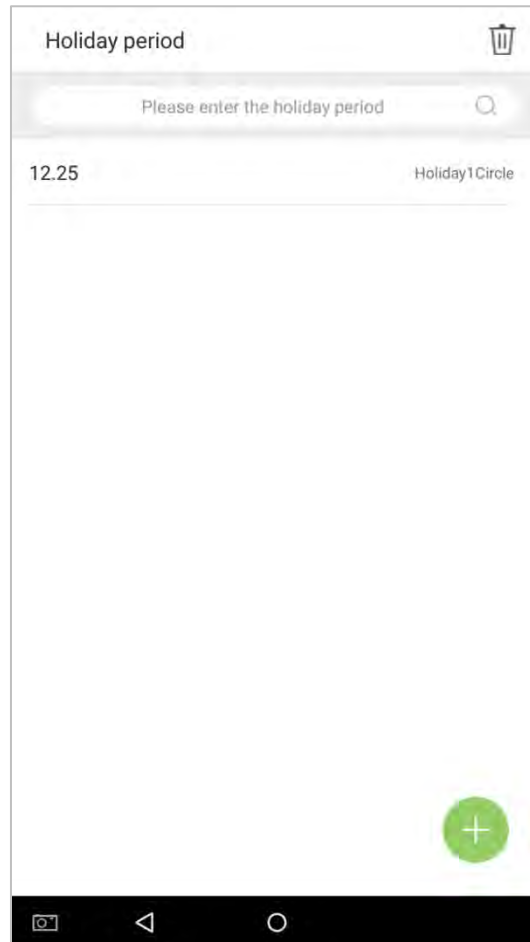

2. Select the holiday which you would like to delete, tap on the  button in the lower right corner and a window will pop up.

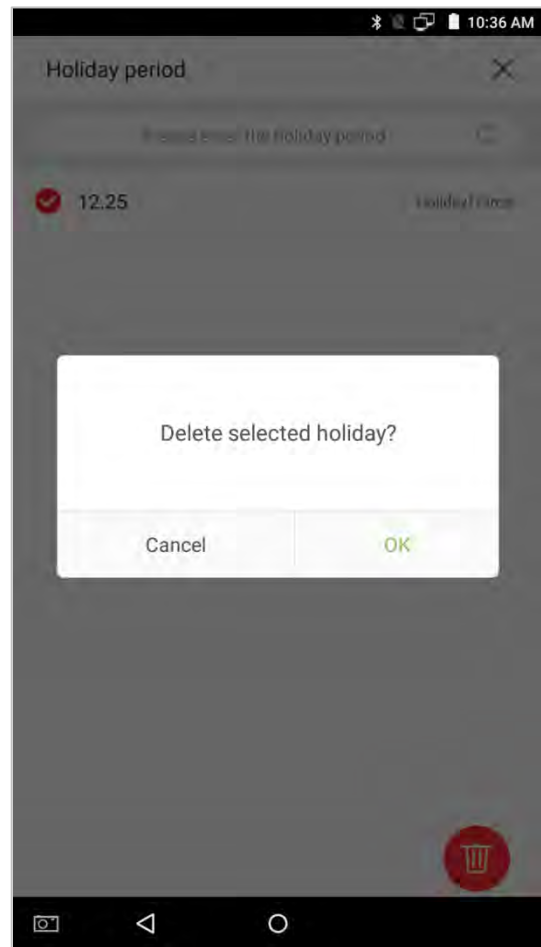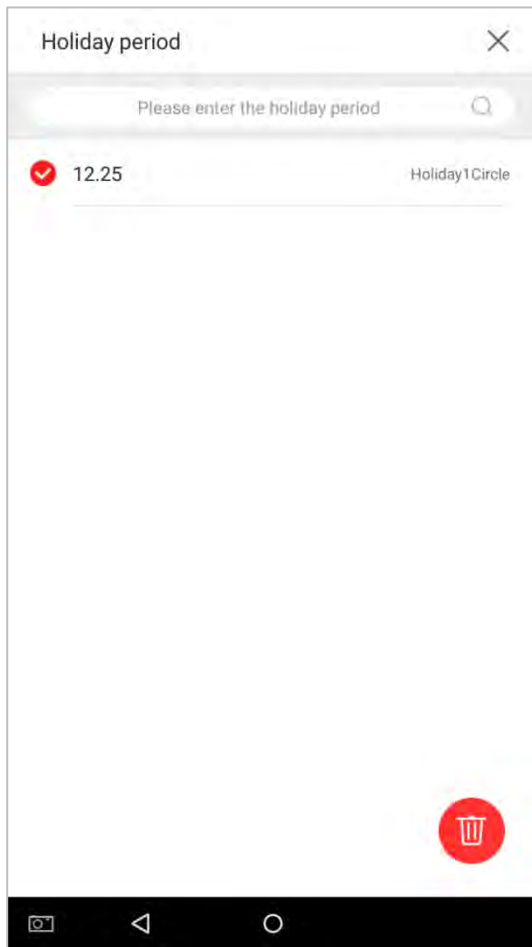


6. Log★


Employee attendance records will be saved in the device, making it easier to find employees' attendance records. Users can search for ATT Logs, ATT Photos, and Blacklist Photos. Searches support retrieval queries, date queries, or a combination of the two.

6.1 Search for Attendance Records


1. Tap on [Log] in the main menu, then the following interface of work record history will pop up.

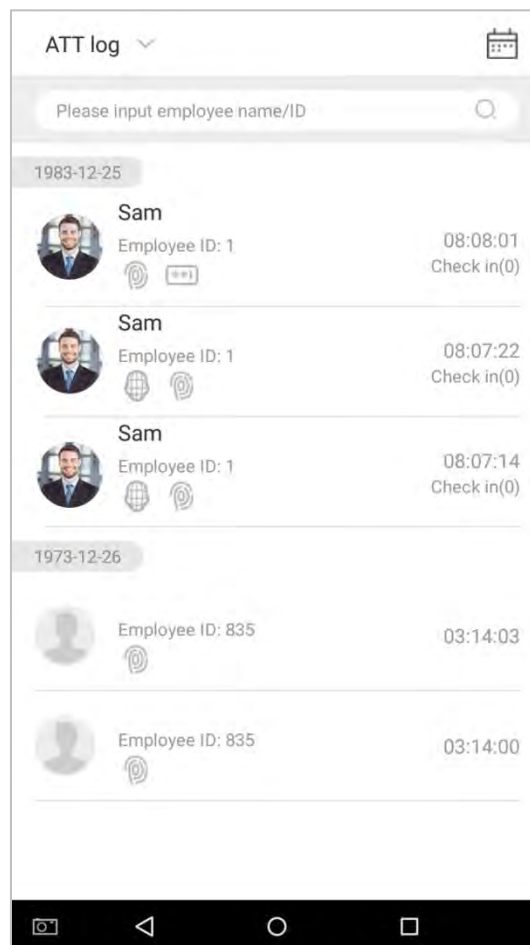


2. Enter information such as the employee ID, first or last name of an employee in the search bar.

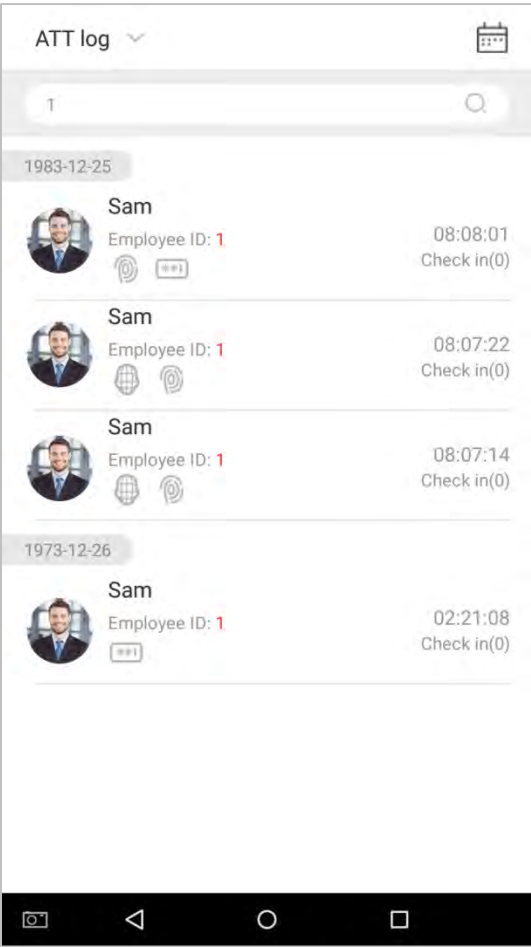

3. Automatically finds the employees with information that is relevant to the search query.

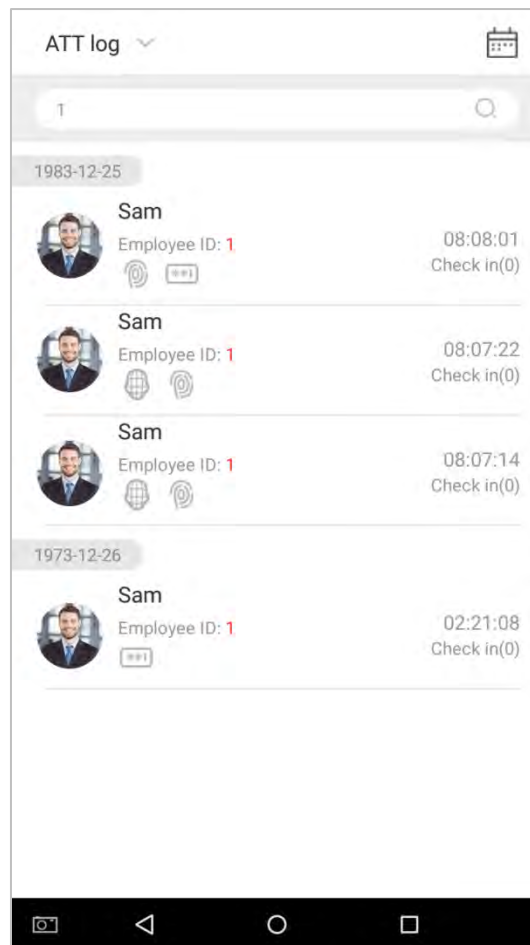

4. Tap on the  button to access the following window where you can select the [Starting Date] and [Ending Date]. Tap on [OK].

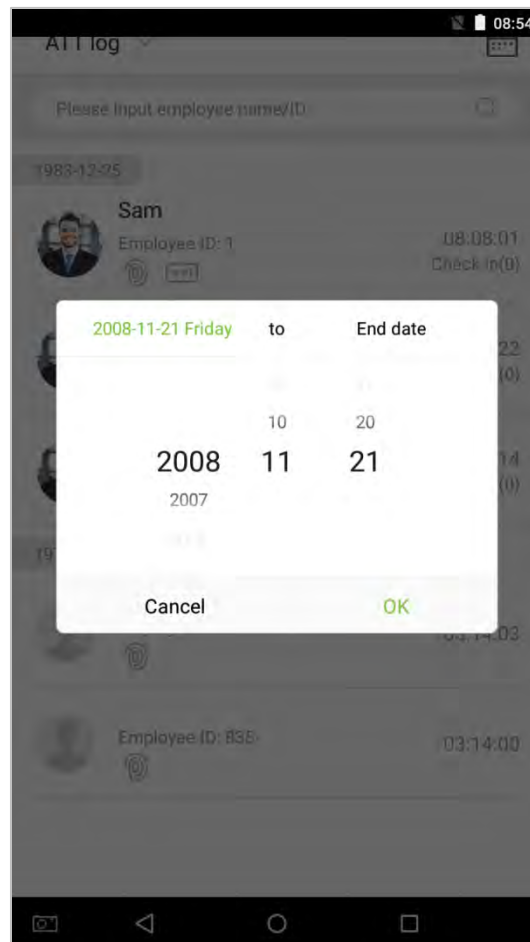

5. Show search results.

6.2 Search for Attendance Photos

The query operation supports search bar queries, date queries, and combined search bar + date queries.


1. Tap on the drop-down button in attendance logs and select [Employee Photo].



2. Enter the Employee photos interface.




3. Enter search information interface, namely, the personnel ID, in the search bar, the system will then automatically search for the employee with the corresponding personnel ID.
4. Tap on  and a window will pop up. Select the [Starting Date] and [Ending Date].

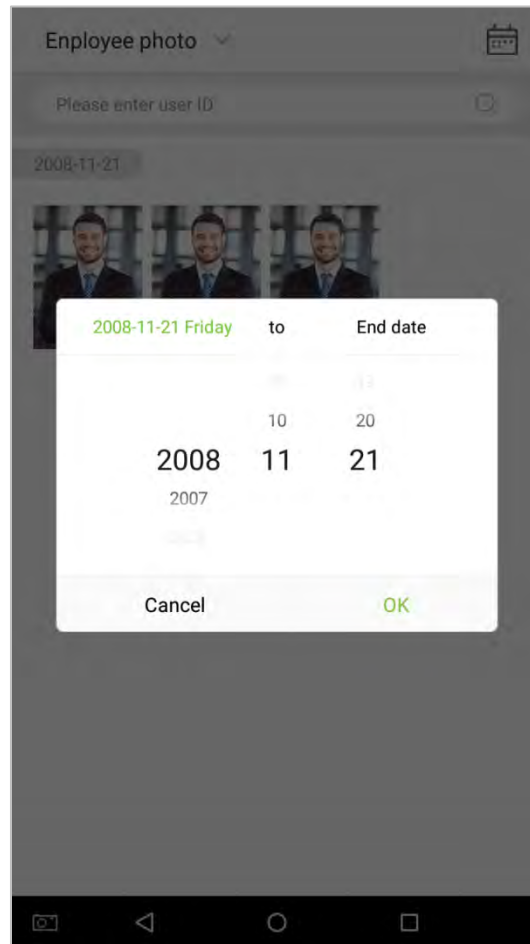

5. Show search results.



6. Tap on an attendance photo to view that photo's details.

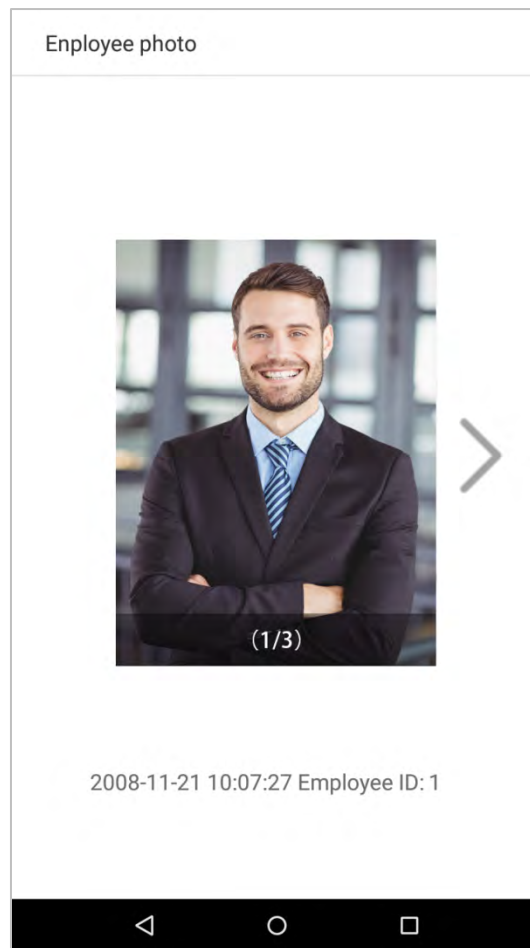


6.3 Search for Blacklist Photos

To conduct a blacklist photo query, follow the same steps required to complete an employee photo query. For exact operation details, see section **"6.2 Search for Attendance Photos"**.

7. Data Management

Manage the device's data, including Delete attendance log, Delete attendance photo, Delete blacklist photo, Delete all data, Delete admin permission, Delete user photo, and Delete wallpaper.

Tap on [Data Management] in the main menu.

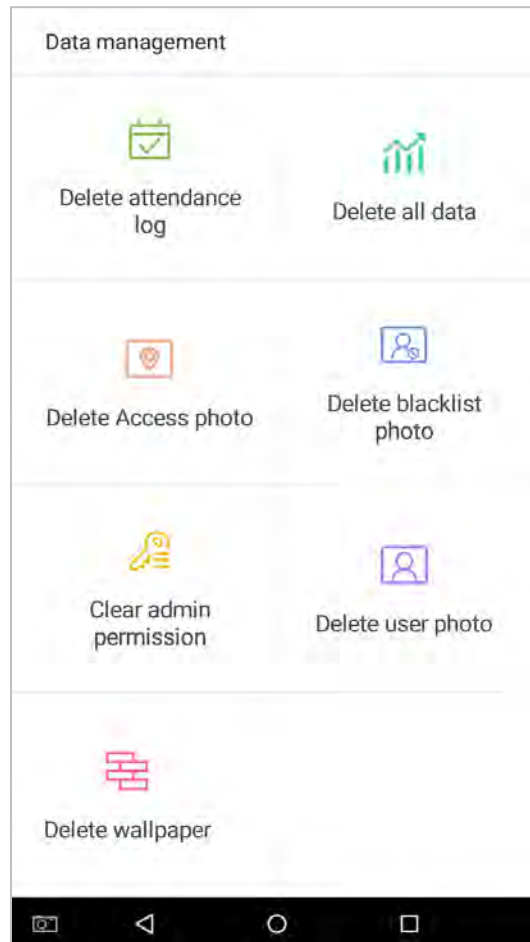


Menu Options	Function Description
Delete attendance log	1. Delete all; 2. Delete invalid user accounts (deleting the account will not delete the attendance log); 3. Delete the attendance logs within a specified time range.
Delete all data	Delete business data stored in the terminal device, including attendance logs, attendance pictures, blacklist pictures, fingerprint/ facial biometric data, privileges of the super admin, employee photos, wallpaper, employee data, work codes and access control data.
Delete access photo	1. Delete all; 2. Delete invalid user accounts; 3. Delete the attendance photos within a specified time range.
Delete blacklist photo	1. Delete all (including attendance records and the photos of the employee in blacklist); 2. Delete the blacklist photos, together with the attendance records, within a specified time range.

Delete admin permission	Turn the super administrator into a general employee.
Delete user photo	Delete all employee photos.
Delete wallpaper	Delete all wallpapers stored in the device.

8. USB Disk Management★

Use a USB drive to import the system's employee information, fingerprint template, or attendance data into the accompanying attendance software for processing, or import employee information and fingerprints onto another fingerprint device for use. Before uploading or downloading using a USB drive, plug the USB drive into the device's USB port, then conduct each operation.

On the USB disk management interface, tap on the [USB disk upload] field:

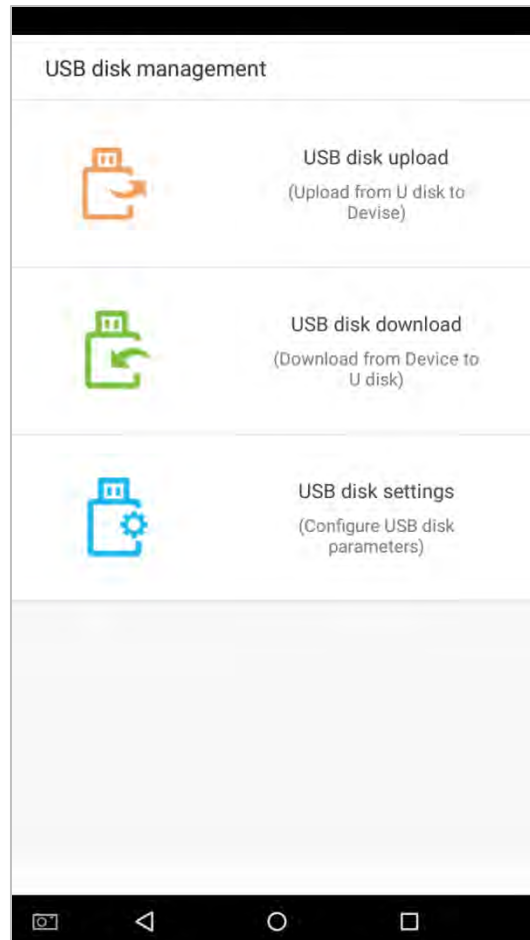

8.1 Upload to USB Drive

On the USB disk management interface, tap on the [USB disk upload] field:

Menu Options	Function Description
Upload Employee Data	Upload employee information, fingerprint templates, facial templates from a USB drive to the device.
Upload Employee Photo	Upload a JPG photo that is named with a personnel ID from a USB drive to the device. Each photo may not exceed 250k, otherwise the system will remind the user that the uploading is failed.
Upload Work Code	Upload work codes from a USB drive to the device.
Upload Wallpapers	Upload all JPG pictures from a USB drive to the device.

8.2 Download to a USB Drive

On the USB disk management interface, tap on the [USB Disk Upload] field.

Menu Options	Function Description
Download ATT Data	Save the attendance data within the specified time range (all, this week, last week, this month, user-defined) onto the USB drive. If there is no data, there will be no prompt.
Download Employee Data	Download all the user information, fingerprint and facial biometric data and stored them in the USB drive.
Download Employee Photo	Copy JPG pictures to the USB.
Download ATT Photo	Copy attendance pictures stored in the device to the USB drive. The format of the picture is JPG.
Download Blacklist Photo	Download the blacklist photos within the specified time range (all, the current week, last week, the current month, last month, user-defined).

8.3 USB Disk Settings

On the USB drive management interface, tap on the [Settings] field:

Menu Options	Function Description
Encrypt ATT Data	Encrypt employee attendance logs while downloading or uploading.
Delete Attendance Logs after Successfully Downloading	After attendance logs have been successfully copied to the USB drive, the logs stored on the device will be deleted.

9. Alarm Management★

Employees can set an alarm time according to their needs. Once an alarm has been set, the device will automatically begin playing a preselected ringtone when the designated time is reached. It will stop ringing after the alarm time has elapsed.

9.1 Add Alarms

In the main menu, tap on [Alarm Management]:

1. On the alarm management interface, tap on  to enter the “Add Alarms” page.



2. Set Time-- select [Hour] and [Minute].

Alarm Management

Save

01

47

02 : 48

03

49


Duplicate

Only once >


Bell

Default bell >


3. Duplicate-- the default is set to "Only once". To copy the settings, tap on the [Duplicate] button and a window will pop up. Select the date and tap on [OK].

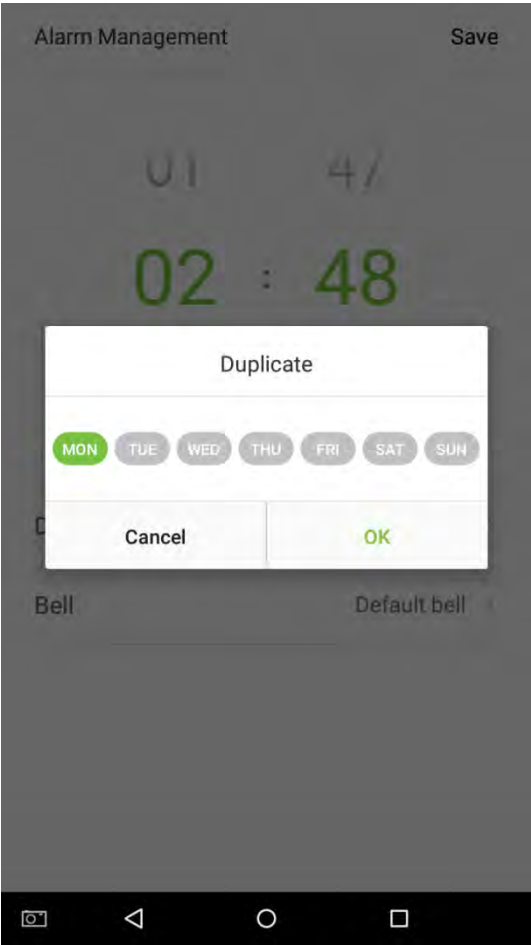

4. Tap on the [Bell] button and a window will pop up. Select a ringtone and tap on [OK].

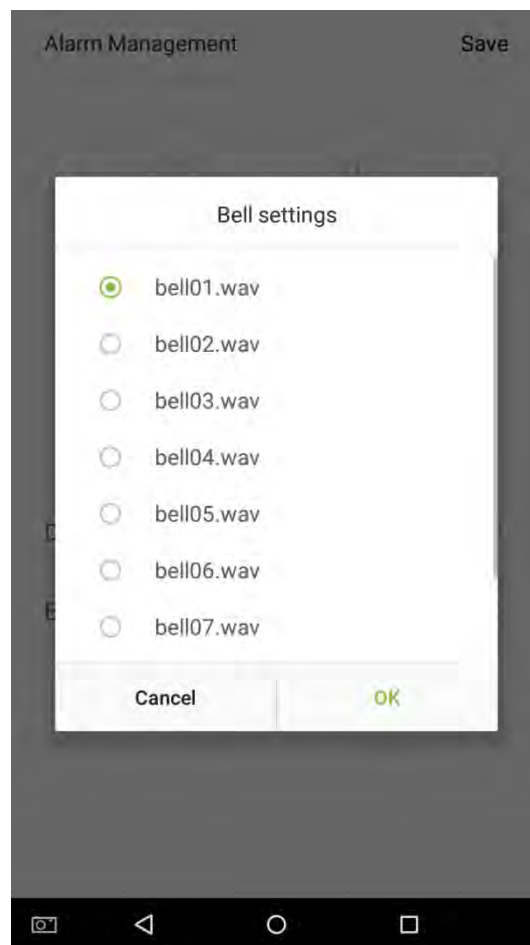


5. Tap on the [Save] key and the alarm will be successfully added. The alarm will be enabled by default.

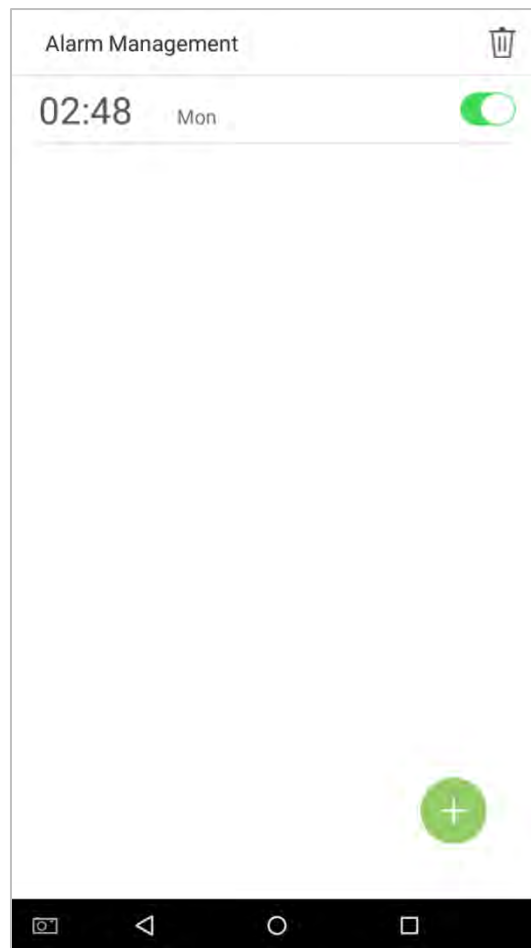

6. Enable [Alarm Switch] to change the alarm's status. Green indicates that the alarm is on, while gray indicates that the alarm is off.

9.2 Edit Alarms

1. Select an alarm from the alarm list.

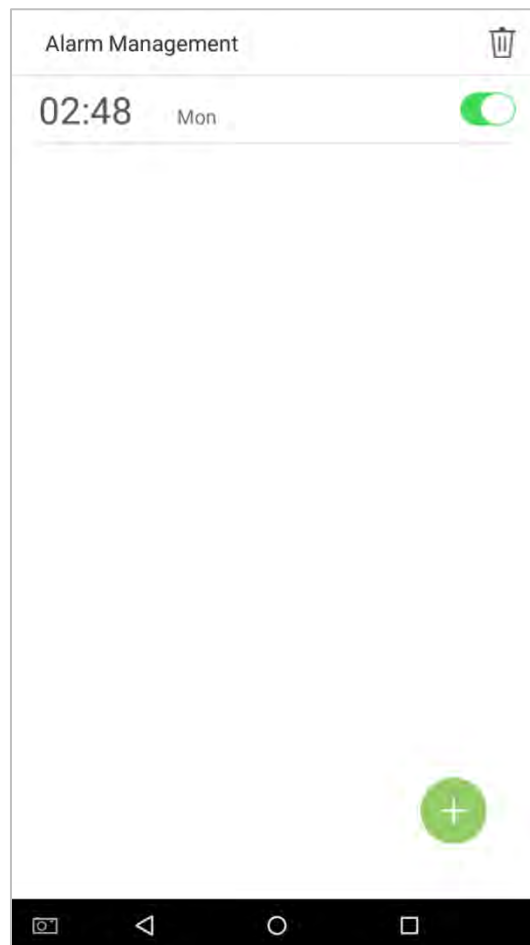

2. Enter the alarm editing interface.

Alarm Management

Save

01

47

02 : 48

03

49

Duplicate

Mon >


Bell

Default bell >


This operation is similar to adding a new event and will not be described here. See section **“9.1 Add Alarms”** for more details.

9.3 Delete Alarms


1. On the Alarm Management interface, tap on the  button on the upper right corner.

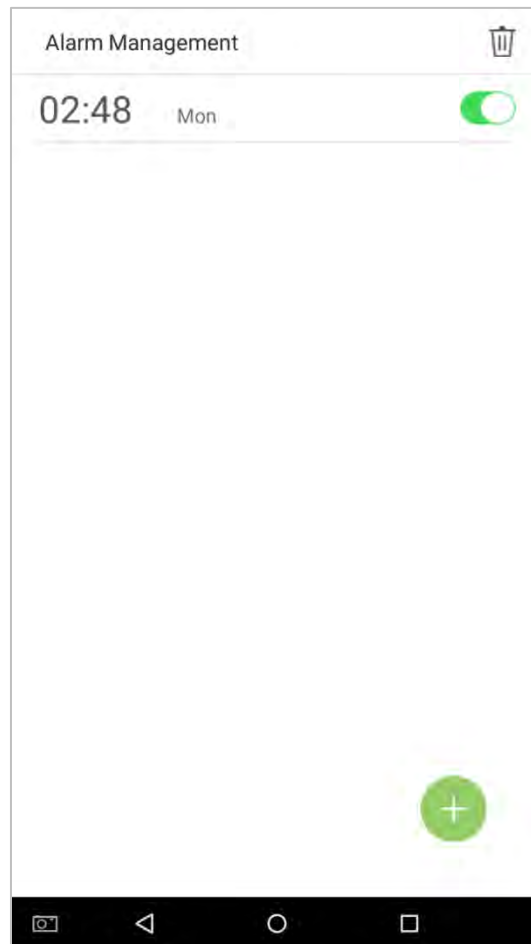

2. Select the alarm that you would like to delete, and then tap on the  button on the lower right-hand corner.

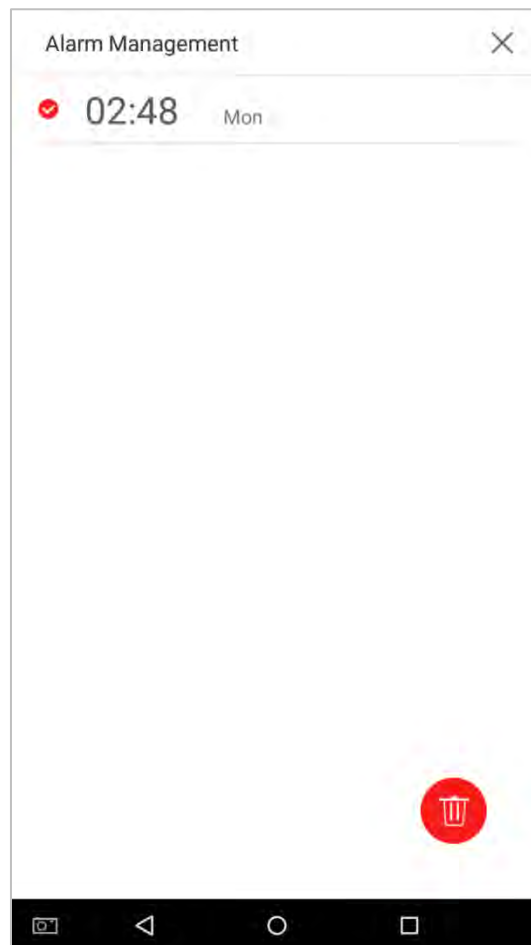

3. A window will appear. Tap on [OK].

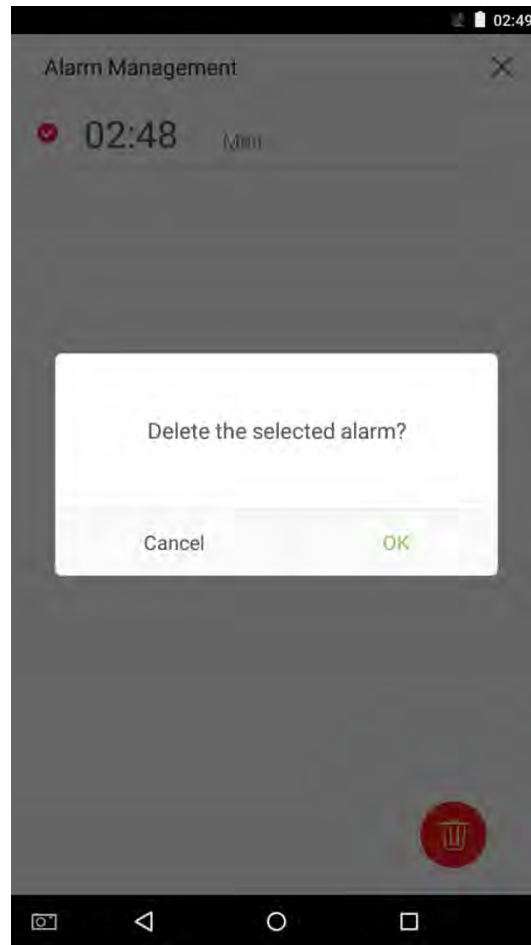


4. The event is now deleted and will not appear on the list.



10. System Settings


Set system parameters to maximize the device's ability to meet the needs of employees.

In the main menu, tap on [System Settings]:

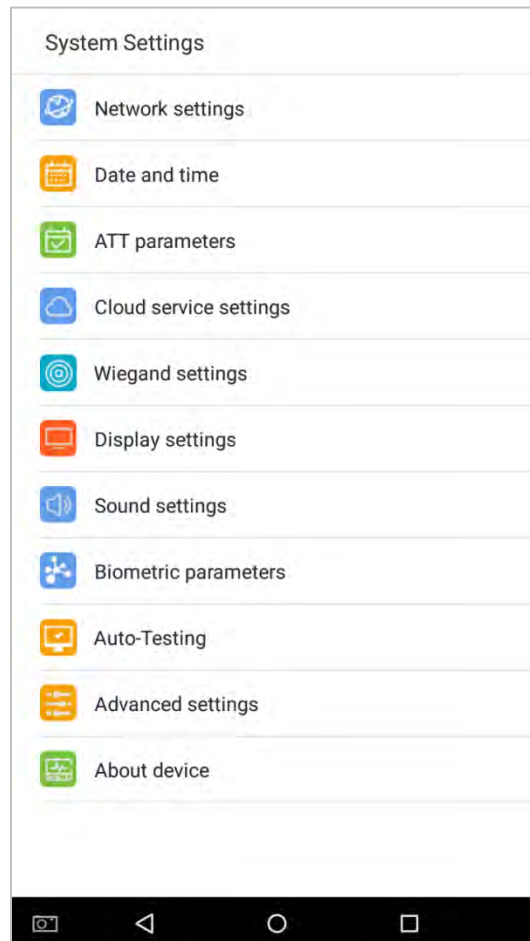

10.1 Network Settings

On the system settings list, tap on [Network settings] to enter the Network Settings interface:

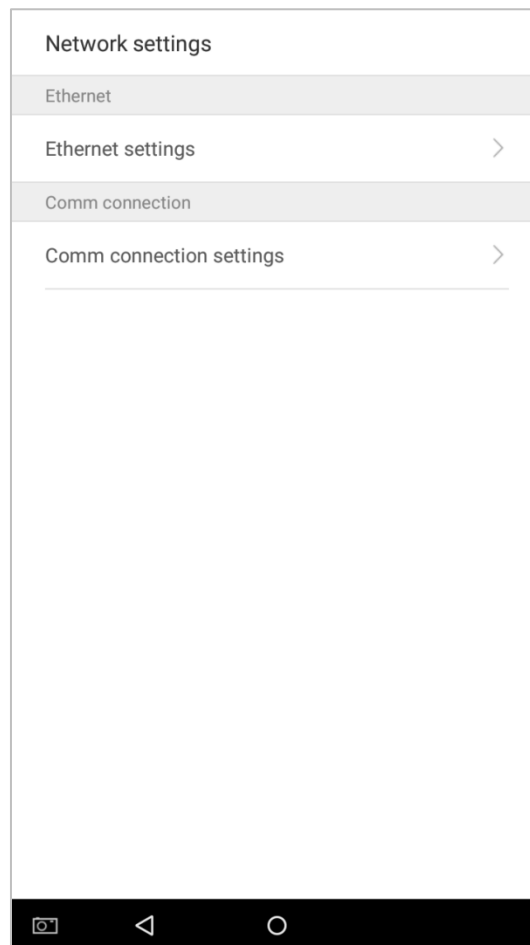

10.1.1 Ethernet Settings

When the device communicates with a PC via Ethernet, the network must be set up.

When the device is not connected to the network, tap on [TCP/IP Settings] on the “Network Settings” interface. The following page will display:

The image displays two screenshots of the 'Network settings' interface on a mobile device.

Left Screenshot: Ethernet settings

- State:** Toggled ON (green switch).
- DHCP:** Manual (with a right arrow icon).
- IP address:** 0.0.0.0
- Subnet mask:** 0.0.0.0
- Gateway address:** 0.0.0.0
- DNS:** 0.0.0.0
- TCP comm port:** 4370 (with a green pencil icon for editing).


Right Screenshot: DHCP settings

- DHCP:** Automatic and Manual options. 'Manual' is selected (indicated by a green checkmark icon).
- IP address:** 192.168.163.205 (with a green pencil icon for editing).
- Subnet mask:** 255.255.255.0 (with a green pencil icon for editing).
- Gateway address:** 192.168.163.1 (with a green pencil icon for editing).
- DNS:** 8.8.8.8 (with a green pencil icon for editing).

A 'Save' button is located in the top right corner of the right screenshot.

Menu Options	Function Description
Enable Ethernet Switch	Enable to modify the Ethernet network address parameters. If this is not enabled, users cannot modify the Ethernet network address parameters.
DHCP	Enable DHCP to assign an IP address to the internal network or network service provider.
IP Address	The default IP is 0.0.0.0; Changeable; IP address of the device and the PC are connecting to the same network segment.
Subnet Mask	The default subnet mask is 0.0.0.0 (can be changed).
Gateway Address	The default gateway address is 0.0.0.0 (can be changed).
DNS	The default address is 0.0.0.0 (can be changed).
TCP COMM Port	The default TCP port is 4370 (can be changed).


When the device is connected to the network after setting the above parameters, the following page will display:
The connection succeeds, with status displayed on the icon bar.

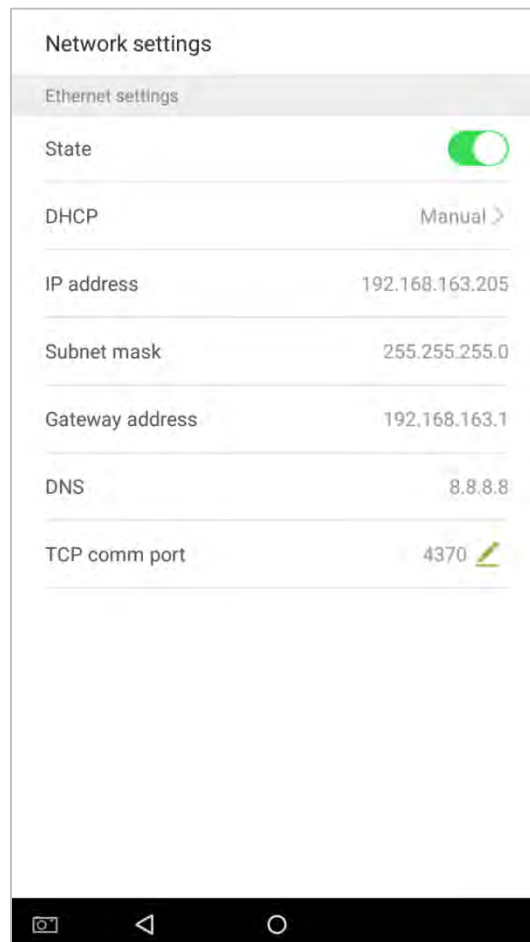

10.1.2 Comm Connection Settings

To develop the security and confidentiality of the attendance data, you need to set a connection password. Before successful connection between the PC software and the device, the connection password must be input correctly.


On the “Network Settings” interface, tap on [Comm connection settings]:

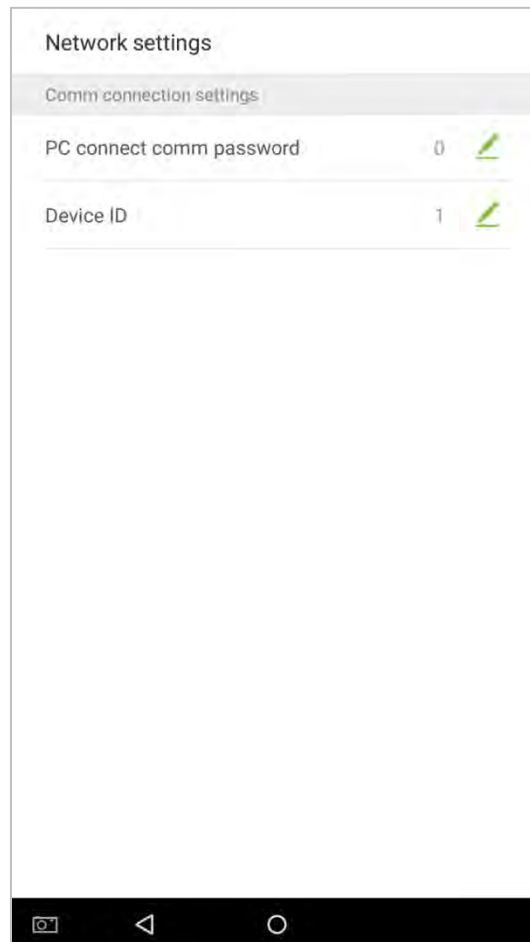

Menu Options	Function Description
PC connection Comm password	It is used to gain the connection permission when using offline SDK or PULL SDK connection. If the password is not correct, the communication connection cannot be built. The value ranges from 0 to 999999. When the value is 0, there's no code status.
Device ID	The ID ranges from 1 to 254. If the system is using the RS232/RS485 communication method, please input the device ID during software communication.


10.2 Date and Time

In system settings, tap on [Date and time] to enter the date and time settings interface:

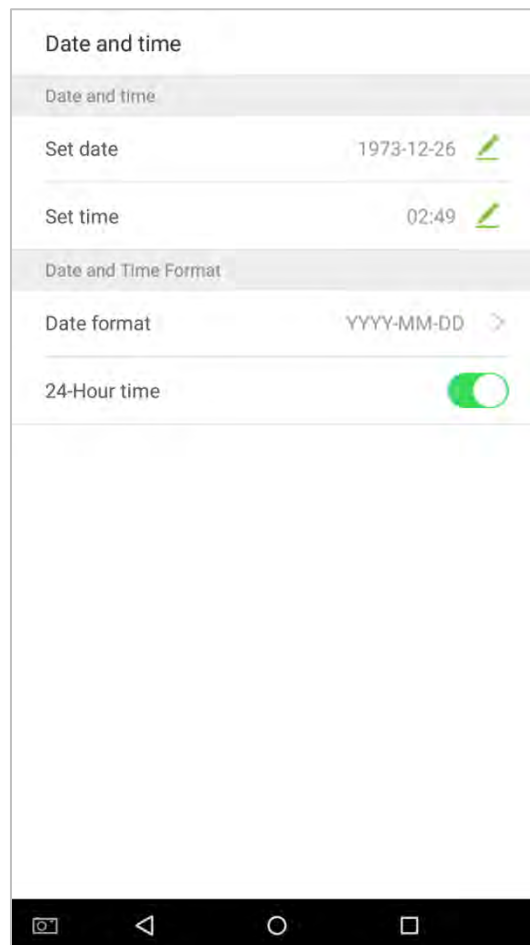


10.2.1 Date and Time Settings

1. Tap on [Set Date] and swipe up and down to set the year, month, and day. Tap on [OK].

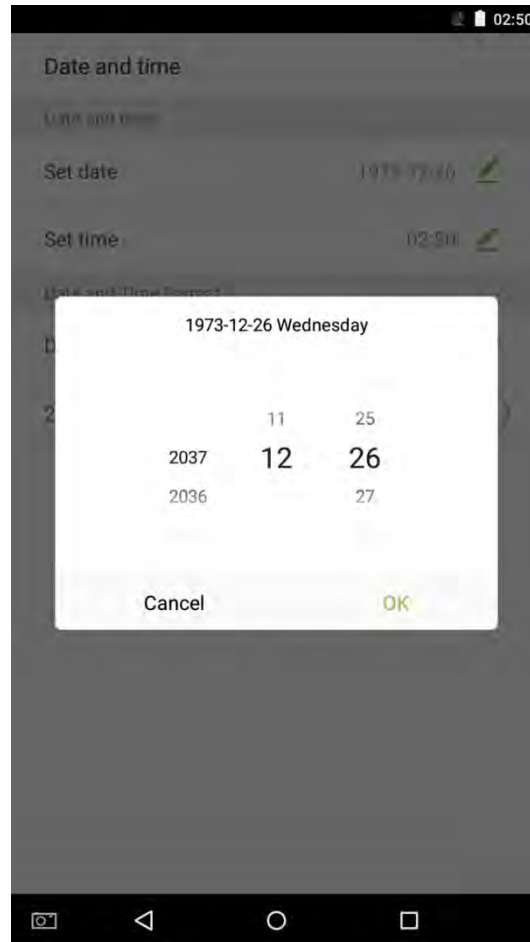


2. Tap on [Set Time] and swipe up and down to set the hour and minute. Tap on [OK].

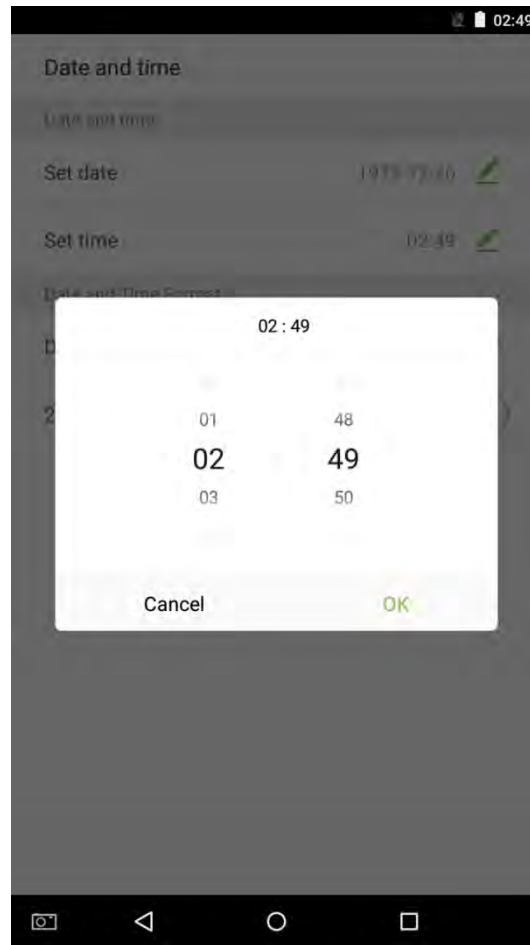


10.2.2 Date and Time Format Settings

1. Tap on [Date Format] and select a date format.

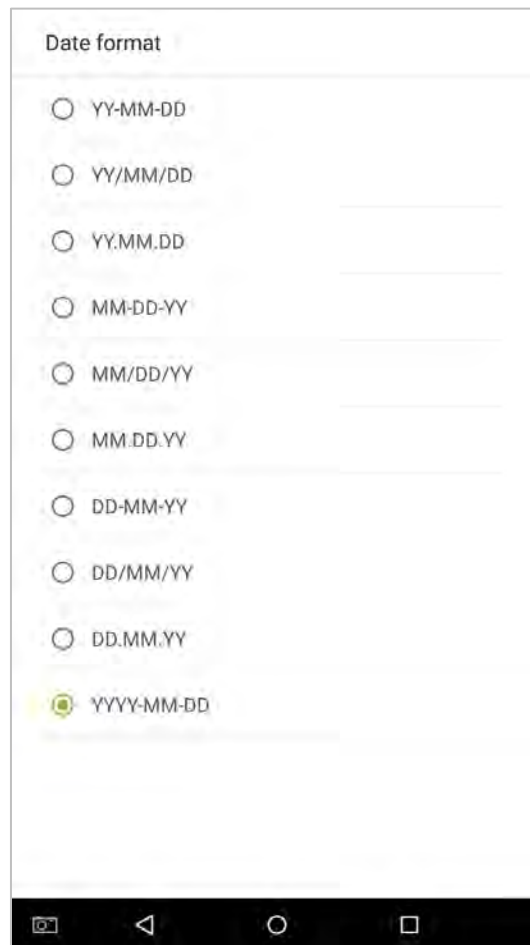


2. Tap on [24-Hour Time] to enable this function. It will appear green if enabled or gray if disabled.

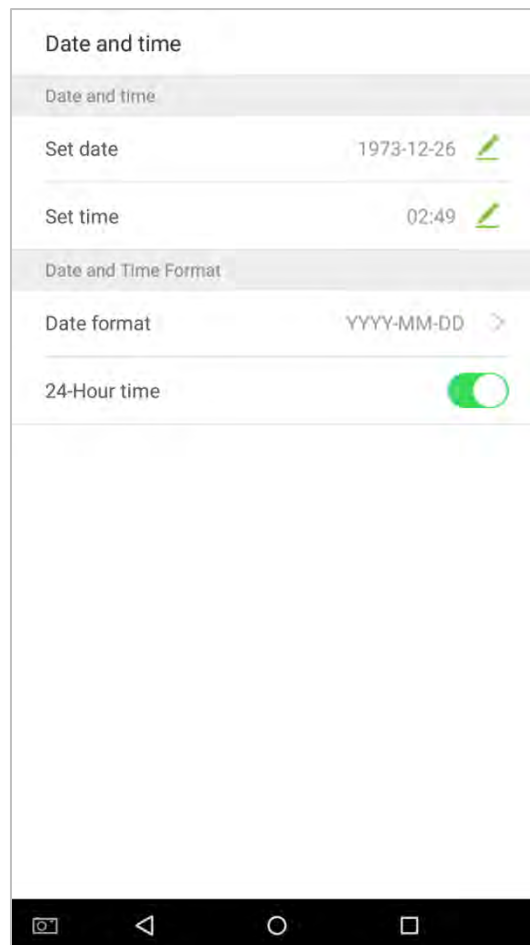

10.3 ATT/Access record Parameters

In system settings, tap on [ATT parameters] to enter the ATT parameters settings interface:

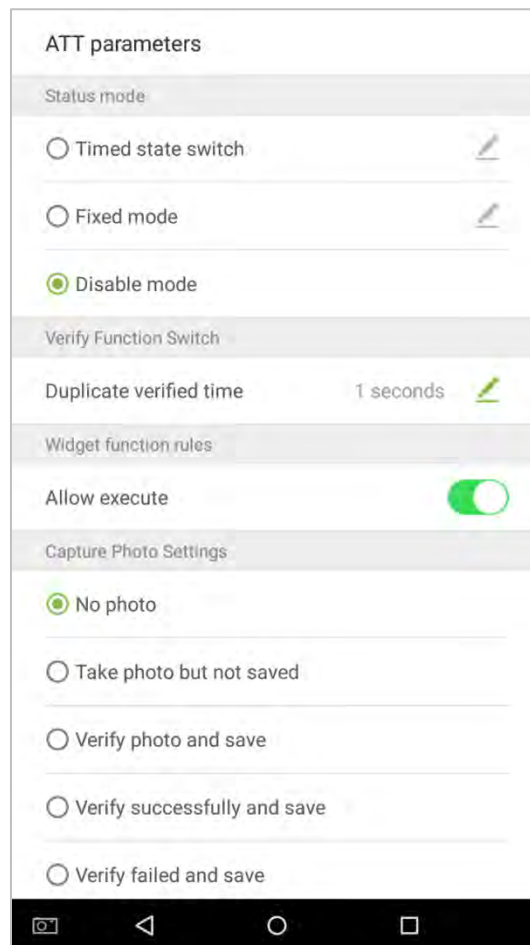

10.3.1 Status Mode

1. Status mode settings

There are three modes for attendance statuses:


Timed state switch: display different attendance statuses at different times.

Fixed mode: there is only one fixed attendance mode.

Disable mode: this function is not used.

- Set in [Timed state switch] mode

1. After selecting "Timed state switch", tap on the  button to enter the related settings interface.

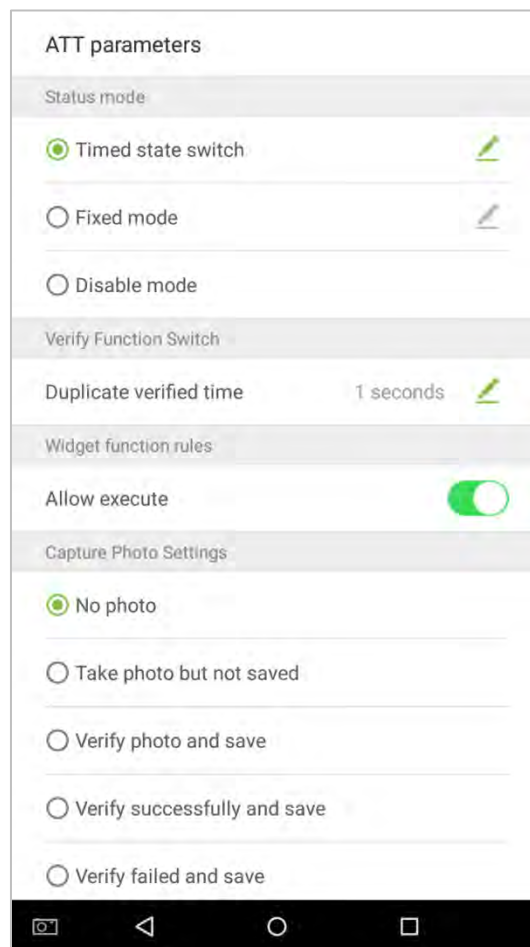

2. On the timed state switch interface, tap on [Check in], then tap on [Repeat daily]. This will appear green if enabled or gray if disabled.

Timed state switch

ATT Events

Check in

Repeat daily

☐

Sun

Mon

Tue

Wed


Thu

Fri


Sat

3. Set the time

When the [Repeat daily] switch is turned on, the following will display:

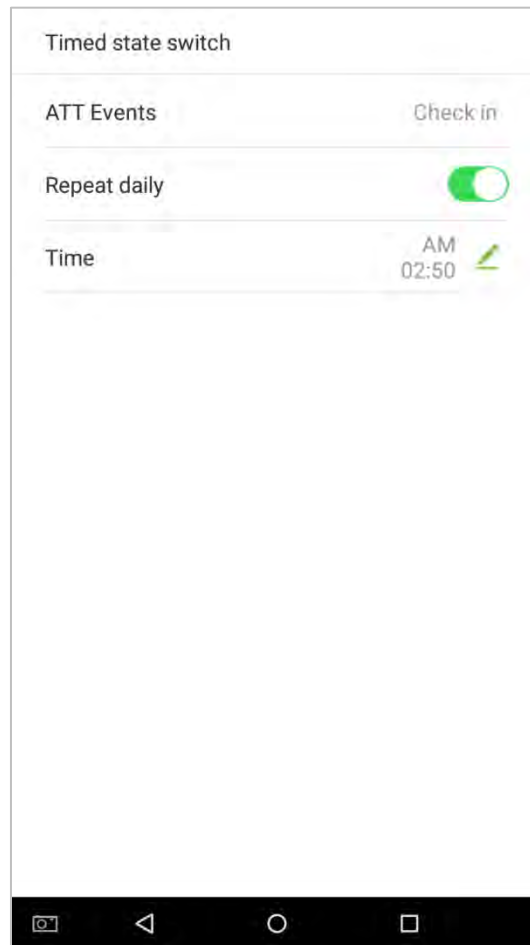

4. Tap on the [Time] button and swipe up and down to set the corresponding time. Tap on [OK].

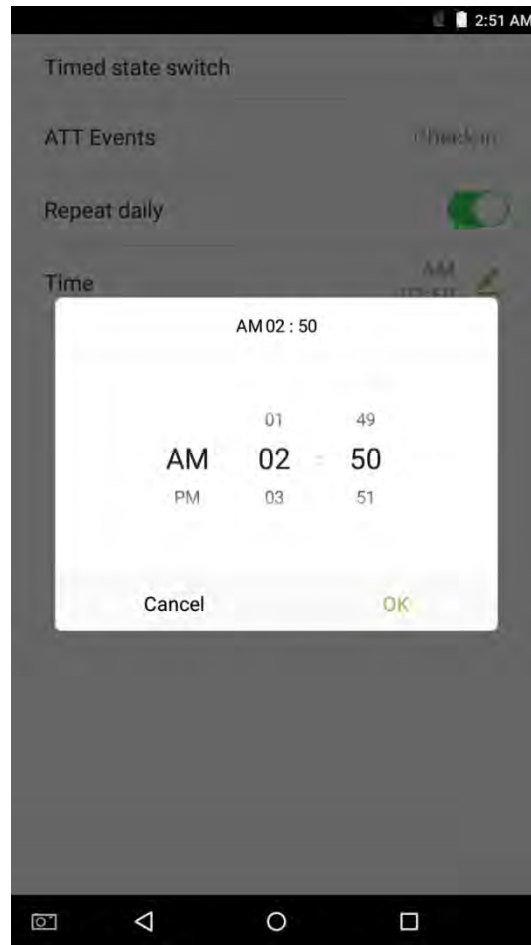

5. When the [Repeat Daily] switch is disabled, the following will display:

Timed state switch

ATT Events

Check in

Repeat daily

☐

Sun

Mon

Tue


Wed

Thu

Fri

Sat

6. Tap on the button for the date you would like to set, then swipe up and down to set the corresponding time. Tap on [OK].

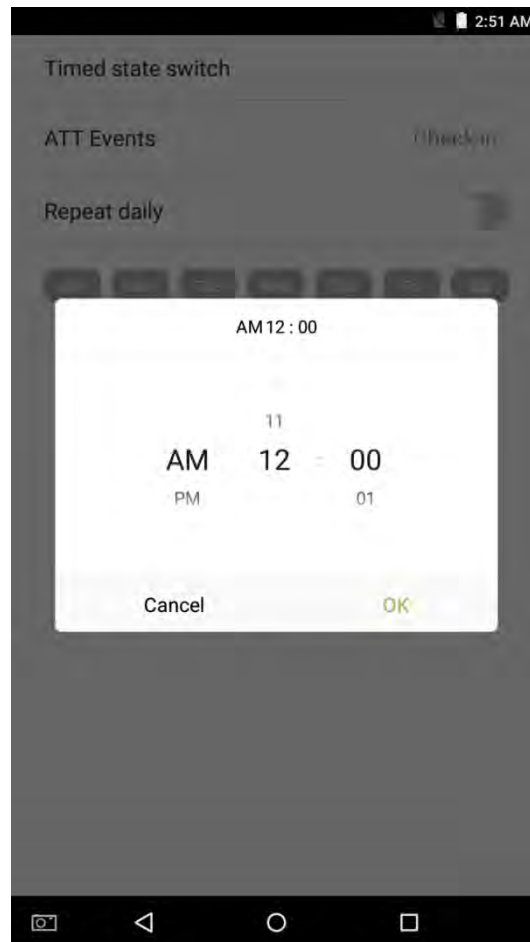

7. Settings Applied.

Timed state switch

ATT Events

Check in

Repeat daily

☐

Sun

Mon

Tue

Wed

Thu

Fri


Sat

AM

12:00

Note: The settings process for "Check out", "Break out", "Break in", "Overtime in", and "Overtime out" is the same as "Check in".

- Set to [Fixed mode] status.
1. Once the status mode is set to "Fixed mode", tap on the  button to enter the Fixed mode options menu.

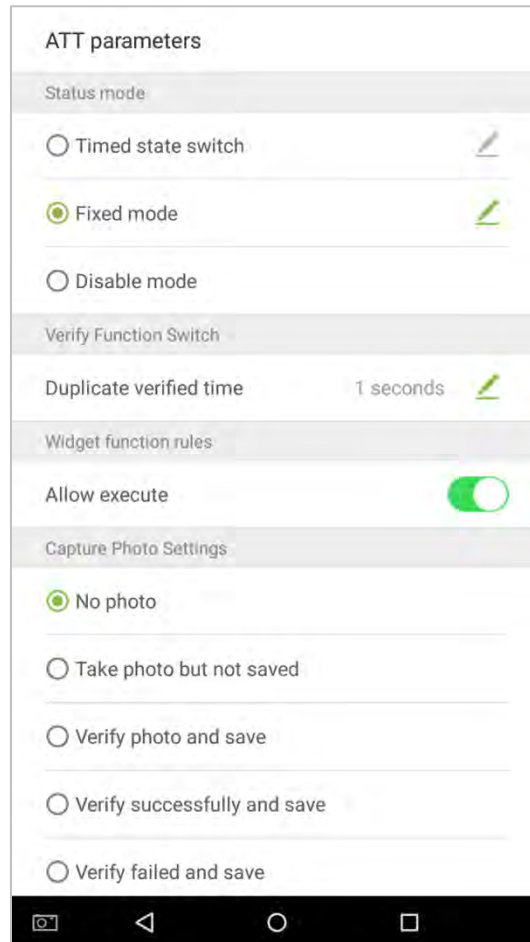

The screenshot shows a mobile application interface for "ATT parameters". It features several sections with settings:

- Status mode:** A list of three radio button options: "Timed state switch", "Fixed mode" (which is selected and has a green dot), and "Disable mode". Each option has a small pencil icon to its right.
- Verify Function Switch:** A section header.
- Duplicate verified time:** A setting showing "1 seconds" with a pencil icon to its right.
- Widget function rules:** A section header.
- Allow execute:** A toggle switch that is currently turned on (green).
- Capture Photo Settings:** A section header.
- Photo Options:** A list of five radio button options: "No photo" (selected with a green dot), "Take photo but not saved", "Verify photo and save", "Verify successfully and save", and "Verify failed and save".

The bottom of the screen shows a standard Android navigation bar with icons for back, home, and recent apps.

2. In the Fixed mode selection menu, select the attendance status that you would like to set.

Timed state switch

Check in

Check out

Break out

Break in

Overtime in

Overtime out

- Set this mode to disabled.
1. Select the Status Mode as "Disable mode".

ATT parameters

Status mode

☐ Timed state switch

☐ Fixed mode

☒ Disable mode

Verify Function Switch

Duplicate verified time 1 seconds

Widget function rules

Allow execute

Capture Photo Settings

☒ No photo

☐ Take photo but not saved


☐ Verify photo and save

☐ Verify successfully and save

☐ Verify failed and save

- Duplicate verified time settings.

Tap on [Duplicate verified time] and a dialog box will appear asking you to input time (unit: seconds). Tap on [OK].

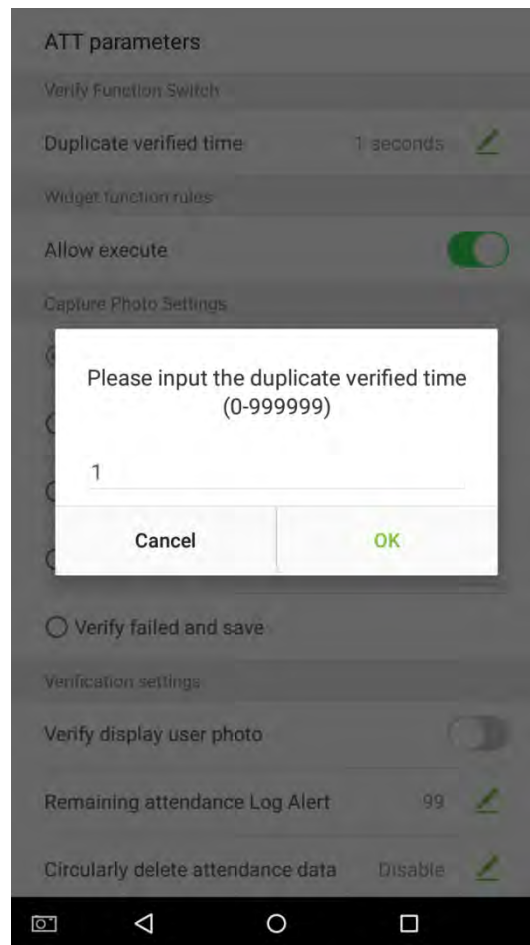

10.3.2 Plugin Function Rules

Tap on the [Allow Execute] switch. It will turn green when enabled and gray when disabled:

ATT parameters

Status mode

☒ Timed state switch

☐ Fixed mode

☐ Disable mode

Verify Function Switch

Duplicate verified time 1 seconds

Widget function rules

Allow execute

Capture Photo Settings

☒ No photo

☐ Take photo but not saved

☐ Verify photo and save

☐ Verify successfully and save

☐ Verify failed and save

10.3.3 Capture Photo Settings

Select the circumstances in which the camera will take photos and whether or not the photos are saved to assist with attendance records.

Tap on the [Capture Photo Settings] that you would like to configure:

The screenshot shows a mobile application interface for 'ATT parameters'. The 'Capture Photo Settings' section is highlighted with a grey header. It contains five radio button options: 'No photo' (selected), 'Take photo but not saved', 'Verify photo and save', 'Verify successfully and save', and 'Verify failed and save'. Below this is the 'Verification settings' section, which includes a toggle for 'Verify display user photo' (currently off), and five rows of settings with edit icons (pencil icons): 'Remaining attendance Log Alert' (99), 'Circularly delete attendance data' (Disable), 'Circularly delete capture photo' (Disable), 'Circularly delete blacklist photo' (Disable), and 'Verified message display Delay' (3 seconds). The bottom of the screen shows a standard Android navigation bar.

ATT parameters	
Capture Photo Settings	
☒ No photo	
☐ Take photo but not saved	
☐ Verify photo and save	
☐ Verify successfully and save	
☐ Verify failed and save	
Verification settings	
Verify display user photo	☐
Remaining attendance Log Alert	99
Circularly delete attendance data	Disable
Circularly delete capture photo	Disable
Circularly delete blacklist photo	Disable
Verified message display Delay	3 seconds

10.3.4 Verification Settings

Configure settings for attendance verification parameters:

ATT parameters

Verification settings

Verify display user photo

☒

Remaining attendance Log Alert

99

Circularly delete attendance data

Disable

Circularly delete capture photo

Disable

Circularly delete blacklist photo

Disable

Verified message display Delay

3 seconds

Face verification interval

1

Period of Validity

User period of validity end setting

☒

☒ Keep user information, but clear attendance record

☐ Keep user information, and save attendance log


☐ Delete user

Menu Options	Function Description
Verify display user photo	If it is enabled, the employee photo will be displayed; if not, the employee photo will not be displayed.
Remaining attendance Log Alert	When the remaining record space reaches a set value, the device will automatically display a remaining record memory warning. When the value is set as 0, the function is disabled.
Cyclically Delete ATT Data	When the attendance record memory has reached full capacity, the device will automatically delete a set value of old attendance records. When the value is set as 0, the function is disabled.
Cyclically Delete ATT Photo	When the space storing the attendance photos have reached full capacity, the device will automatically delete a set value of old attendance photos. When the value is set as 0, the function is disabled.
Cyclically Delete Blacklist Photo	When the space storing blacklisted photos have reached full capacity, the device will automatically delete a set value of old blacklisted photos. When the value is set as 0, the function is disabled.
Verify Message Display Delay	This is the length of time that an employee's information will display on the system's screen after successful verification. Unit: seconds.
Face verification interval	To set the facial template matching time interval as needed. Valid value: 0~9 seconds.

10.3.5 Validity Period of User Information

This is used to determine if employee validity periods are enabled or disabled when registering employees.


1. Tap on the [User period of validity end setting] switch. It will turn green when enabled and gray when disabled.

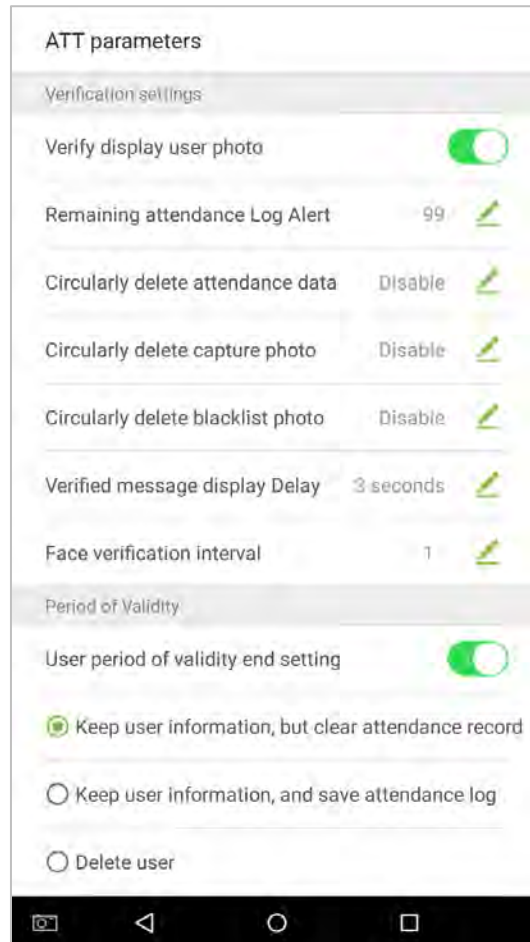

2. When User period of validity end setting is enabled, the following will display. Select the setting you would like to configure.

10.4 Cloud Service Settings


In the system settings list, tap on [Cloud Service Settings] to enter the Cloud service settings interface:

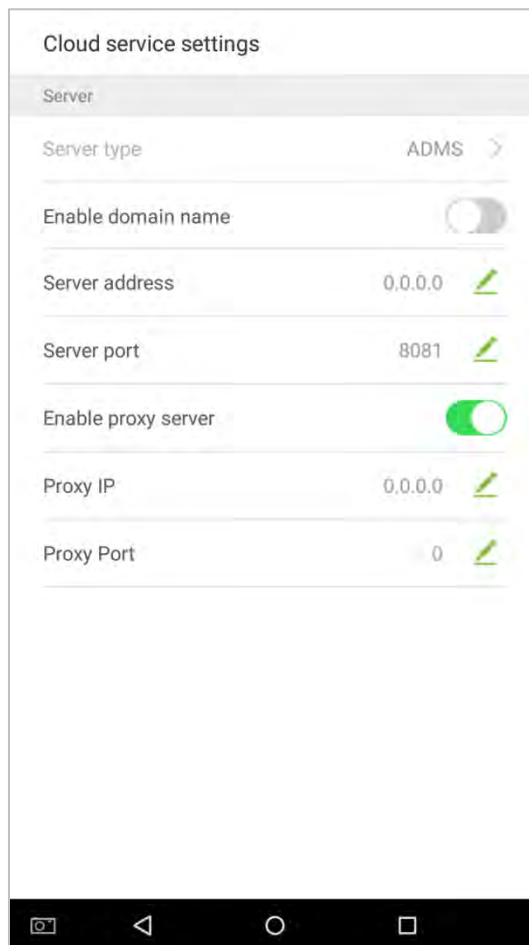

Item		Descriptions
Enable Domain Name	Server Address	When this function is enabled, the domain name mode “http://...” will be used, such as http://www.XYZ.com , while “XYZ” denotes the domain name when this mode is turned ON.
	Server Port	Port used by the ADMS server.
Enable Proxy Server		When you choose to enable the proxy, you need to set the IP address and port number of the proxy server.


10.5 Wiegand Settings

Tap on [Wiegand Settings] in the system setting list to access the interface as shown below.

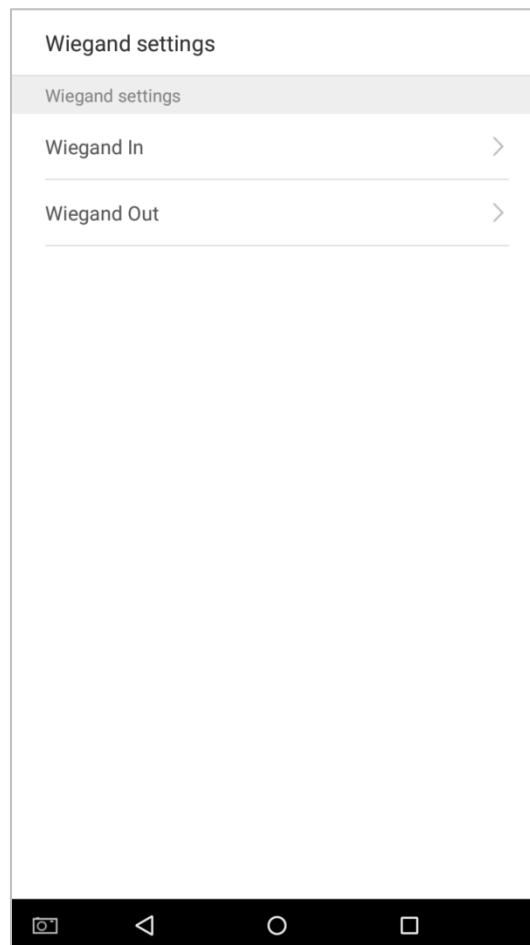

10.5.1 Wiegand In

Tap on [Wiegand In] to enter the interface of settings of “Wiegand In”.

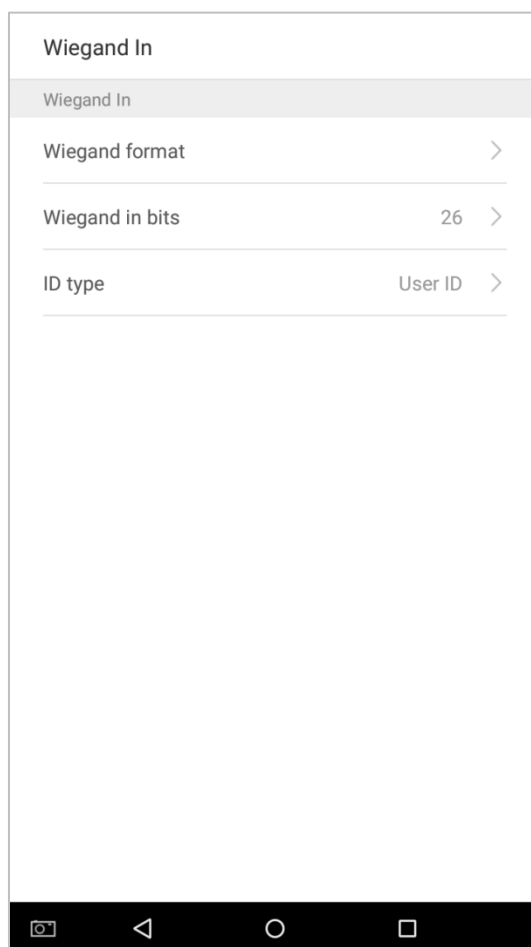

Menu Options	Function Description
Wiegand Format	The Wiegand value could be 26bits, 34bits, 36bits, 37bits, or 50bits.
Wiegand in bits	Number of bits of Wiegand data. After choosing [Wiegand input bits], the device will use the set number of bits to find the suitable Wiegand format in [Wiegand Format].
ID type	Input content included in Wiegand input signal. User ID or Badge number can be chosen.

10.5.2 Wiegand Out

Tap on [Wiegand Out] to enter the below interface:


The screenshot displays a mobile application interface for configuring Wiegand Out settings. The interface is titled "Wiegand Out" at the top. Below the title, there is a list of configuration items, each with a label, a value, and a right-pointing arrow icon. The items are: "Wiegand format" (no value shown), "Wiegand out bits" (value 26), "Failed ID" (value Disabled), "Site code" (value Disabled), "Pulse width (us)" (value 100), "Pulse interval (us)" (value 1000), and "ID type" (value User ID). The "Pulse width (us)" and "Pulse interval (us)" items have a green pencil icon next to their values, indicating they are editable. The interface is shown on a mobile device with a black navigation bar at the bottom containing standard Android icons.

Setting	Value	Action
Wiegand format		Edit
Wiegand out bits	26	Edit
Failed ID	Disabled	Edit
Site code	Disabled	Edit
Pulse width (us)	100	Edit
Pulse interval (us)	1000	Edit
ID type	User ID	Edit

Menu Options	Function Description
Wiegand format	The Wiegand value could be 26bits, 34bits, 36bits, 37bits, 50bits.
Wiegand out bits	After choosing the Wiegand format, you can select one of the corresponding output digits in the Wiegand format.
Failed ID	If the verification is failed, the system will send the failed ID to the device and replace the card number or personnel ID with the new ones.
Site code	It is similar to device ID except that it can be set manually and repeatable with different devices. The default value ranges from 0 to 256.
Pulse width(us)	The time width represents the changes of the quantity of electric charge with high-frequency capacitance regularly within a specified time.
Pulse interval(us)	The time interval between pulses.
ID type	Users may be verified with the specific work codes and card numbers. If the device supports alphabetical work codes, work code output will not be supported and only card number output can be available.

10.6 Display Settings


In the system settings list, tap on [Display Settings] to enter the display settings page:

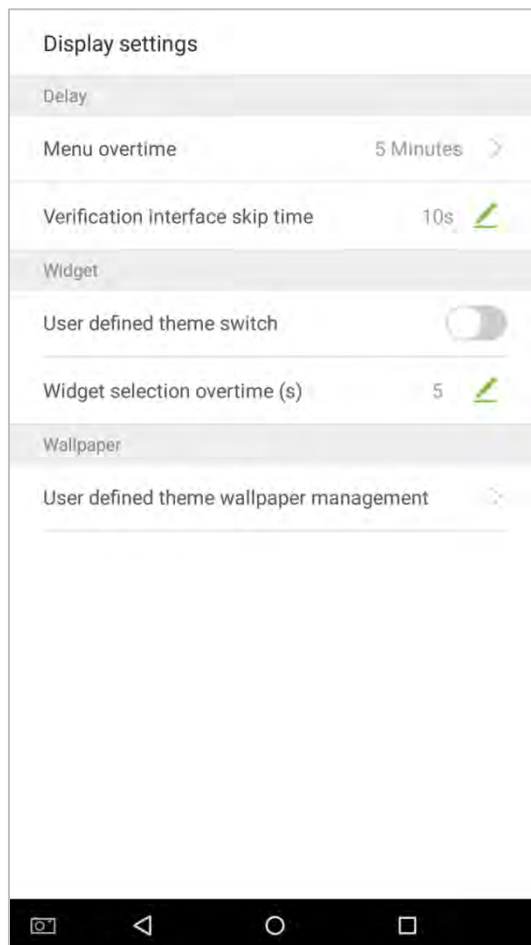

Menu Options	Function Description
Menu overtime	Menu overtime occurs when no operations are performed for a certain amount of time after a user has entered the menu, and the menu enters a standby screen. Parameter options include: 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, or disabled. When this feature is disabled, the menu (including sub-menus) will not automatically close. Users must press "Exit" to exit the menu.
Verification interface skip time	When there is no person nearby after a user verified, the verification interface remains for a certain amount of time and then skip to the standby screen. The skip time values from 5s to 30s.
User defined theme switch	When this switch is enabled, users can drag plugin; when disabled, widgets cannot be dragged. (When this is enabled, anyone can modify the theme. We recommend that the administrator disable this function after making the desired changes).
Widget selection overtime(s)	If a overtime message occurs while selecting plugin status time, the default status will be restored. When the value is set as 0, this function is disabled. Unit: seconds.
User defined theme wallpaper management	This displays all uploaded custom wallpapers. Users can set and delete wallpapers.

10.7 Sound Settings


On the system settings list, tap on [Sound Settings] to enter the interface of sound settings.

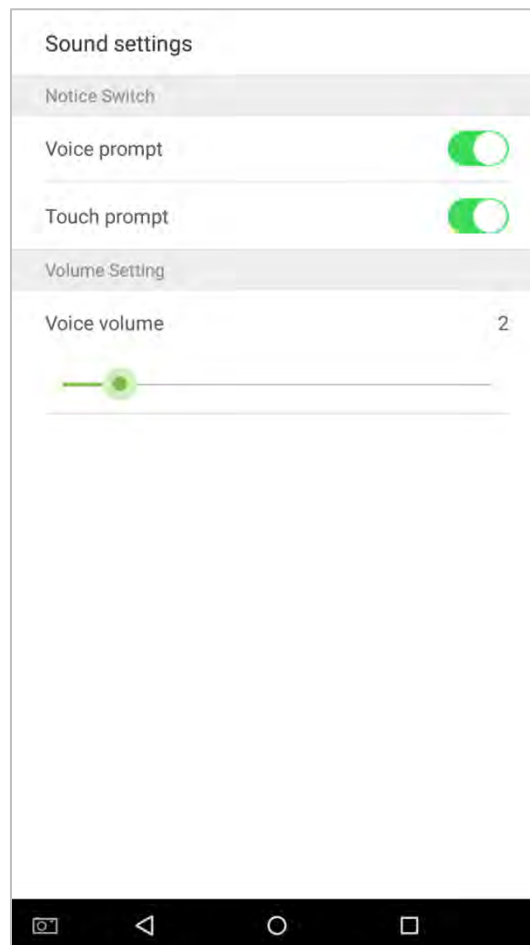

Menu Options	Function Description
Voice prompt	When voice prompts are enabled, users will receive voice prompts. Voice prompts will not be received when this setting is disabled. When disabled and then re-enabled, the volume level will be set to 1.
Touch prompt	This switch enables/disables touchscreen prompt. When enabled, users will receive touchscreen prompts. When disabled, no touchscreen prompts will be received.
Voice volume	Adjust volume volume. This can only be used if audio prompts are enabled. It can be set from 0-15.

10.8 Biometric Parameters

On the system settings list, tap on [Biometric Parameters] to enter the “Biometric parameters” interface:

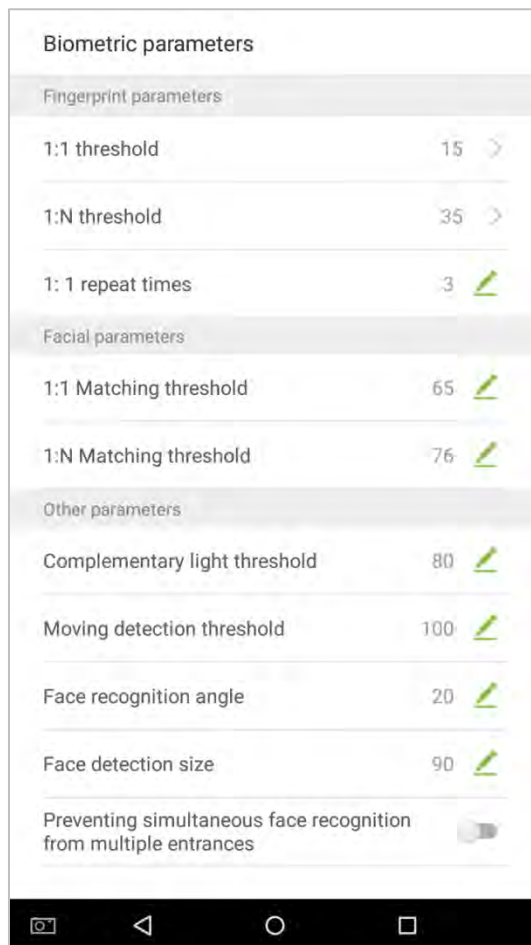


Menu	Function Description
1:1 threshold	When conducting 1:1 fingerprint verification, fingerprint data is collected and instantly compared with fingerprint data using a 1:1 algorithm. This is converted into a value that is then compared to a set value. If the value of the scanned fingerprint exceeds that of the set value, the verification passes. If it does not, the verification fails.
1:N threshold	When conducting 1:N verification, fingerprint data is collected and instantly compared with all fingerprint templates on the system using a 1:N algorithm. This is converted into a value that is compared to a set value. If the value of the scanned fingerprint exceeds that of the set value, the verification has passes. If it does not, the verification fails.
1:1 repeat times	The upper limit of the number of failed verification under 1:1 verification. When the number of failed verification reaches the set value, the system will return to the standby interface.
1:1 matching threshold	When conducting 1:1 face verification, face data is collected and instantly compared with face data using a 1:1 algorithm. This is converted into a value that is then compared to a set value. If the value of the scanned face exceeds that of the set value, the verification passes. If it does not, the verification fails.

1:N matching threshold	When conducting 1:N verification, face data is collected and instantly compared with all face templates on the system using a 1:N algorithm. This is converted into a value that is compared to a set value. If the value of the scanned face exceeds that of the set value, the verification has passes. If it does not, the verification fails.
Complementary light threshold	Detect ambient light brightness. When the brightness of the surrounding environment is less than the threshold, the complementary light is turned on; when the brightness is greater than the threshold, the complementary light is not turned on. The default value is 80.
Moving detection threshold	Detect whether there is a moving person in front of the device to determine whether the face recognition function is enabled. The default value is 100.
Face recognition angle	To limit the face angle at face recognition, the recommended threshold is 20.
Face detection size	The size of the face when face recognition. The range is 65-320 cm. The smaller the value, the farther the detectable distance is; otherwise, the closer it is.
Preventing simultaneous face recognition from multiple entrances	When multiple devices are installed on the side-by-side entrance, please enable this function to prevent multiple devices from simultaneously recognizing the face. Set the threshold to three types: high, medium, and low. The higher the threshold, the narrower the distance between the guide lines and the smaller the face recognition range on the screen. When setting the threshold, it is recommended to open auxiliary line correction function.

10.9 Auto-testing


On the system settings list, tap on [Auto-Testing] to enter the auto testing interface:

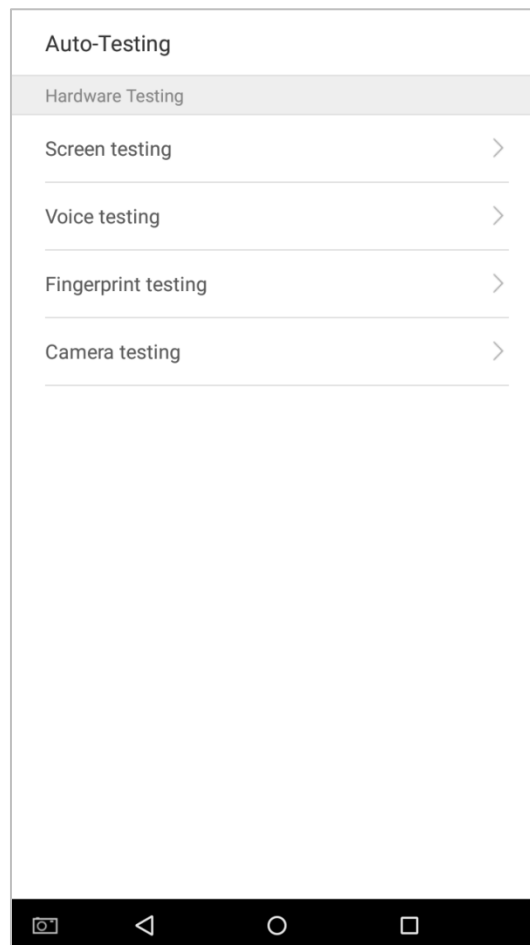

Menu Options	Function Description
Screen testing	Test the screen's display. The screen will display red, green, blue, white, and black tests. Check if the screen color is uniformly correct across each area of the screen. Tap on anywhere on the screen during testing to continue testing. Tap on the back key to exit testing.
Voice testing	The device automatically tests audio prompts by playing back audio files that are stored in the device to test if the device's audio files are complete and if the audio effects are in good working order. Tap on the back key to exit testing.
Fingerprint testing	The device automatically tests if the fingerprint scanner is functioning properly by testing a fingerprint that is pressed onto the scanner, and seeing if the fingerprint image is clear and usable. When pressing a fingerprint onto the scanner, the screen will display an image of the scanned fingerprint.
Camera testing	Test if the camera is functioning properly. Check to see if the image quality is clear and usable.

10.10 Advanced Settings


On the system settings list, tap on [Advanced settings] to enter the “Advanced settings” interface:

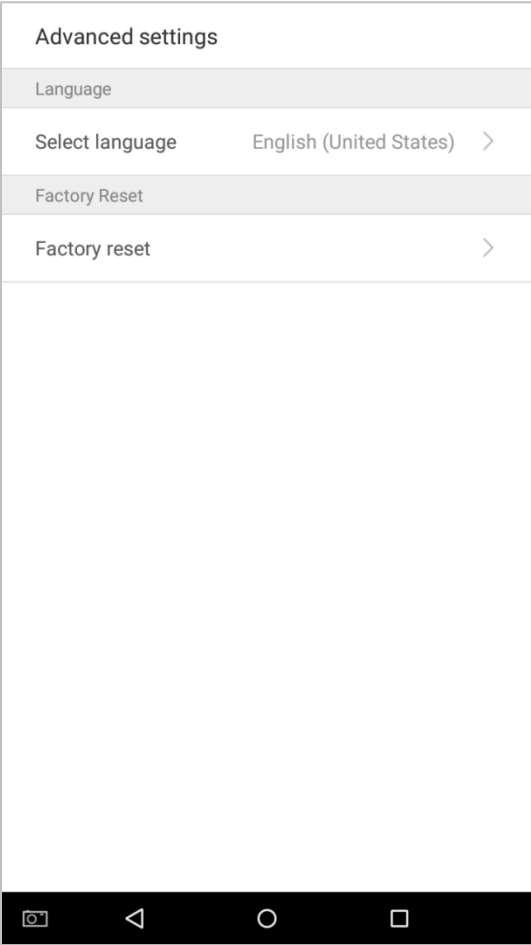

Menu Options	Function Description
Select language	Select English or Simplified Chinese.
Restore factory	Restores the settings of the device, including communication settings, system settings, to the factory settings.

10.11 About the Device

On the system settings list, tap on [About the Device] to enter the “About the Device” interface:

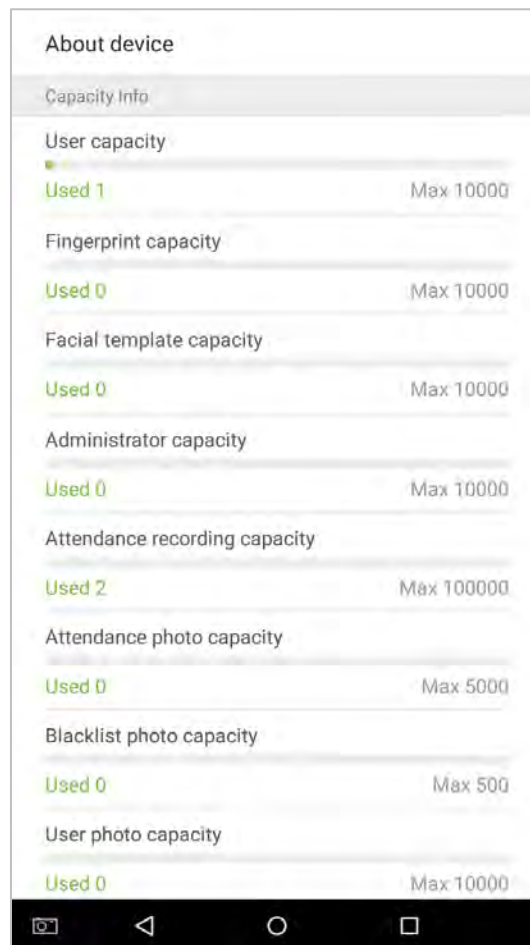

Menu Options	Function Description
Capacity Information	Displays the current device's employee storage, fingerprint and face storage, administrators, attendance records, attendance photos, blacklist photos, and employee photos.
Device Information	Displays the device's name, serial number, MAC address, fingerprint algorithm version information, platform information, and manufacturer.
Version	Displays all the versions of all the system's apps, such as the system settings, quick parts, data manager, and other installed apps.

11. USB upgrade

The device's firmware program can be upgraded with the upgrade file in a USB drive. Before conducting this operation, please ensure that the USB drive contains the correct upgrade file and is properly inserted into the device.

Note: If you need an upgrade file, please contact out technical staff. Firmware upgrade is not recommended under normal circumstances.

Statement on the Right to Privacy

Dear Customers:

Thank you for choosing this hybrid biometric recognition product, which was designed and manufactured by ZKTeco. As a world-renowned provider of core biometric recognition technologies, we are constantly developing and researching new products, and strive to follow the privacy laws of each country in which our products are sold.

We Declare That:

1. All of our civilian fingerprint recognition devices capture characteristics, not fingerprint images, and do not involve privacy protection.
2. None of the fingerprint characteristics that we capture can be used to reconstruct an image of the original fingerprint, and do not involve privacy protection.
3. As the provider of this device, we will assume no direct or indirect responsibility for any consequences that may result from your use of this device.
4. If you would like to dispute human rights or privacy issues concerning your use of our product, please directly contact your employer.

Our other police fingerprinting devices or development tools can capture original images of citizens' fingerprints. As to whether or not this constitutes infringement of your rights, please contact your government or the final supplier of the device. As the manufacturers of the device, we will assume no legal liability.

Notes:

Chinese law includes the following provisions on the personal freedoms of its citizens:

1. There shall be no illegal arrest, detention, search, or infringement of persons;
2. Personal dignity as related to personal freedom shall not be infringed upon;
3. A citizen's house may not be infringed upon;
4. A citizen's right to communication and the confidentiality of that communication is protected by law.

As a final point we would like to further emphasize that biometric recognition is an advanced technology that will undoubtedly be used in e-commerce, banking, insurance, legal, and other sectors in the future. Every year the world is subjected to major losses due to insecure nature of passwords. Biometric products serve to protect your identity in high-security environments.

Eco-friendly Use



- This product's "eco-friendly use period" refers to the period during which this product will not leak toxic or hazardous substances, when used in accordance with the conditions in this manual.
- The eco-friendly use period indicated for this product does not include batteries or other components that are easily worn down and must be periodically replaced. The battery's eco-friendly use period is 5 years.

Hazardous or Toxic Substances and Their Quantities

Component Name	Hazardous/Toxic Substance/Element					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr6+)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Chip Resistor	×	○	○	○	○	○
Chip capacitor	×	○	○	○	○	○
Chip inductor	×	○	○	○	○	○
Diode	×	○	○	○	○	○
ESD component	×	○	○	○	○	○
Buzzer	×	○	○	○	○	○
Adapter	×	○	○	○	○	○
Screws	○	○	○	×	○	○

○: indicates that the total amount of toxic content in all of the homogeneous materials is below the limit requirements specified in SJ/T 11363—2006.

×: indicates that the total amount of toxic content in all of the homogeneous materials exceeds the limit requirements specified in SJ/T 11363—2006.

Note: 80% of this project's components are made using non-toxic, eco-friendly materials. Those which contain toxins or harmful materials or elements are included due to current economic or technical limitations which prevent their replacement with non-toxic materials or elements.

ZK Building, Wuhe Road, Gangtou, Bantian, Buji Town,
Longgang District, Shenzhen China 518129

Tel: +86 755-89602345

Fax: +86 755-89602394

www.zkteco.com

