

User Manual


Saturn-F1000 Series

Applicable Model(s): Saturn-F1000, Saturn-F1200

Date: August 2025

Doc Version: 1.0

English

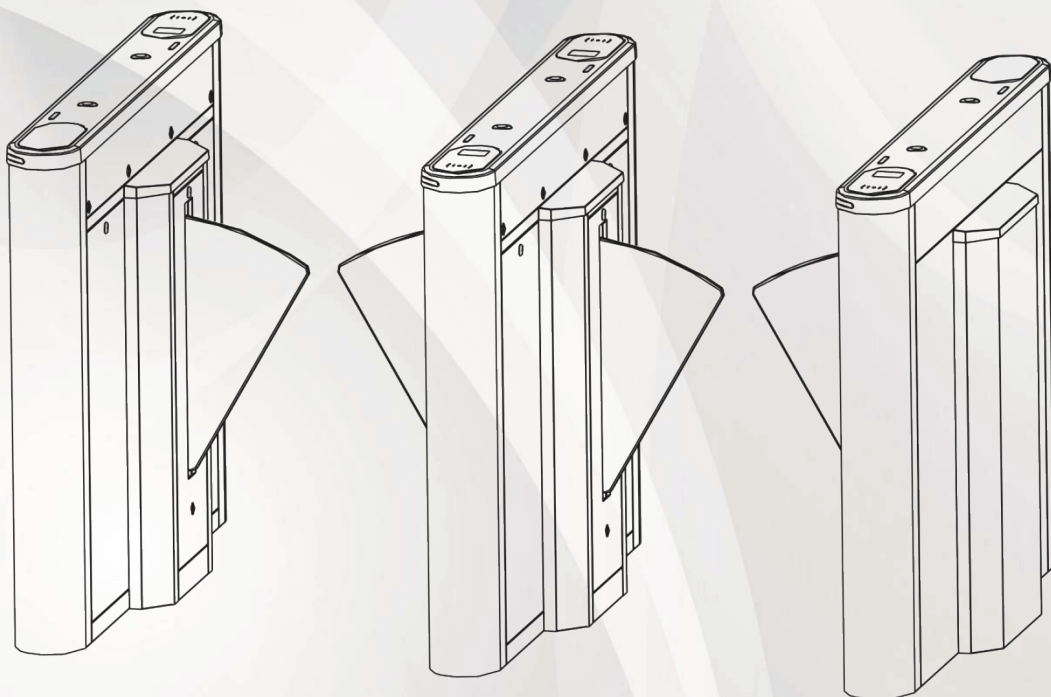

Copyright © 2025 ZKTECO CO., LTD. All rights reserved.

Without the prior written consent of ZKTeco, no portion of this manual can be copied or forwarded in any way or form. All parts of this manual belong to ZKTeco and its subsidiaries (hereinafter the "Company" or "ZKTeco").

Trademark

ZKTeco is a registered trademark of ZKTeco. Other trademarks involved in this manual are owned by their respective owners.

Disclaimer

This manual contains information on the operation and maintenance of the ZKTeco equipment. The copyright in all the documents, drawings, etc. in relation to the ZKTeco supplied equipment vests in and is the property of ZKTeco. The contents hereof should not be used or shared by the receiver with any third party without express written permission of ZKTeco.

The contents of this manual must be read as a whole before starting the operation and maintenance of the supplied equipment. If any of the content(s) of the manual seems unclear or incomplete, please contact ZKTeco before starting the operation and maintenance of the said equipment.

It is an essential pre-requisite for the satisfactory operation and maintenance that the operating and maintenance personnel are fully familiar with the design and that the said personnel have received thorough training in operating and maintaining the machine/unit/equipment. It is further essential for the safe operation of the machine/unit/equipment that personnel has read, understood and followed the safety instructions contained in the manual.

In case of any conflict between terms and conditions of this manual and the contract specifications, drawings, instruction sheets or any other contract-related documents, the contract conditions/documents shall prevail. The contract specific conditions/documents shall apply in priority.

ZKTeco offers no warranty, guarantee or representation regarding the completeness of any information contained in this manual or any of the amendments made thereto. ZKTeco does not extend the warranty of any kind, including, without limitation, any warranty of design, merchantability or fitness for a particular purpose.

ZKTeco does not assume responsibility for any errors or omissions in the information or documents which are referenced by or linked to this manual. The entire risk as to the results and performance obtained from using the information is assumed by the user.

ZKTeco in no event shall be liable to the user or any third party for any incidental, consequential, indirect, special, or exemplary damages, including, without limitation, loss of business, loss of profits, business interruption, loss of business information or any pecuniary loss, arising out of, in connection with, or

relating to the use of the information contained in or referenced by this manual, even if ZKTeco has been advised of the possibility of such damages.

This manual and the information contained therein may include technical, other inaccuracies or typographical errors. ZKTeco periodically changes the information herein which will be incorporated into new additions/amendments to the manual. ZKTeco reserves the right to add, delete, amend or modify the information contained in the manual from time to time in the form of circulars, letters, notes, etc. for better operation and safety of the machine/unit/equipment. The said additions or amendments are meant for improvement /better operations of the machine/unit/equipment and such amendments shall not give any right to claim any compensation or damages under any circumstances.

ZKTeco shall in no way be responsible (i) in case the machine/unit/equipment malfunctions due to any non-compliance of the instructions contained in this manual (ii) in case of operation of the machine/unit/equipment beyond the rate limits (iii) in case of operation of the machine and equipment in conditions different from the prescribed conditions of the manual.

The product will be updated from time to time without prior notice. The latest operation procedures and relevant documents are available on <http://www.zkteco.com>

If there is any issue related to the product, please contact us.

ZKTeco Headquarters

Address ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone +86 769 - 82109991

Fax +86 755 - 89602394

For business-related queries, please write to us at: sales@zkteco.com.

To know more about our global branches, visit www.zkteco.com.

About the Company

ZKTeco is one of the world's largest manufacturer of RFID and Biometric (Fingerprint, Facial, Finger-vein) readers. Product offerings include Access Control readers and panels, Near & Far-range Facial Recognition Cameras, Elevator/floor access controllers, Turnstiles, License Plate Recognition (LPR) gate controllers and Consumer products including battery-operated fingerprint and face-reader Door Locks. Our security solutions are multi-lingual and localized in over 18 different languages. At the ZKTeco state-of-the-art 700,000 square foot ISO9001-certified manufacturing facility, we control manufacturing, product design, component assembly, and logistics/shipping, all under one roof.

The founders of ZKTeco have been determined for independent research and development of biometric verification procedures and the productization of biometric verification SDK, which was initially widely applied in PC security and identity authentication fields. With the continuous enhancement of the development and plenty of market applications, the team has gradually constructed an identity authentication ecosystem and smart security ecosystem, which are based on biometric verification techniques. With years of experience in the industrialization of biometric verifications, ZKTeco was officially established in 2007 and now has been one of the globally leading enterprises in the biometric verification industry owning various patents and being selected as the National High-tech Enterprise for 6 consecutive years. Its products are protected by intellectual property rights.

About the Manual

This manual introduces the operations of **Saturn-F1000 Series**.

All figures displayed are for illustration purposes only. Figures in this manual may not be exactly consistent with the actual products.

Features and parameters with ★ are not available in all devices.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into Dangers and Cautions:

Dangers: Neglecting any of the warnings may cause serious injury or death.

Cautions: Neglecting any of the cautions may cause injury or equipment damage.

Symbols

Convention	Description
	Dangers: Follow these safeguards to prevent serious injury or death.
	Cautions: Follow these precautions to prevent potential injury or material damage.



Dangers:

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- The equipment must be connected to an earthed mains socket-outlet.
- Shock hazard! Disconnect all power sources before maintenance.
- Do not touch the bare metal contacts of the inlets after the circuit breaker is turned off. Electricity still exists.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please use the power adapter, which is provided by normal company. The power consumption cannot be less than the required value.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.
- If the top caps should be open and the device should be powered on for maintenance, make sure:
 1. Power off the fan to prevent the operator from getting injured accidentally.
 2. Do not touch bare high-voltage components.
 3. Make sure the switch's wiring sequence is correct after maintenance.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.

- If smoke, odors or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)
- The Terminal PE of the switch should be connected to a ground wire.

 Cautions:

- Instructions must be read before installation. Please follow these instructions carefully, incorrect installation could affect gate operation.
- When mounting and positioning this product please ensure the power cable is unplugged.
- The motor cover will need to be removed to mount the motor to the mounting plate. Electrical-related operation of the main unit can only be made by a licensed electrician.
- To prevent injury, this equipment must be securely attached to the floor/base of the turnstile in accordance with the installation instructions.
- Keep straight down when moving or using the equipment.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- Stainless steel may be corroded in some circumstances. You need to clean and care the device by using the stainless steel cleaner. It is suggested to clean the device every month.
- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).
- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- The device cover for indoor use shall be kept from rain and moisture.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- Please use the provided glove when open up the device cover, avoid direct contact with the device cover, because the acidic sweat of the fingers may erode the surface coating of the device cover.
- Please use a soft and dry cloth when clean inside and outside surfaces of the device cover, do not use alkaline detergents.
- Please keep all wrappers after unpack them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.

- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.
- Biometric recognition products are not 100% applicable to anti-spoofing environments. If you require a higher security level, use multiple authentication modes.
- Do not stay in the lane when the device is rebooting.
- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.
- The instructions shall require connection of the equipment protective earthing conductor to the installation protective earthing conductor.

Table of Contents

1	OVERVIEW.....	9
1.1	Introduction	9
1.2	Features	9
1.3	Appearance.....	11
1.3.1	Saturn-F1000	11
1.3.2	Saturn-F1200	12
1.3.3	System Composition	13
1.4	System Components	14
1.5	Technical Specifications.....	15
1.6	Mechanical System	17
1.7	Electronic Control System	17
2	AUTHENTICATION METHODS.....	19
2.1	Card Verification★	19
2.2	QR Code Verification★	20
2.3	Facial Verification★	20
3	INSTALLATION.....	21
3.1	Installation Tools.....	21
3.2	Installation Requirements	21
3.3	Installation Environment	21
3.4	Installation Cabinet	22
3.5	Facial Authentication Device Installation (Surface Mount)	27
4	TERMINAL DESCRIPTION	28
4.1	Main / Sub Board	28
4.2	IR Sensor Board	29
5	WIRING INSTRUCTIONS.....	30
5.1	Main-sub Location	30
5.2	Slotting Position.....	31
5.3	Wiring Methods.....	31
5.4	Power Wiring	32
5.5	System Wiring Diagram	33
6	OPERATION PROCESS	34
7	MACHINE OPERATION.....	36
7.1	Operation Buttons Description.....	36
7.2	Menu Parameter Settings.....	36
8	MAINTENANCE	45
8.1	Chassis Maintenance	45
8.2	Movement Maintenance.....	45
8.3	Power Supply Maintenance	45

9	TROUBLESHOOTING.....	46
10	PACKING LIST.....	47

1 Overview

1.1 Introduction

ZKTeco's Saturn-F1000 series flap barrier is a high-efficiency and designed for efficient access control for both indoor and outdoor scenarios.

Constructed with a robust cold-rolled SPCC steel chassis and a retractable polycarbonate (PC) barrier, the Saturn-F1000 ensures durability and safety while maintaining a modern appearance. Equipped with a DC brushless motor, the Saturn-F1000 delivers rapid operation, opening or closing in less than one second per movement. The system integrates advanced features such as anti-pinch and anti-tailgating detection, as well as multiple authentication options—including RFID, QR code, and facial recognition—catering to diverse security requirements. Also, the Saturn-F1000 supports a flow rate of up to 30 passengers per minute (RFID/QR code) and 15 passengers per minute (facial recognition), making it ideal for high-traffic applications.

1.2 Features

Fast Passage Experience

- The Saturn-F1000 flap barrier turnstile enables rapid opening and closing—typically in less than one second—providing smooth, efficient throughput for up to 30 passengers per minute. This high-speed performance is ideal for busy environments like airports, metro stations, and stadiums, minimizing wait times and streamlining pedestrian flow during peak periods.

High-Security Assurance

- Advanced infrared sensing and five sensor pairs provide precise detection, effectively preventing tailgating and unauthorized entry.

Exceptional Stability Performance

- A robust internal structure and high-quality materials, combined with a durable DC brushless motor rated for 5 million cycles, ensure reliable, low-maintenance operation in high-traffic environments.

Flexible Customization

- The flap barrier can be diversely customized to meet the needs of different venues and readers. It can integrate with IC/ID card readers, QR code readers and facial recognition devices to satisfy diverse authentication requirements.

Configurable Passage Options

- Offers configurable passage modes: such as one-way, two-way, or free passage, to suit various access control scenarios.


Durable Material with IPX4 Protection Rating

- Built with powder-coated cold-rolled steel for corrosion resistance and it reached IPX4 protection rating for enhanced water proof and dust resistant.

1.3 Appearance

1.3.1 Saturn-F1000


Unit: mm

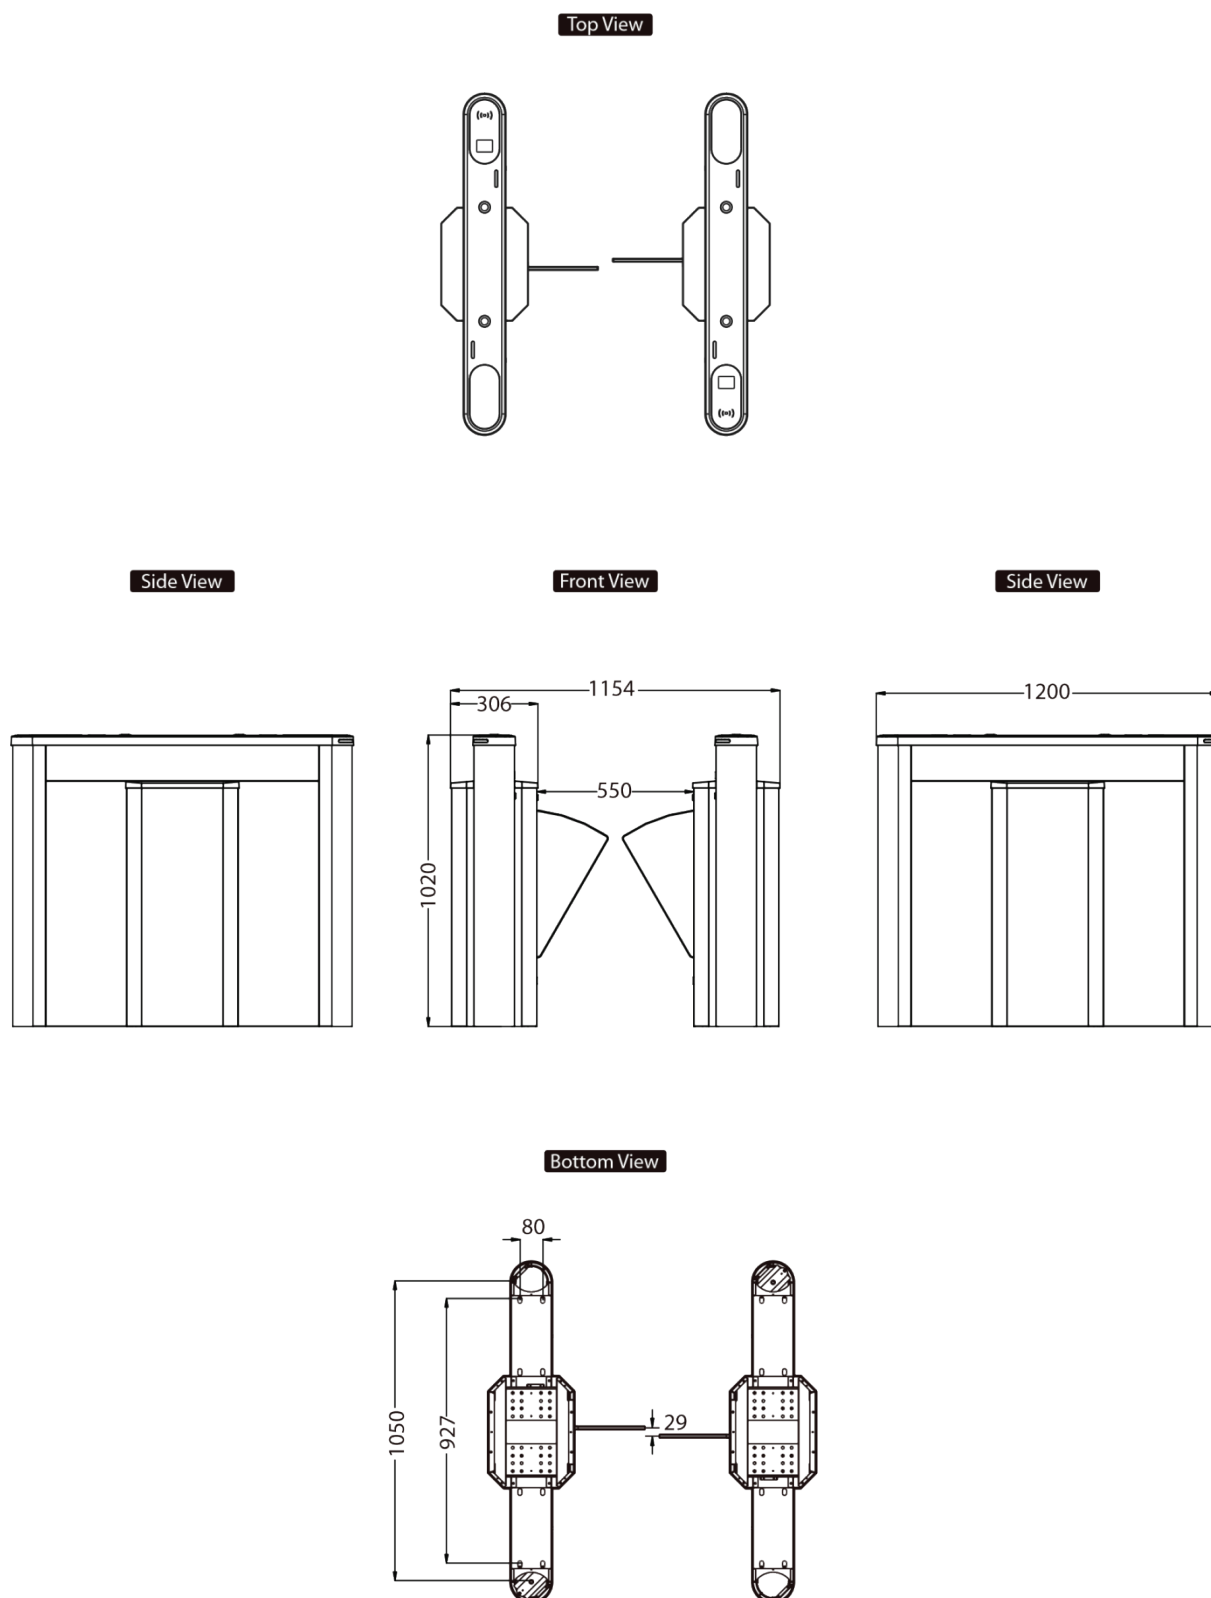


1.3.2 Saturn-F1200

Unit: mm


Top View

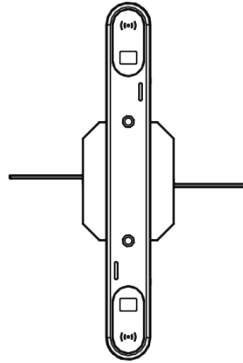


Side View

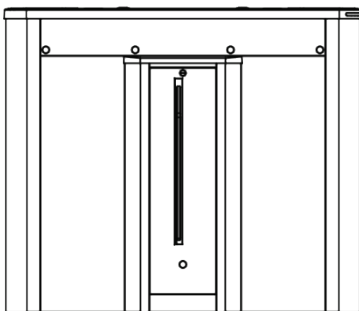


Front View

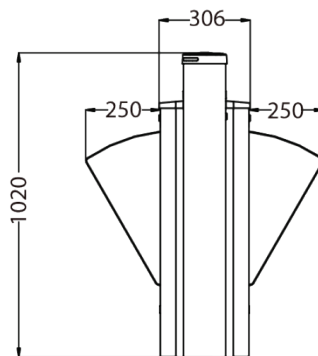

Side View

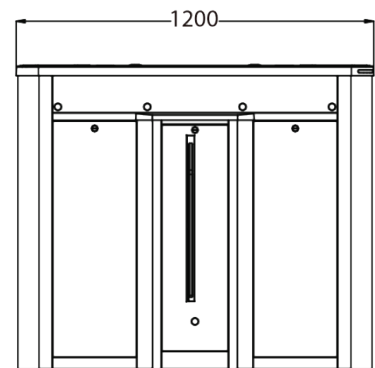


Bottom View

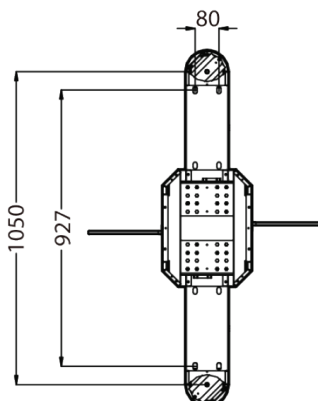


1.3.3 System Composition

The Saturn-F1000 and Saturn-F1200 can be combined to form a single, dual or multi-lane system, allowing the user to select the appropriate flap barrier size according to actual needs.


1) Single-lane

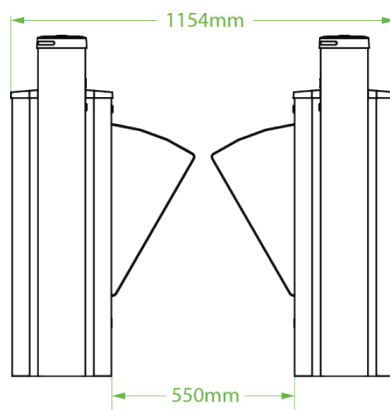

2) Dual-lane

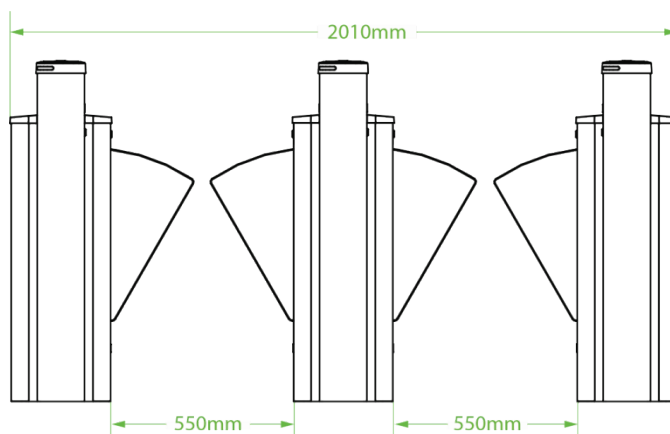


3) Multi-lane

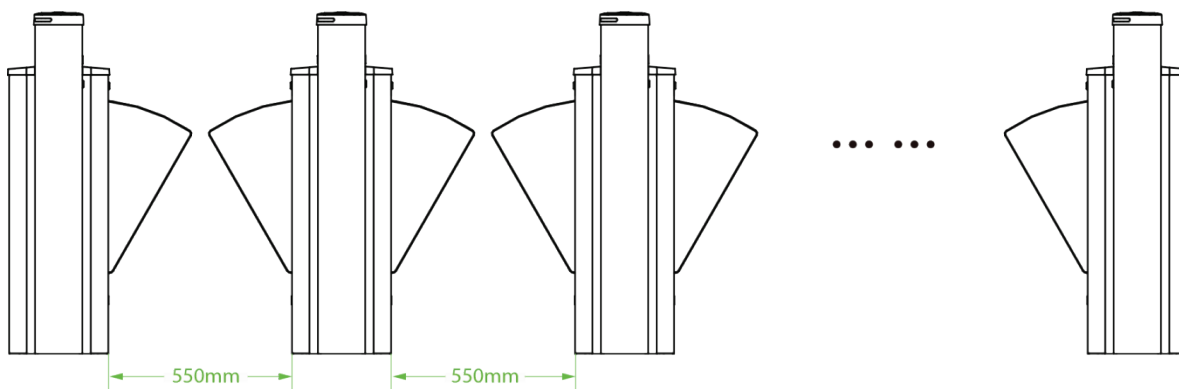


1.4 System Components

- **Saturn-F1000**

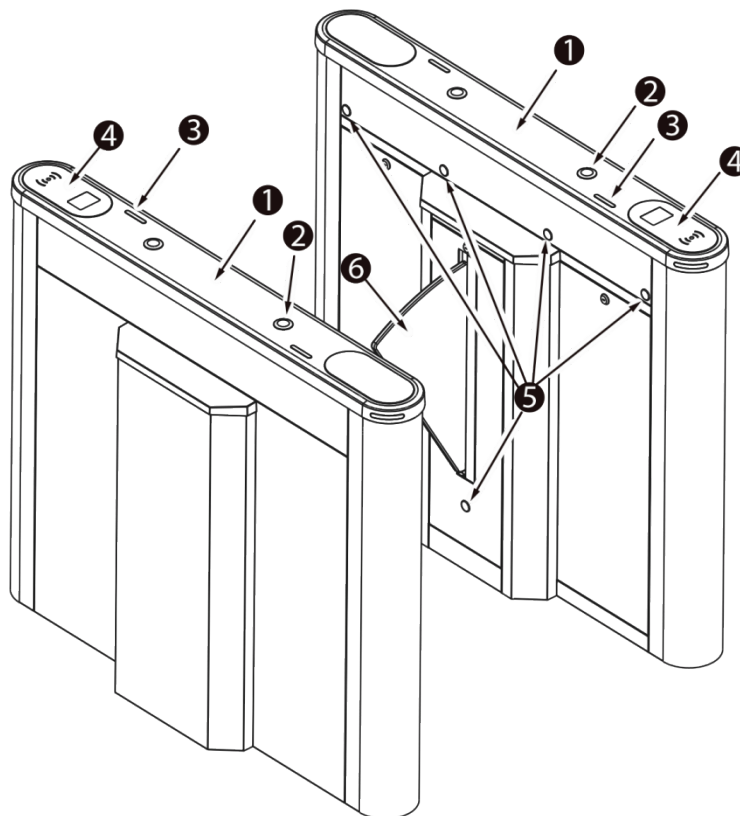

- **Saturn-F1200**

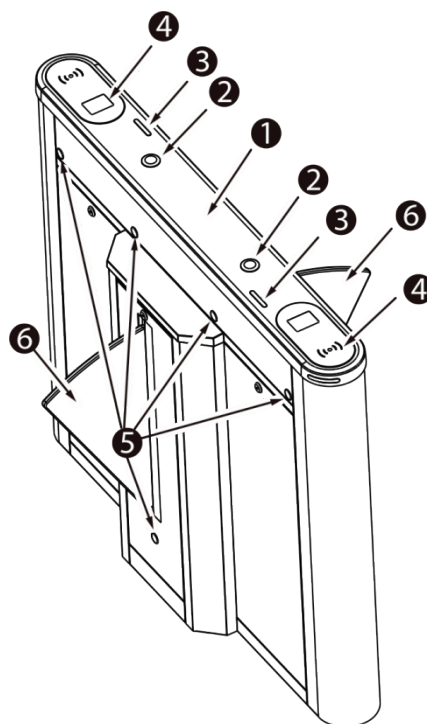

No.	Components	Descriptions
1	Top Lid	Polycarbonate+2.5D tempered glass
2	Hole Plugs	Reserved mounting holes for facial authentication devices.
3	Traffic Indicator	Blue=Standby Green=Normal use Red=Barrier close
4	Verification Area	Card (RFID)/ QR Code modules are available.
5	Infrared Sensor	It detects the position of the pedestrian and plays a role in ensuring safety and protection.
6	Barrier	Retractable flap barrier

1.5 Technical Specifications

Model	Saturn-F1000	Saturn-F1200
Audio Indicator	Speaker	
Visual Indicator	LED Indicators Steady blue=Standby Steady green=Normal use Steady red=Barrier close	
Lane Type	Single Lane	Dual flap barriers for additional lane (with Saturn-F1000)
Lane Width	550mm	
Lane Height	1020mm	
Barrier Movement Type	Retractable flap barrier (Polycarbonate)	
Motor	DC brushless motor	
Movement Speed	Less than 1s per movement (open/close timing)	
Cabinet Lid Material	Cold-rolled SPCC Steel(GB700)	
Lid Material	Polycarbonate+2.5D tempered glass	
IR Sensors	5 pairs	
Motherboard Function	System configuration, access mode configuration, anti-pinch configuration, anti-tailgate configuration, etc.	
Motherboard Communication	Fire Alarm Port (Relay)*1, RS485 Port*1	


Lid Options Authentication Methods	Streamlined under mount options: RFID/QR Code Top mount options with mounting pole: Facial Recognition (compatible with ProFaceX/SpeedFace V5L/Elite Pass)	
Chassis Material	Cold-rolled SPCC Steel (GB700)	
Chassis Colour	White	
Controller	C3, InBio series or third-party devices	
Credential Options	Under mount RFID Reader:(support model: ProID Series) Under mount QR Code Reader: QR500 Top mount facial recognition terminal: ProFaceX/Elite Pass/SpeedFace V5L	
Flow Rate	RFID: 30 passengers per minute; QR Code: 30 passengers per minute; Facial Recognition: 15 passengers per minute	
Accessibility	Standard lane(550mm): Adult and children	
Power Supply	110V/220VAC@50-60 Hz	
Power Rating	10VA(Standby), 40VA(Operation)	
Fire Signal	Input for voltage free contact	
Noise Level	Less than 60dB	
MTTR	Less than 60minutes	
MCBF	5 million	
Weight	Net Weight: 50kg Gross Weight: 60kg	Net Weight: 30kg Gross Weight: 35kg
Dimensions (L*W*H)	1200*306*1020mm	
Dimensions with Packaging (L*W*H)	1345*360*1100mm	
Operating Temperature	-20℃ to 70℃	
Operating Humidity	20% to 85% RH (non-condensing)	
Certifications	CE, FCC	
Ingress Protection Rating	IPX4	
Supported Software	ZKBio CVAccess/ ZKBio CVSecurity (Depends on equipped access controller)	
Safety Features	IR sensor safety detection Logic voltage 24V DC Voltage free contact input for fire alarm fail state	

	Auto opening on power off
Security Features	Anti-intrusion, anti-tailgating, wrong way enter alarm, automatically close door when no one pass
Product Delivery	Pre-assembled
Application Environment	Indoor/Outdoor
Site Preparation	Flat & level finished floor (base plate in options for unfinished floors)
Security Level	Middle
Emergency Mode	Support (door unlock automatically)
Packing Material	Carton box

1.6 Mechanical System

The mechanical system of the turnstile includes the chassis and the core component.

- **Chassis:** It is a carrier where the Traffic Indicator, Infrared Sensor and the Door lock are installed.
- **Core Component:** The core component mainly consists of the Motor, Motor Conversion Plate, Frame, Crank Arm and Barrier.

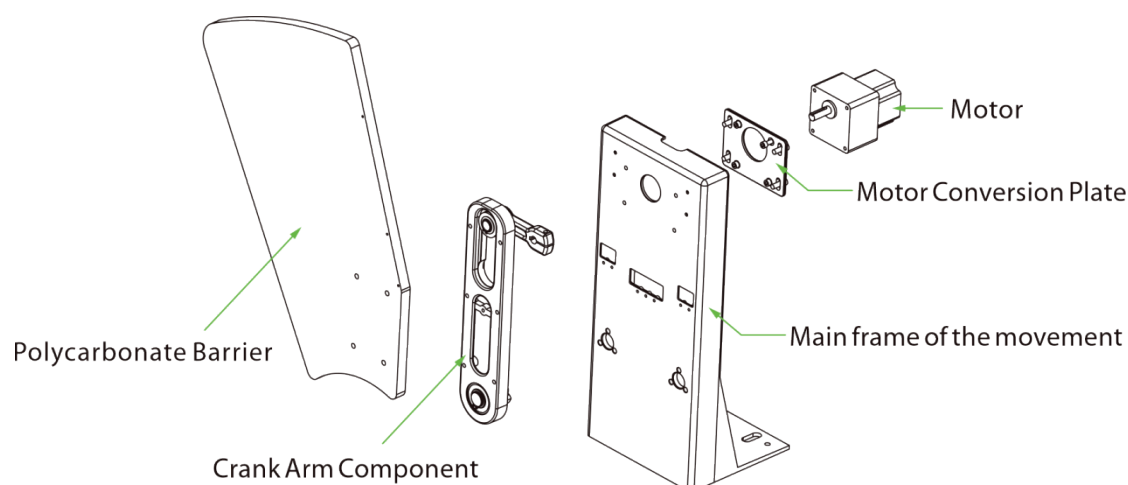

1.7 Electronic Control System

The electronic control system of a turnstile is mainly composed of the Motor Driver, Turnstile Control Board, Traffic Indicator, Alarm and Infrared Sensor.

- **Card Reader:** The reader reads the data in the card and sends it to the Access Controller.
- **Turnstile Control Board:** The Turnstile control board is the system's control center that receives signals from the access controller. The IR performs logical calculation and processing of these

signals and then sends executive commands to the Traffic Indicator, Motor, and the alarm.


- **Tri-color Indicator:** Displays the current passage status of the channel and guiding pedestrians to pass through the channel in a safe and orderly manner. (**Normal status:** Blue; **Passage allowed:** Green; **Abnormal/Error status:** Red)
- **Alarm:** The alarm gives the voice and light alarm if the system detects any unauthorized entry to the passage, false direction entry, and anti-tailgating.
- **Infrared Sensor:** It detects the position of the pedestrian and plays the role of safety protection.

2 Authentication Methods

Users can freely choose to configure the authentication module according to actual needs. The following options are included.


Streamlined Under Mount Options:

RFID only, RFID & QR Code

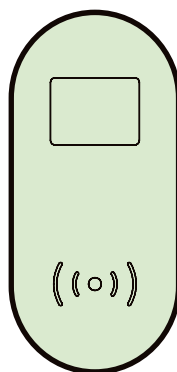

Top Mount Option:

Mounting Pole (Compatible with ProFace X series / SpeedFace V5L / Elite Pass).

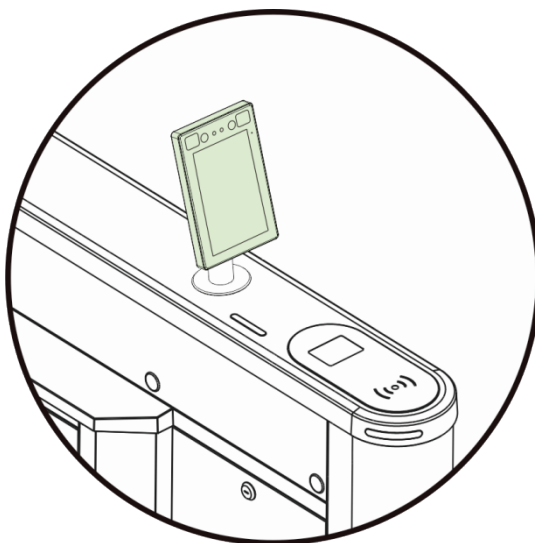


2.1 Card Verification★

When the device is configured with a card reader module, the Card Verification mode compares the card number in the card induction area with all of the card number data registered in the device and sends it to the Access Controller.

When a user presses his / her card on the card verification area, the device enters card authentication mode.

Verification is successful:

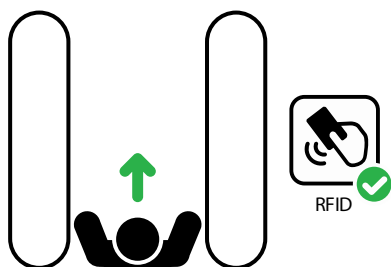



Verification is failed:



2.2 QR Code Verification★

The QR code Verification mode is to scan the QR code on the user's mobile phone through the QR code scanner and compare the data with the registered QR code, and then sends it to the Access Controller.

When the user places the mobile phone displaying with the QR code on top of the QR code scanner, the device enters the QR code authentication mode.

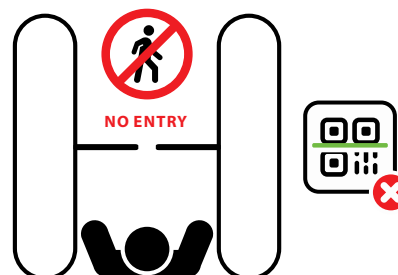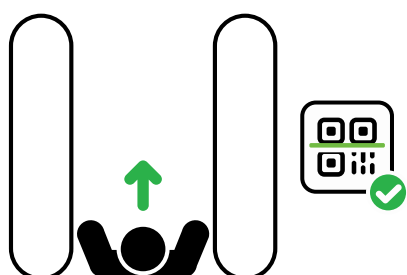


2.3 Facial Verification★


When the device is configured with a facial recognition module, in facial verification mode, the device compares the collected facial image with all the facial data registered in the device and sends it to the Access Controller.

During the verification process, please try to keep your face facing the camera. When registering your face, please face the camera and remain still until the entry is successful.

Verification is successful:

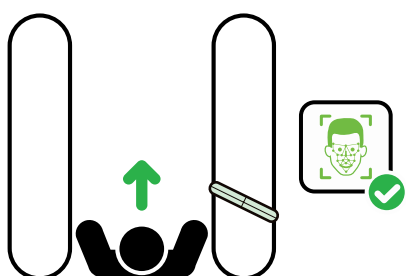

Verification is failed:

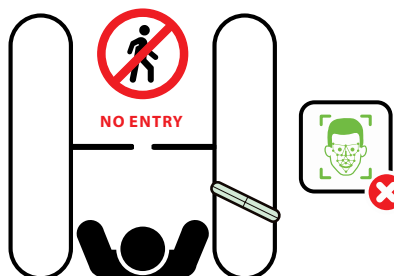

3 Installation

3.1 Installation Tools


- Tapeline
- Marker Pen
- Pencil
- Percussion Drill
- Screwdriver
- Wrench
- Hex Wrench
- Cutting Machine

3.2 Installation Requirements

1. It is recommended that the turnstile must be installed on a horizontal solid platform with a height of **2.0" to 3.9"(50mm to 100mm)**.
2. It is recommended that the turnstile should not be used in the corrosive environment.
3. Make sure that the ground wire of the system is securely connected to avoid personal injuries or other accidents.
4. After installation, check if the connection has been done correctly at the connecting points of the ground wire, at the connector assemblies and wiring points of the circuits, as well as at each movable part of the turnstile. Any loose nuts, screws and other fasteners should be tightened in time to avoid any failures caused by long-time operations.

3.3 Installation Environment


1. Before installation begins, prepare installation tools, check the device and the accessories, and clear the installation base.
2. Make sure that the appliance is mounted on a concrete surface or other non-flammable surfaces.
3. The installation position of the turnstile depends on its size. A distance of **3.9"(100mm)** between the turnstile and the wall needs to be reserved for ease of opening the top lid of the turnstile to perform maintenance and adjustment. The reference figure is shown below:

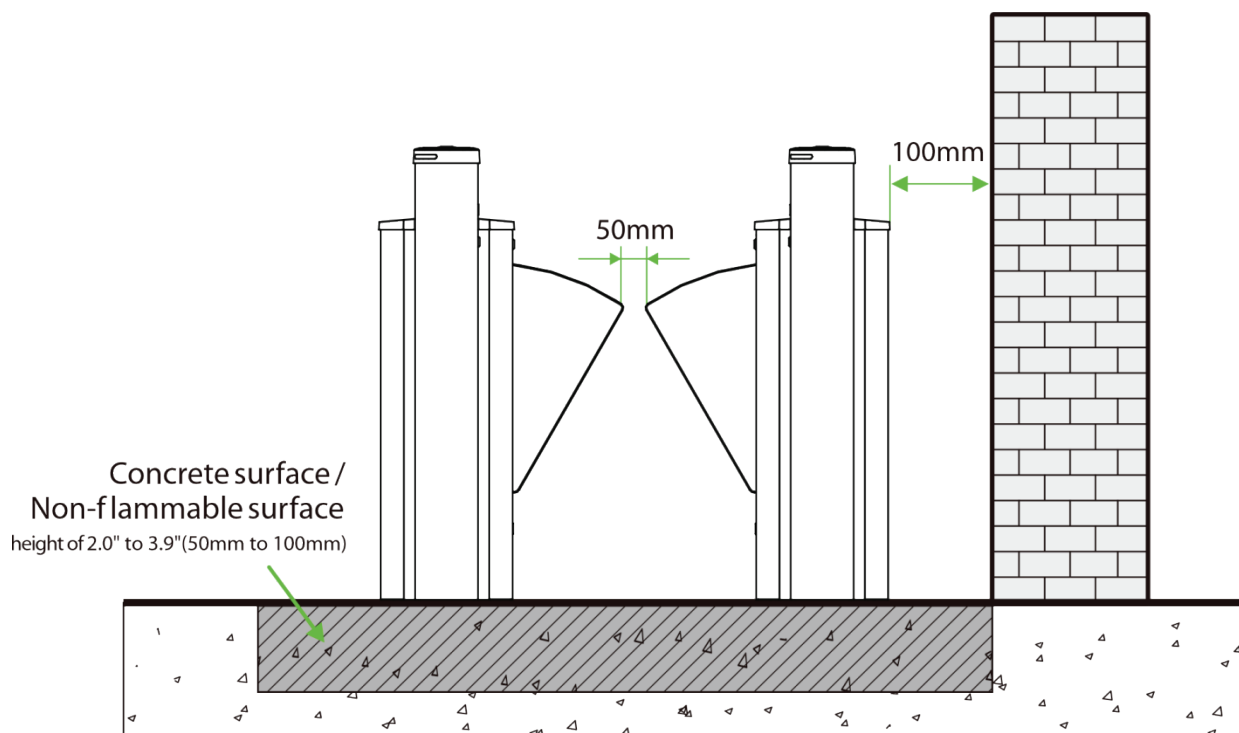


3.4 Installation Cabinet

Step 1 Remove the Top Lid and Chassis Cover

1. As shown below, use the key to open the chassis covers on both sides and remove them.

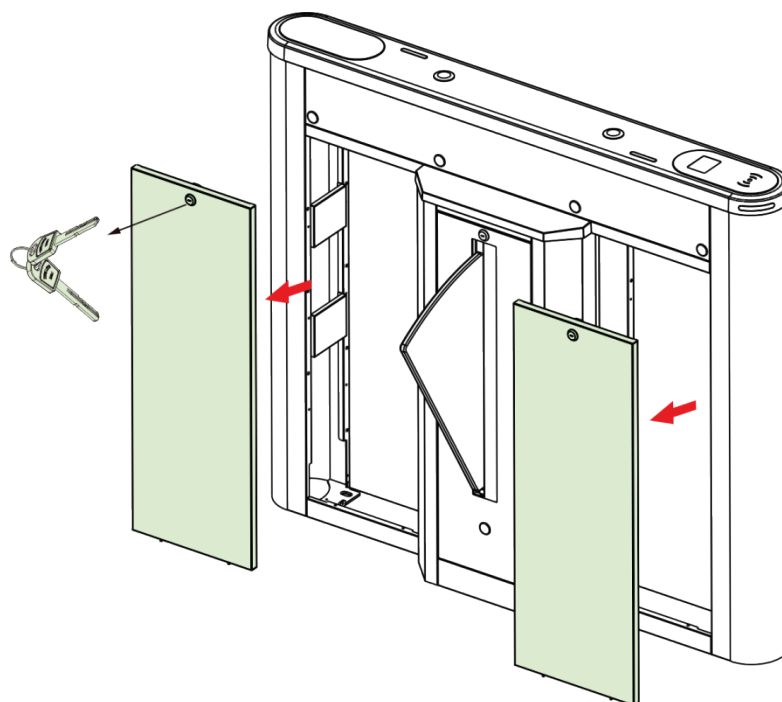


2. Loosen the four screws in the positions shown in the picture below. Then remove the top cover upwards.

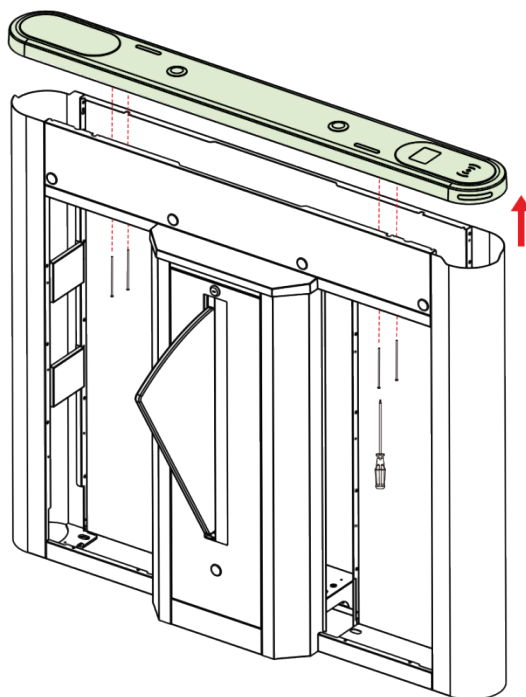


Step 2 Marker Position

Draw the location of the cabinet with a marker and mark each location of the mounting holes. There will be a total of four mounting holes and two wire holes per cabinet.

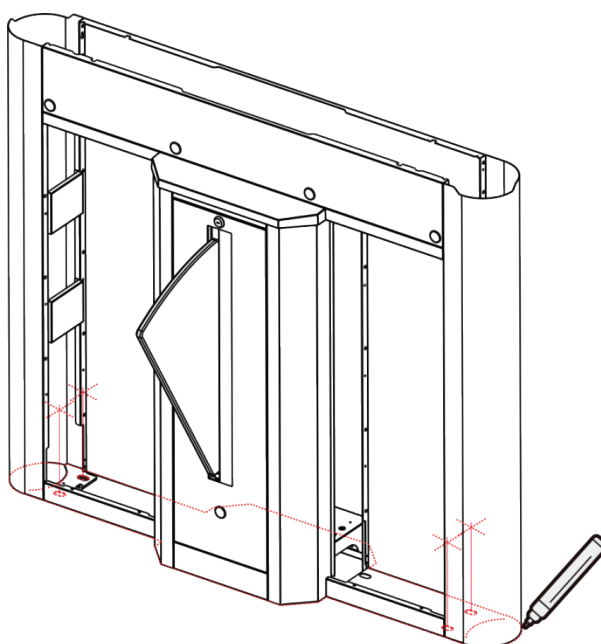


Step 3 Determine the mounting location

1. Please refer to the user's manual and complete the **power-on self test** operation before installation.
2. Then place the cabinet according to the mounting distances shown in the diagram below. Take care to measure the distance between the bottom inside walls of the cabinets on the entrance side and exit side of the channel and make sure that the measurements are consistent.

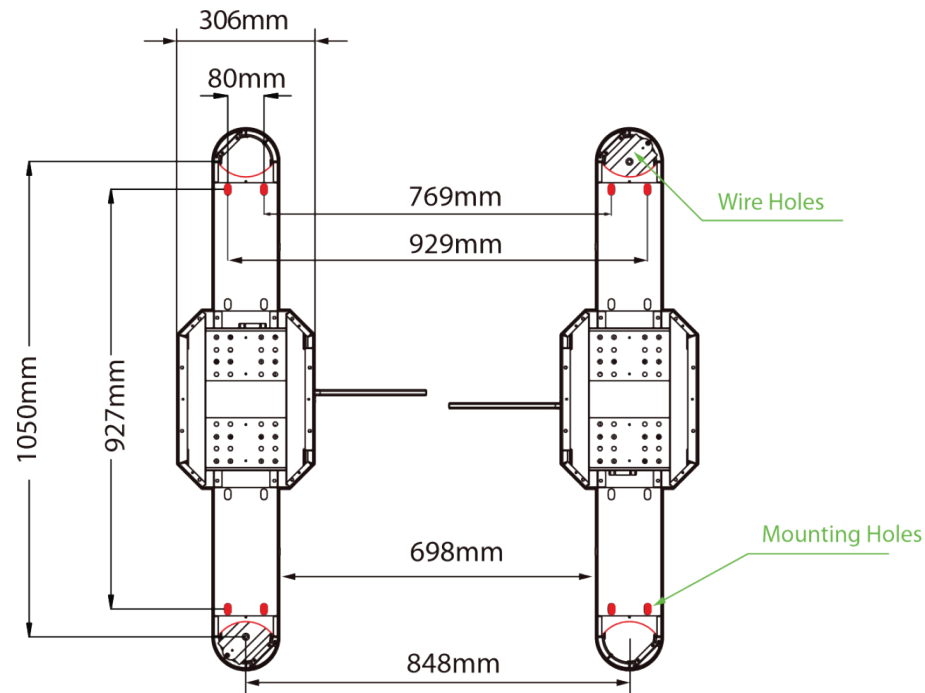


Step 4 Drill holes and place bolts

1. Using a concrete drill bit, drill the mounting holes 2.4" (60mm) in depth at the center of each marked location.
2. Then insert the bolts vertically into the mounting holes as shown at right.
3. Ensure expansion bolts are properly seated by applying three to five light taps with a rubber mallet until flush with the concrete surface. Verify anchor stability before proceeding.

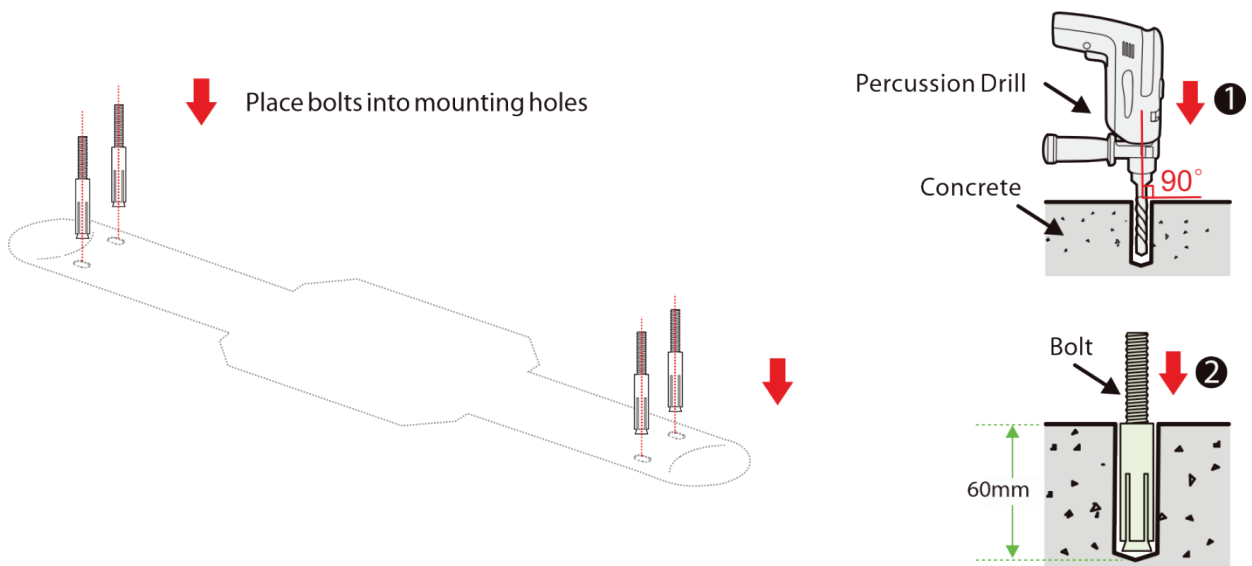

Step 5 Wireway laying


1. Dig a recess of **2.0" (50mm)** depth between the wire holes on both sides of the channel with the dimensions shown below. Recesses can be dug at positions **1** and **2**.
2. Then lay two **0.8" to 1.0" (20 to 25mm)** diameter PVC pipes as shown below.
3. After threading the cable out of the PVC pipe, pour concrete to fix it in place.

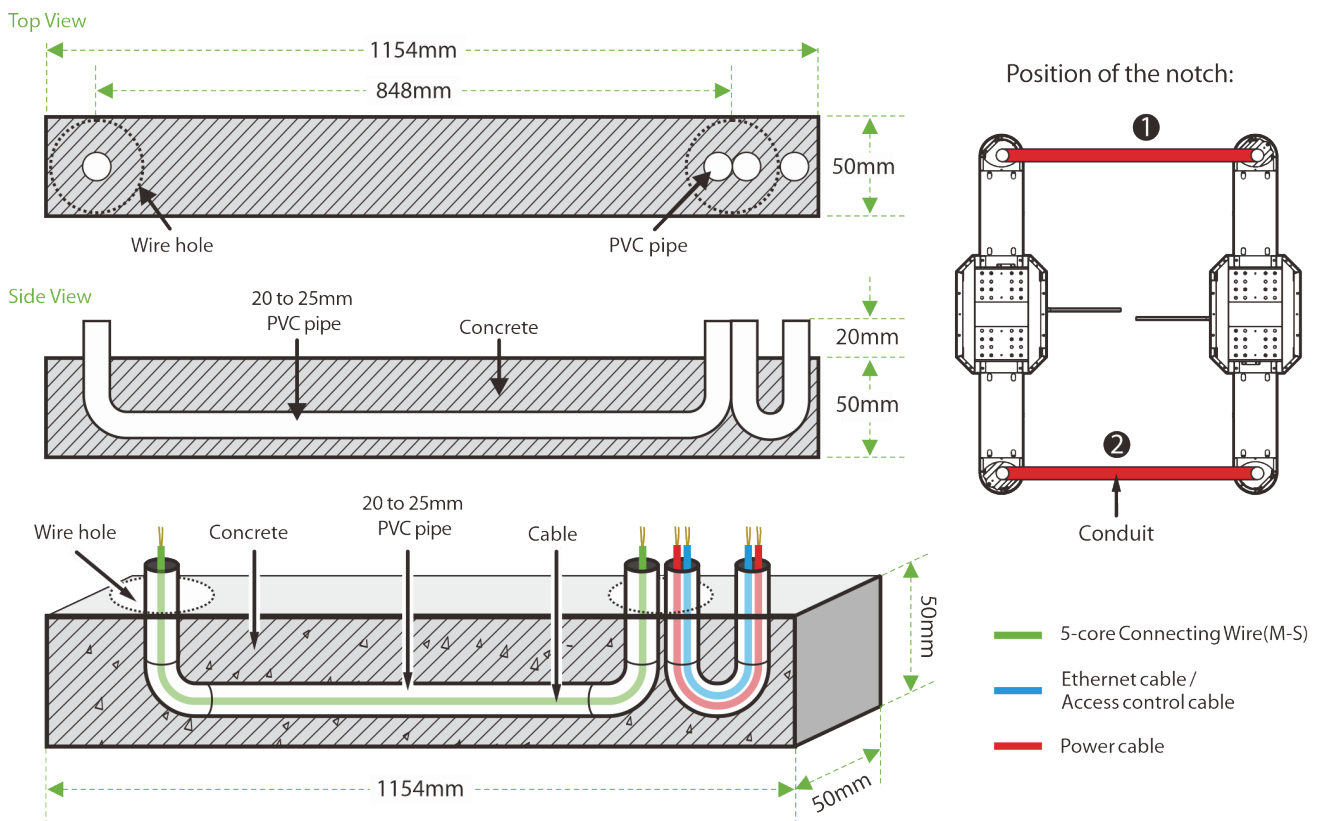

Step 6 Fixed cabinet


1. After laying the PVC pipe, place the cabinet alignment bolts back into the mounting position.

2. Then insert the eight washers and nuts into the bolts one by one.
3. Tighten the nuts to hold the cabinet in place. Don't tighten it completely until after you're sure it won't move anymore. The finished result is shown below:

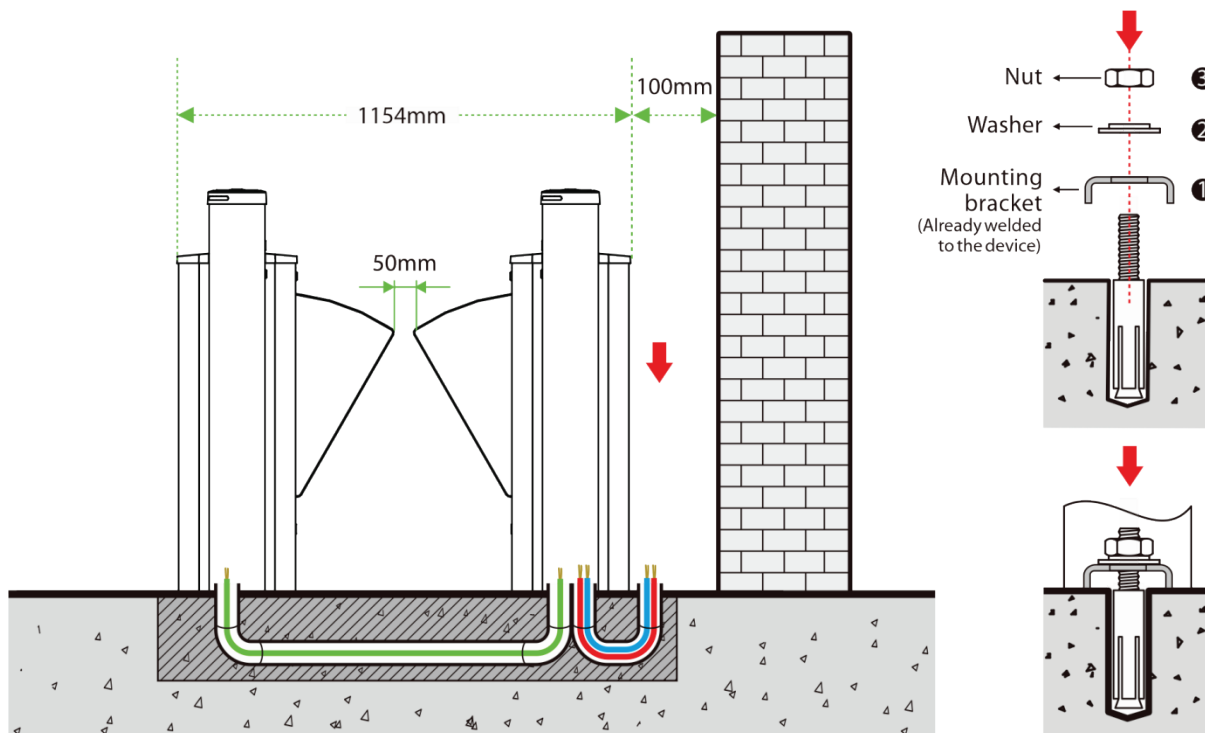


Step 7 Marking the warning line

1. It is recommended that warning lines be marked on the ground and used to alert users.
2. A warning line can alert users to wait outside the line until the previous user completes the verification process and passes through the turnstile.

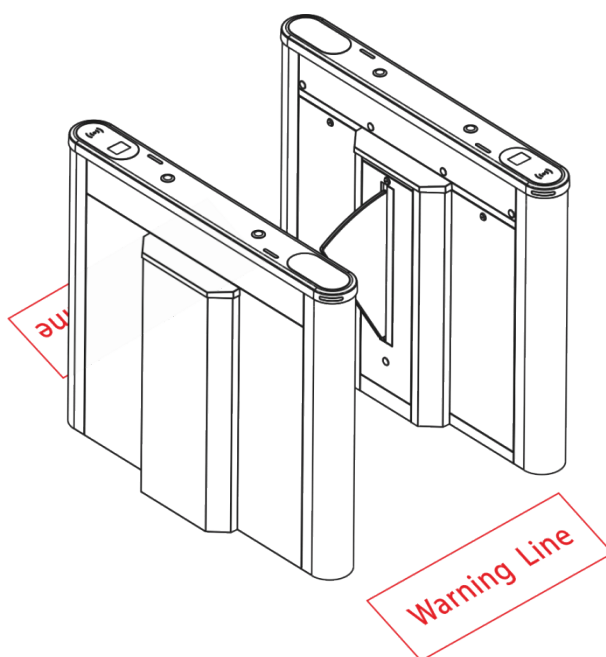


3.5 Facial Authentication Device Installation (Surface Mount)

1. Remove the top cover plate and route the unit's cables through the pre-drilled mounting holes.
2. Pass the mounting bracket through the mounting holes.
3. Place the gasket and nut and tighten the nut to secure the unit.
4. Adjust the unit to a suitable angle.

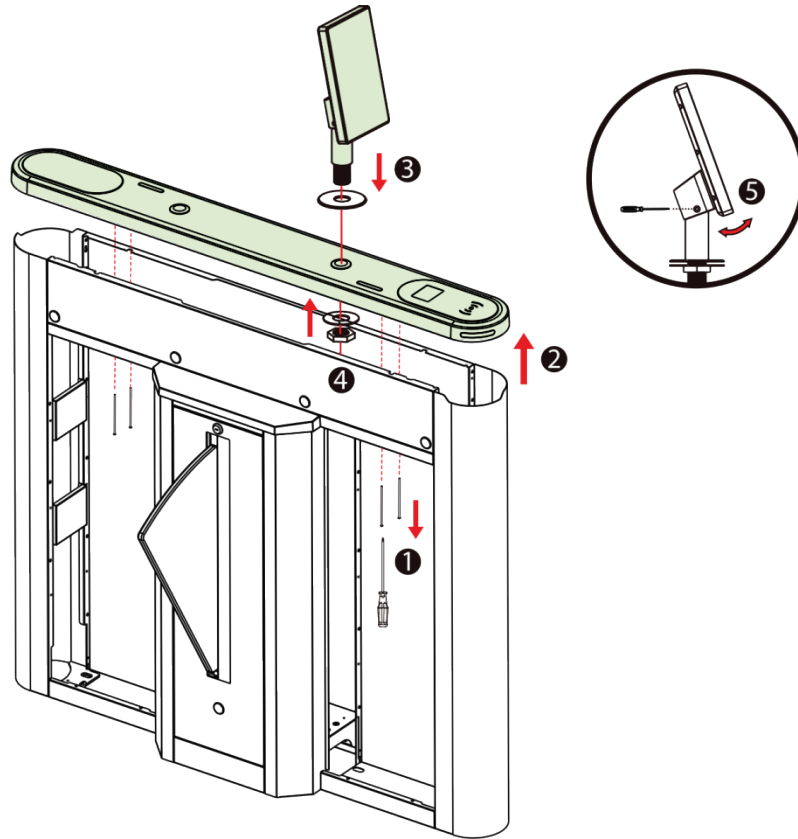

4 Terminal Description


4.1 Main / Sub Board

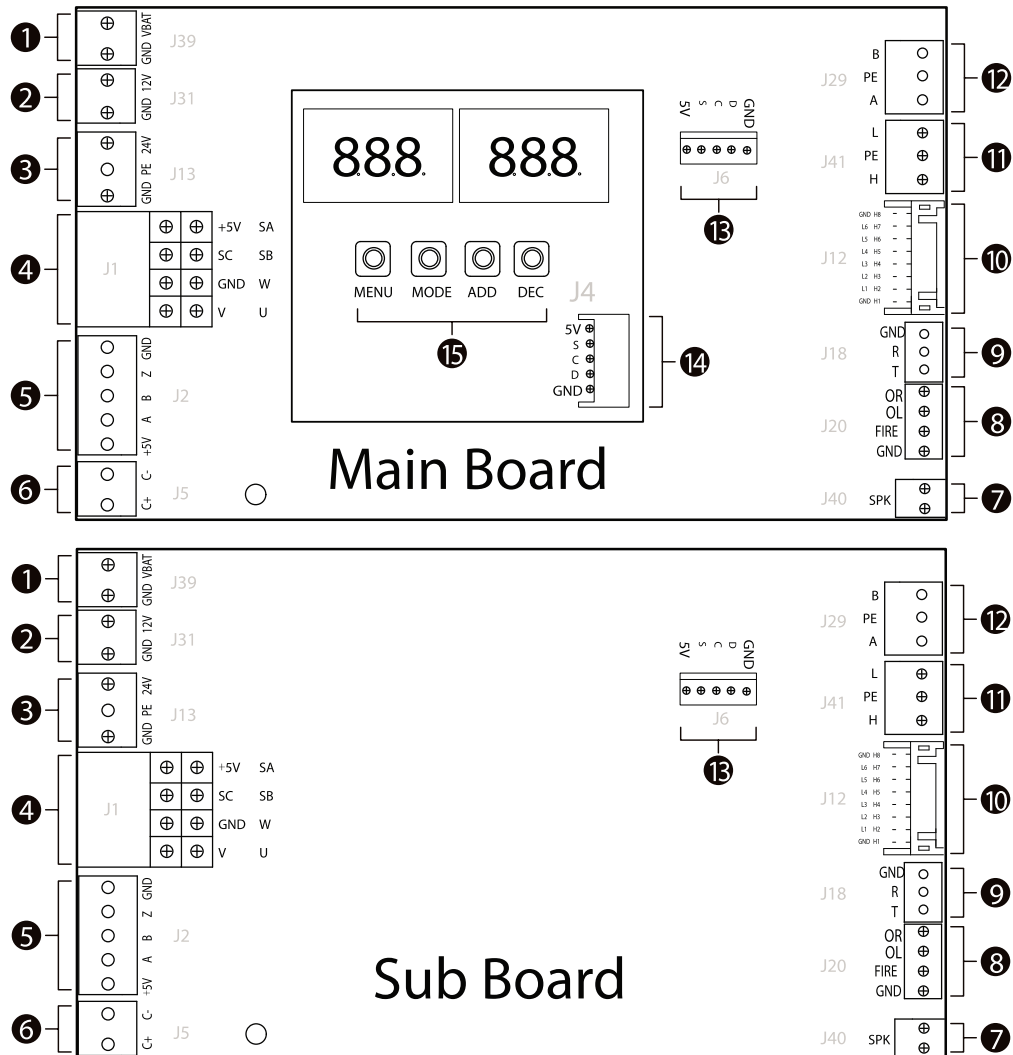

NO.	Terminal	Descriptions
1	GND, VBAT	Fire panel interface
2	GND, 12V	12V DC power supply input
3	GND, PE, 24V	24V DC power supply input
4	+5V, SC, GND, V SA, SB, W, U	Motor interface
5	+5V, A, B, Z, GND	Encoder interface
6	C+, C-	Clutch
7	SPK	Speaker

8	OR, OL, FIRE, GND	Fire Control Port, Right Open, Left Open
9	GND, R, T	RS232 communication
10	GND, L1-L6, GND; H1-H8	Interface board infrared communication interface
11	L, PE, H	CAN communication interface
12	B, PE, A	RS485 communication
13	5V, S, C, D, GND	Keypad interface
14	5V, S, C, D, GND	Keypad interface
15	MENU, MODE, ADD, DEC	Control buttons for setting menu parameters

4.2 IR Sensor Board

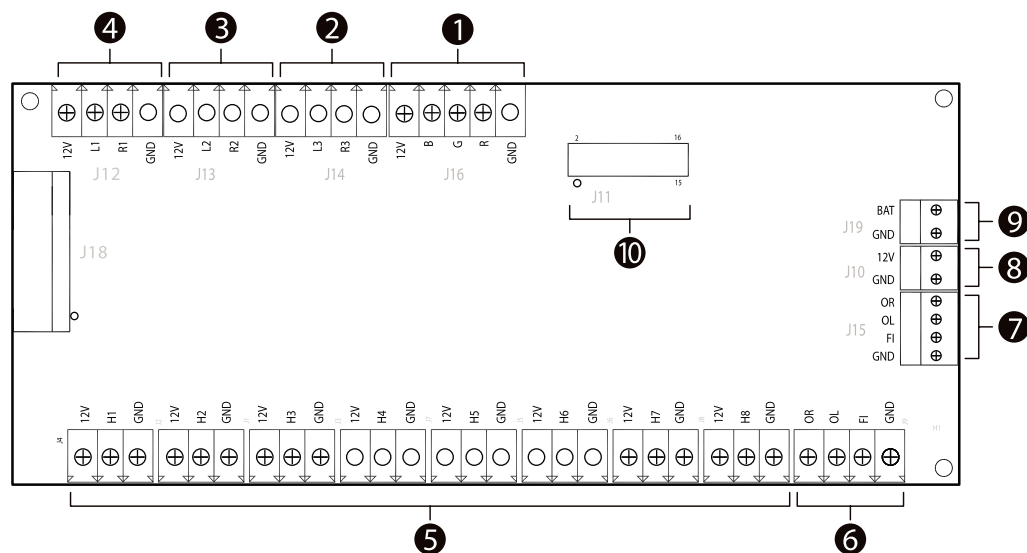


NO.	Terminal	Descriptions
1	12V, B, G, R, GND	Traffic indicator light interface
2	12V, L3, R3, GND	Top light interface
3	12V, L2, R2, GND	Exit indicator light interface
4	12V, L1, R1, GND	Entry indicator light interface
5	12V, H1-8, GND	Infrared sensor interface
6	OR, OL, FI, GND	External fire port
7	OR, OL, FI, GND	Alarm, fire opening port
8	12V, GND	12V DC power supply input
9	BAT, GND	Backup firefighting power interface
10	J11	Main board communication interface

5 Wiring Instructions


5.1 Main-sub Location

The positions of the Main and sub corresponding to single-lane, dual-lane and multi-lane are shown in the figure below.

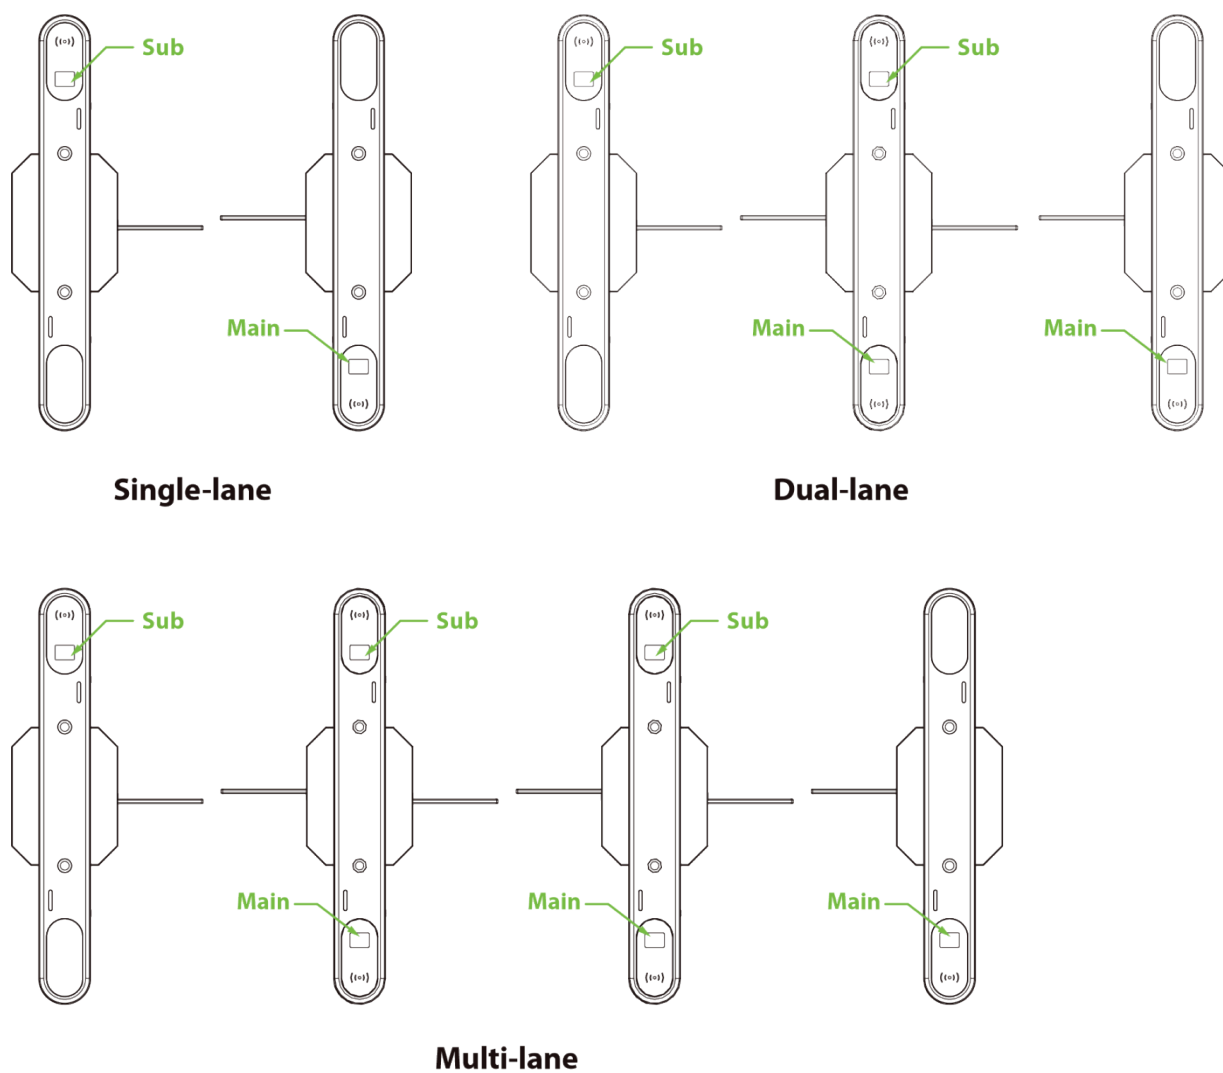


5.2 Slotting Position

For the different channels, the slotted locations are shown below.

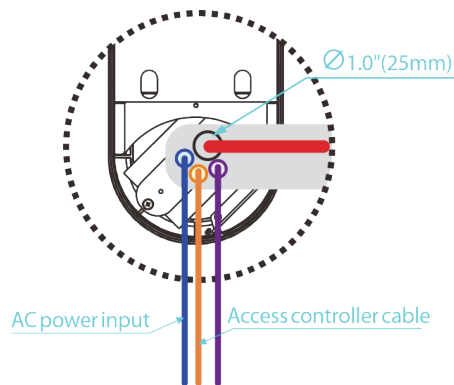

Conduit hole maximum can fit 1" conduit and 2 pcs $\frac{1}{2}$ " conduits.




1. 5-core connecting wire and LAN cable through 1" conduit together.
2. Folded 5 pin connector during through conduit.

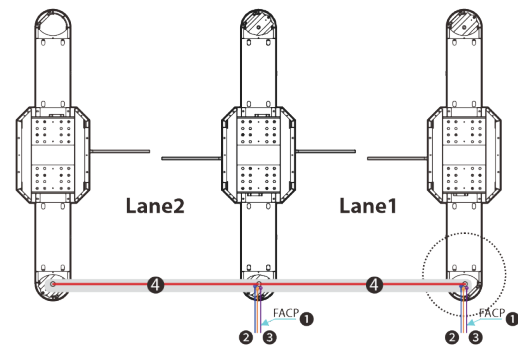

- ① $\frac{1}{2}$ " conduit reserved for FIRE/Relay input
- ② $\frac{1}{2}$ " conduit reserved for AC 110V/220V input
- ③ $\frac{1}{2}$ " conduit reserved for reader/access controller wiring
- ④ 1" conduit used for connection wire harness between M/S

5.3 Wiring Methods

The wiring principle is to connect the Main device to the sub device and communicate via the ECU-panel connection wire. Each Main device is then powered individually. The following diagram shows how the different channels are wired.

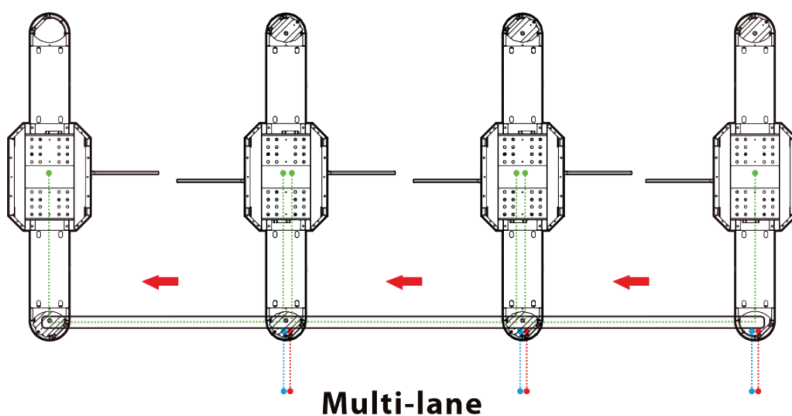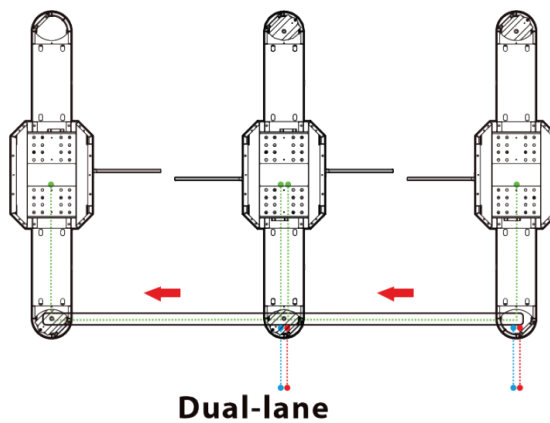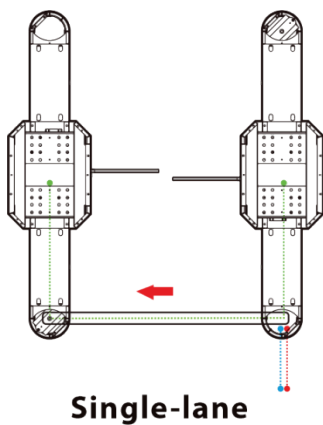


Wiring Instructions

- 5-core connecting wire(M-S)
- AC110/220V input
- Ethernet cable /Access control cable


5.4 Power Wiring

WARNING: Before connecting or servicing the power supply, ensure all power sources are **disconnected** to prevent electric shock.

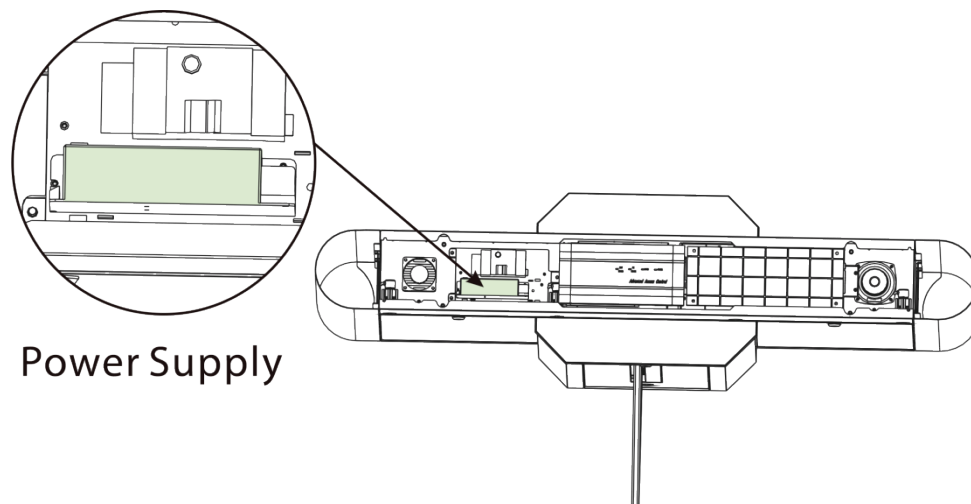


- The primary power supply (110VAC or 220VAC) must be hard-wired and properly grounded. Ensure the device voltage matches your local supply.
- All wiring should be performed by a licensed electrician in accordance with local electrical codes and standards.
- Always use the recommended wire gauge and approved components as specified in this manual.
- **Note:** Failure to follow these instructions may result in equipment damage, electric shock, or fire.

5.5 System Wiring Diagram

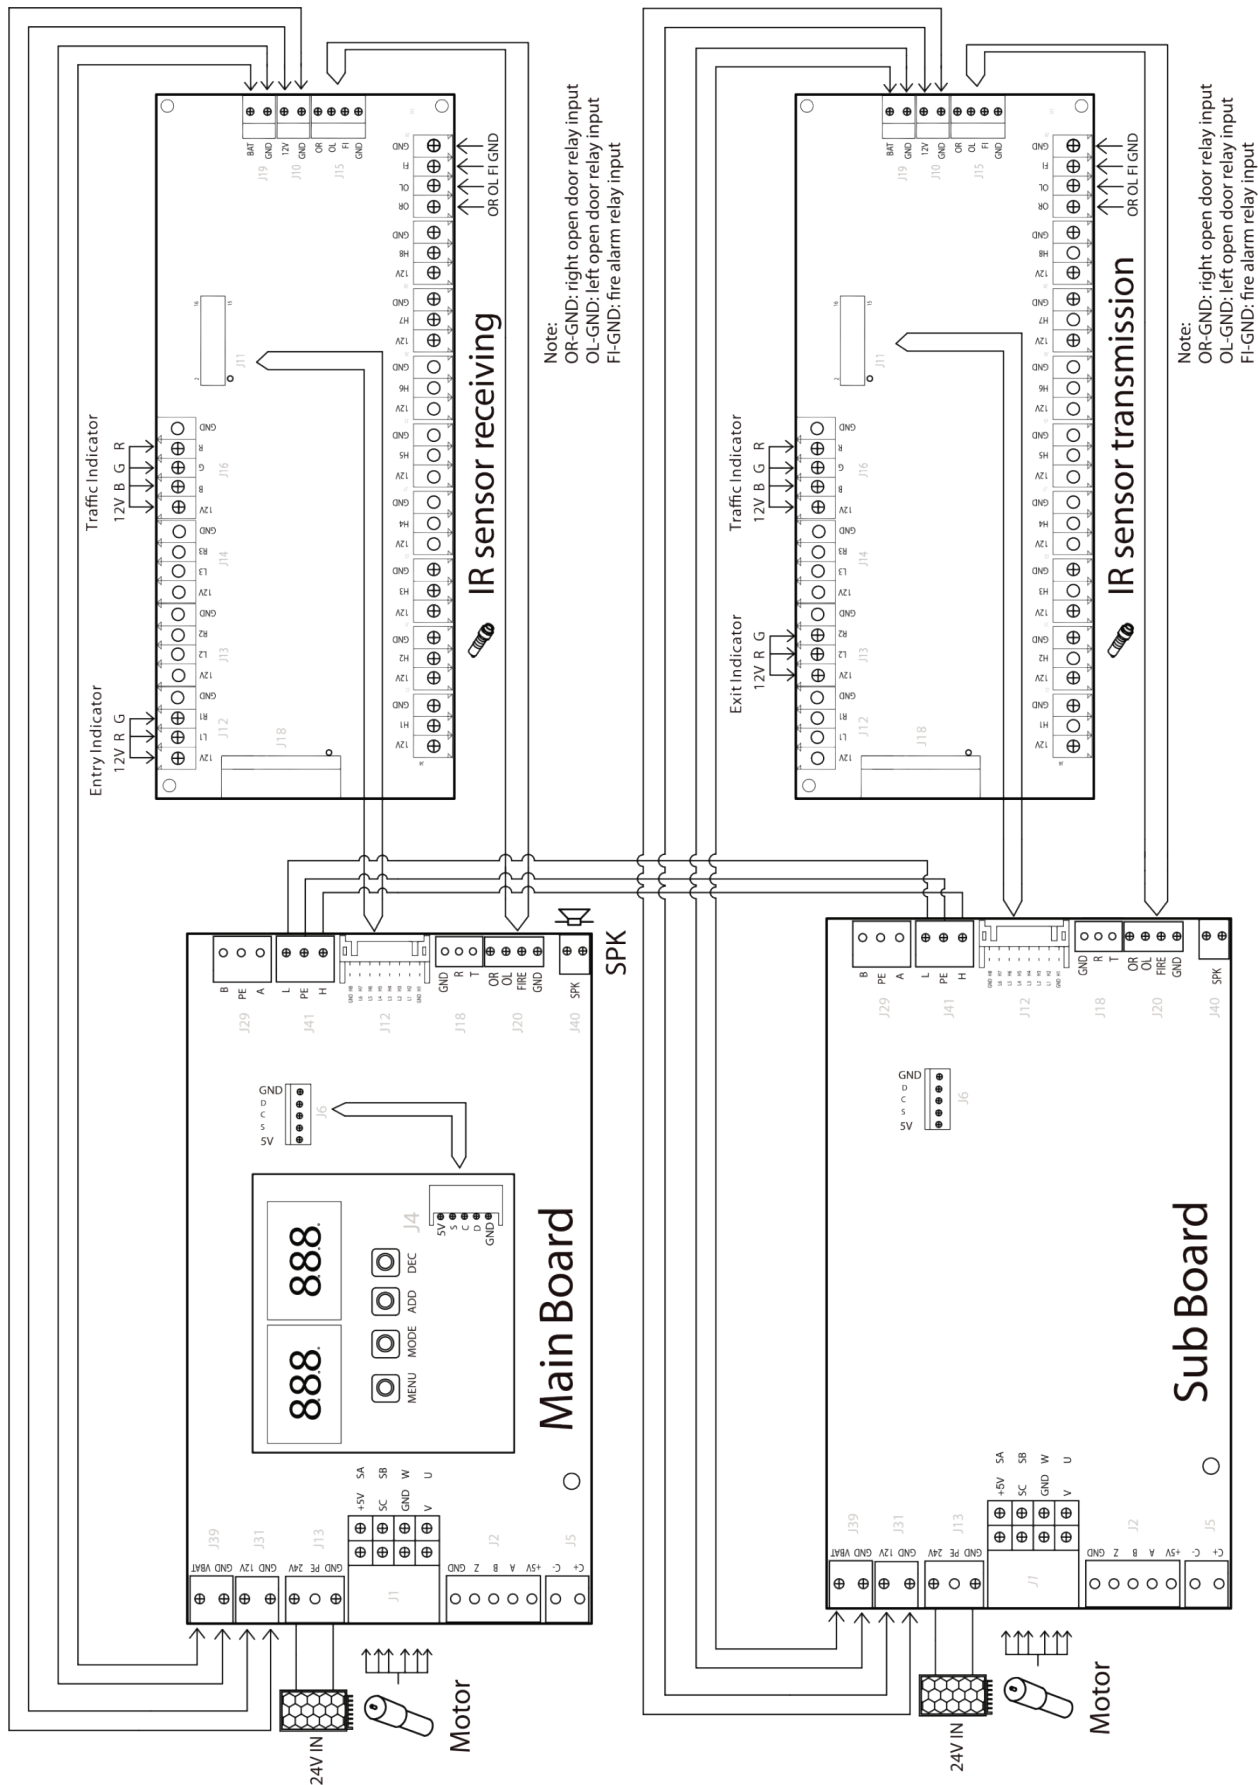

6 Operation Process

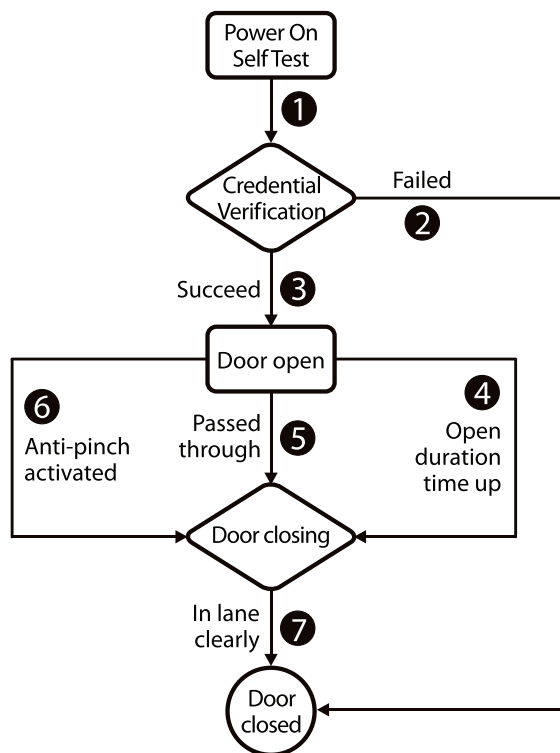

1. POST (Power On Self Test)

When powering up the unit, wait approximately 30 seconds for the system to perform a POST (Power On Self Test) procedure. If no problems are detected, the unit will operate normally. If a fault is detected, the system will display a relevant message on the LCD display so that the user can quickly understand and solve the problem. (Reference [5.4 Power Wiring](#) for connecting the power supply.)

2. Credential Verification

After the device power-on self-test is completed, it enters the standby state.

When the user places a valid card in the swipe area, i.e. the device recognizes a valid card. The LCD display will show success and a buzzer will give a positive audible indication to the pedestrian that it has been successfully validated. The card reader then sends a signal to the access controller requesting permission to pass through the channel. The access controller will send a signal to the turnstile control panel. After receiving the signal from the card reader and the Infrared Sensor, the Turnstile Control Board will send valid control signals to the servo motor driver, and will open the barrier.

1) Verification Success

When the verification is successful, the door will open.

2) Verification Failure

When verification fails, the door remains closed.

Note: If the system is in forbidden passing mode, the traffic indicator light will turn red, and the Turnstile Control Board will not accept card signals.


3. Passed Through

After the passenger passes the channel in the direction indicated by the flap barrier, the Infrared Sensor will keep detecting the movement of the pedestrian throughout the passage and continuously monitors the passenger until they have exited the passage.

If the pedestrian enters the passage but forgets to verify identification, or if the card by the pedestrian is invalid, the system will prompt an audible alarm to warn the pedestrian to stop passing. The alarm signal will not be cancelled until the passenger retreats from the passage. The pedestrian can pass through the passage only after a valid card is successfully verified.

7 Machine Operation

7.1 Operation Buttons Description

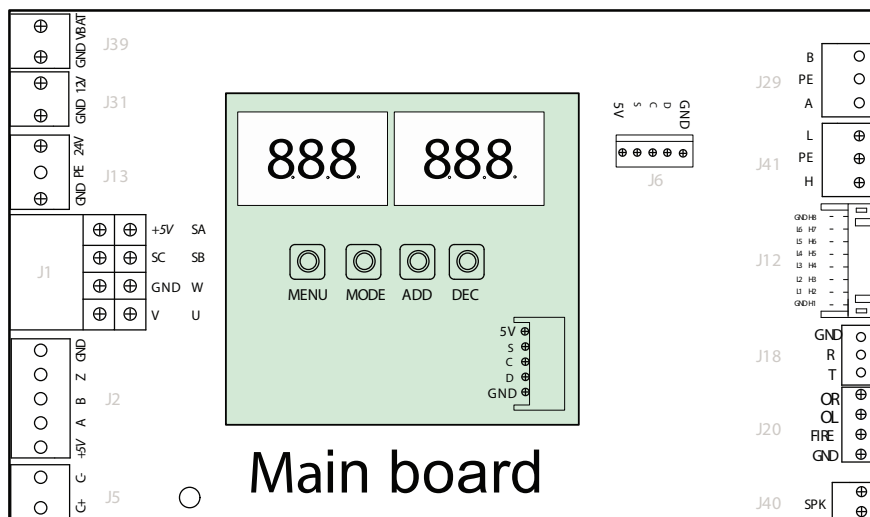

There are 4 keys on the Main motor driving controller, "MENU", "MODE", "ADD" and "DEC".

Operation Buttons Description:

- **MENU:** Used to access the Settings menu and confirm modified values.
- **MODE:** Returns to the previous menu and cancels the current operation.
- **ADD:** Navigate to the upper menu item and increase the value.
- **DEC:** Navigate to the lower menu item and decrease the value.


7.2 Menu Parameter Settings

01EXXX : Display Mode


- **01E000:** Displays current position of the gate
- **01E001:** Infrared input signal
- **01E002:** Controls input signal
- **01E003:** Test mode (the digital LED displays "---" in the test mode)
- **01E004:** Version number (Defaults to 01E004 after power failure and reboot)

02EXXX : Device Mode


- **02E001:** Two-way controlled, both need verification (Default)

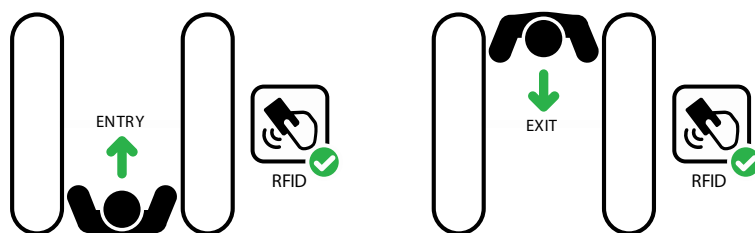


- **02E002:** In need verification, out free

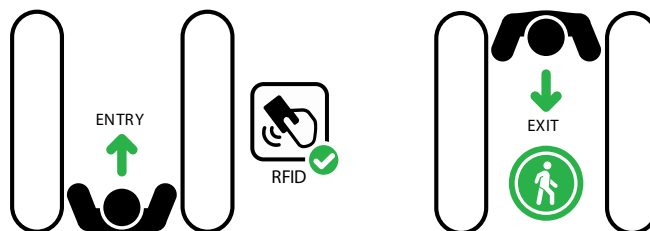


- **02E003:** In free, out need verification

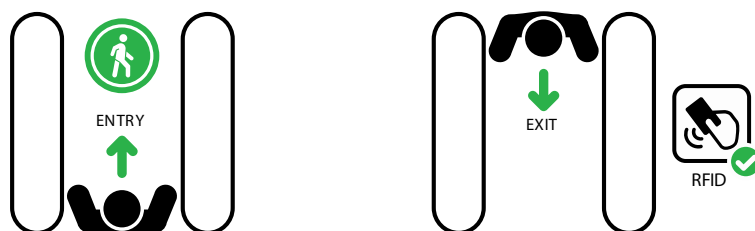


- **02E004:** Two-way free

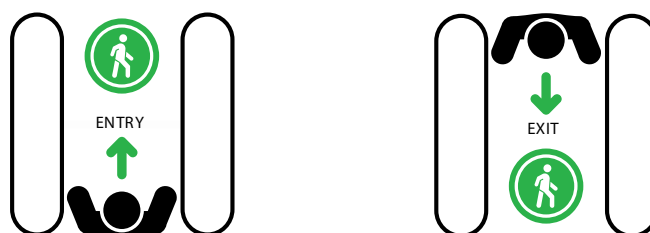

- **02E005:** In need verification, out prohibited

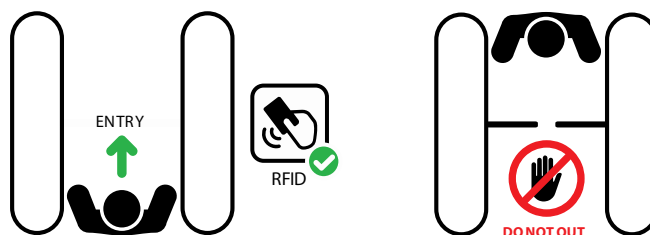

- **02E006:** In prohibited, out need verification

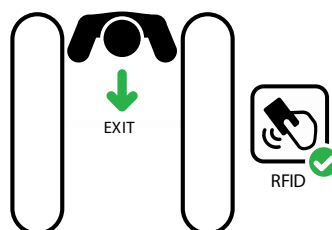

- **02E007:** In free, out prohibited



- **02E008:** In prohibited, out free



- **02E009:** Two-way prohibited




- **02E010:** Two-way normally open



03EXXX : Gate Opening Speed

To adjust the gate opening speed, you can set a larger number for a faster opening. The Gate Opening Speed can be configured between **5** and **32**, with a default value of **22**.

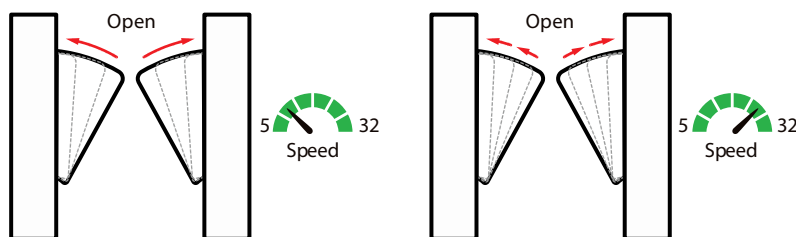

04EXXX : Gate Opening Deceleration Distance


A larger number increases the deceleration time, enhancing the stability of the wing arm operation. The Gate Opening Deceleration Distance can be set between **0** and **50**, with a default value of **18**.

05EXXX : Gate Opening Compensation Speed

This setting is used when the wing arm cannot fully open or shakes during operation. A higher value increases the compensation speed. The Gate Opening Compensation Speed can be set between **0** and **50**, with a default value of **18**.

06EXXX : Gate Closing Speed

To adjust the gate closing speed, you can set a larger value for a faster closing. The Gate Closing Speed can be configured between **5** and **32**, with a default value of **22**.

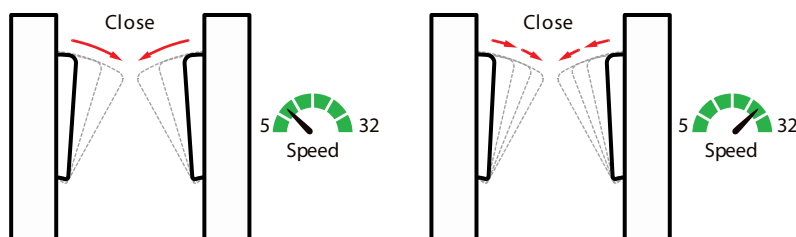

07EXXX : Gate Closing Deceleration Distance

A larger number increases the deceleration time, enhancing the stability of the flap barrier operation. The Gate Closing Deceleration Distance can be set between **0** and **50**, with a default value of **18**.

08EXXX : Gate Closing Compensation Speed

This setting is used when the wing arm cannot fully close or shakes during operation. A larger number results in faster compensation speed. The Gate Closing Compensation Speed can be set between **0** and **50**, with a default value of **18**.

09EXXX : Main and Sub Settings

This setting is used to set the Main and Sub device. This setting is not changed after factory restoration (24EXXX).


- **09E001** : Main device
- **09E002** : Sub device

10EXXX : RS485 Address

It can be set between **0** to **254** and the default value is **0**.


11EXXX : Open Duration Time

The valid time period after a successful verification can be configured. Once the set time is reached, the flap barrier will automatically close. The larger the value set,, the longer the valid time. The valid value ranges from **2** to **60** seconds, with a default value of **5** seconds.

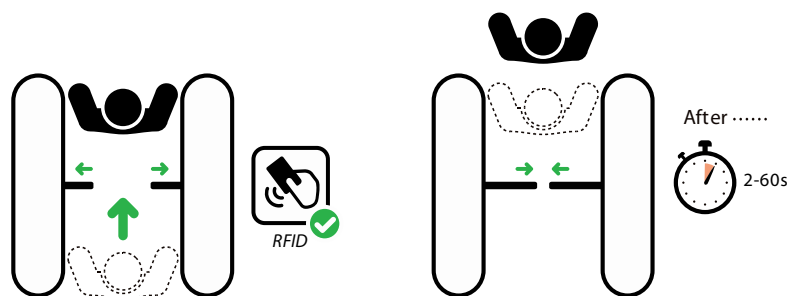

12EXXX : Gate Closing Delay Time

Set the delay time of gate closing after passing. The valid value for gate closing delay time can be set between **0** to **60** seconds and the default value is **0** seconds.

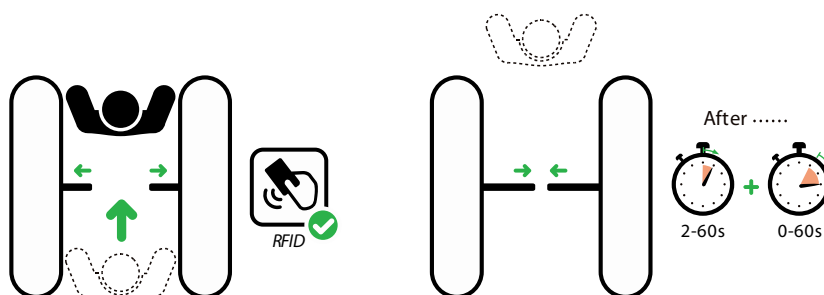

13EXXX : In Place Position Adjustment


This setting is used to adjust the wing arm to close in place/open in place. **Note:** The flap barrier needs to be in the corresponding position during commissioning.

- **13E001** : Adjustment for fully closed position
- **13E002** : Adjustment for fully open position

14EXXX : Gate Opening Memory

When more than two legal access signals are given at the same time (including the same direction and the opposite direction), the system will remember all pass requests and complete each pass in turn.


- **14E000**: Close (Default)
- **14E001**: Open

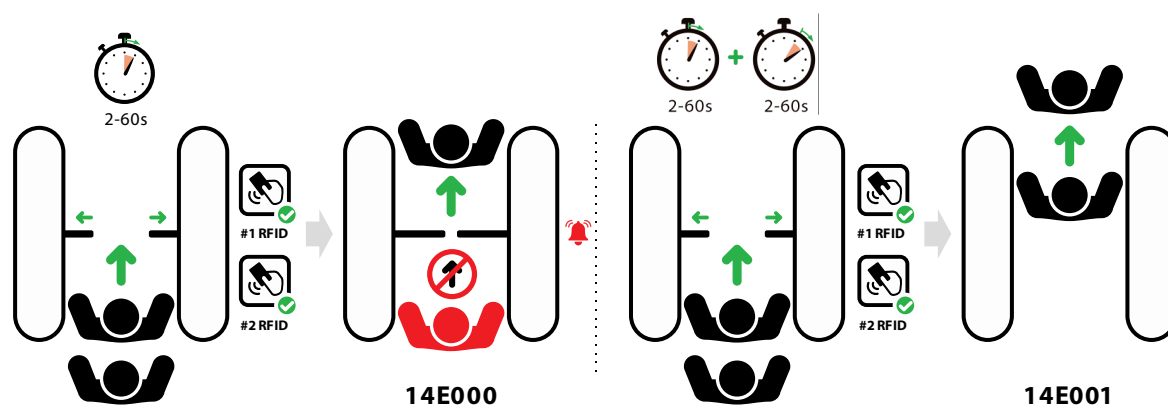

15EXXX : Authentication in Lane

It allows pedestrian verification during the IR sensor triggered.

- **15E000**: Allow (Default)
- **15E001**: Forbidden

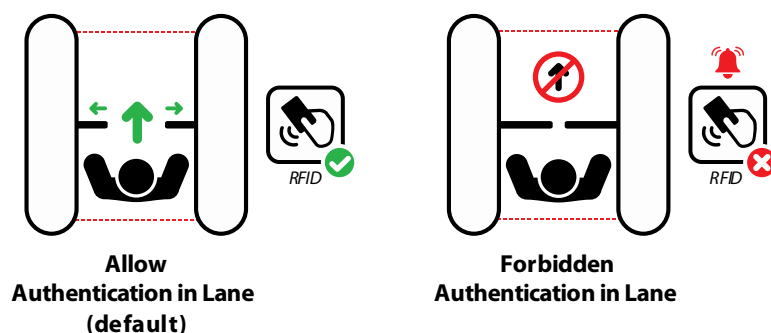

16EXXX : Volume Setting


Volume Setting is used for adjusting the volume of the device. The higher the value is set, the louder the volume. The valid value for Volume Setting can be set between **1** to **100** and the default value is **70**.



17EXXX : Close Alarm Tone

When the alarm tone is turned off, the Turnstile will not emit an alarm tone when encountering an alarm situation. The following figure shows an example of the prohibition of authentication in lane:

- **17E000:** Close
- **17E001:** Open (Default)

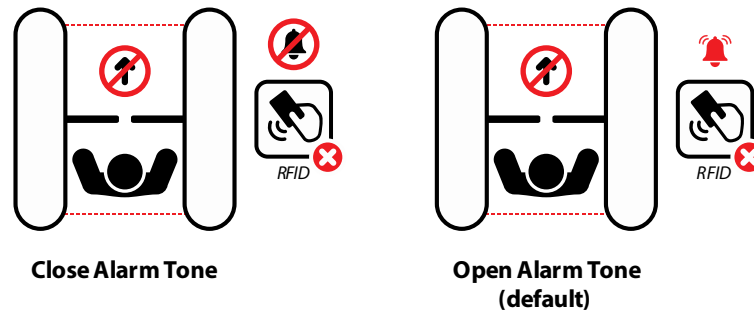


18EXXX : Infrared Logarithm

This setting is not changed after restoring the factory settings (24EXXX).

- **18E001 to 18E008:** From 1 to 8
- **18E022:** Change to 22 if greater than 8

19EXXX : Stay Duration Time

Set the duration of stay in the channel after successful verification. After exceeding the set time, the device will alarm to indicate. The valid value for Stay Duration Time can be set between **5** to **30** seconds and the default value is **10** seconds.

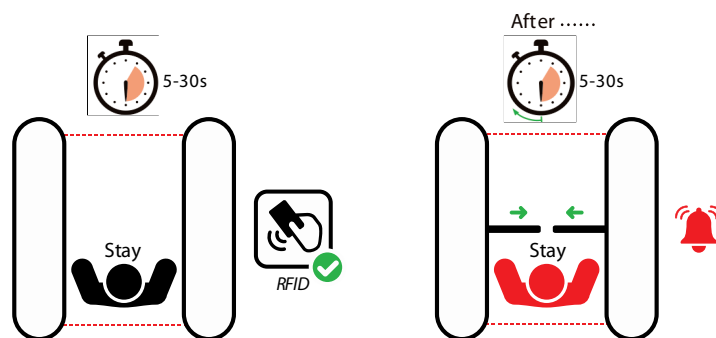

20EXXX : Force Adjustment

The larger the number, the greater the efficiency of the gate opening and closing force. The valid value for Force Adjustment can be set between **10** to **100** and the default value is **40**.

21EXXX : Fire Signal Setting

According to the external fire device, select the corresponding type of trigger mode.

- **21E000:** Right open (Default)
- **21E001:** Left open

22EXXX : Locking travel (Not valid for flap barrier)


23EXXX : Locking method (Not valid for flap barrier)

24EXXX : Restore Factory Setting

- **24E001:** Restore factory settings
- **24E002:** Restart

25EXXX : Anti-pinch Area Setting


- **25E000:** All Infrared anti-pinch (Default)
- **25E001:** First and last pair are not anti-pinch

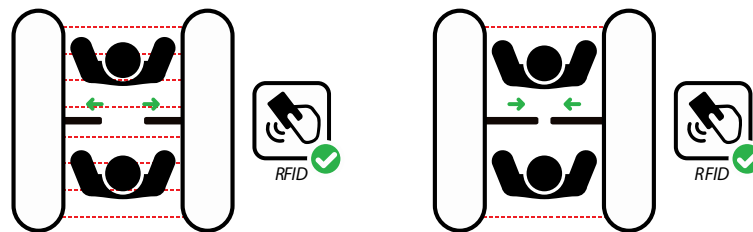

26EXXX : False Direction Entry

The False Direction Entry (26E000) will only be effective when the Anti-pinch Area Setting is set to (25E001).


- **26E000:** Close
- **26E001:** Only alarm (Default)
- **26E002:** No detection

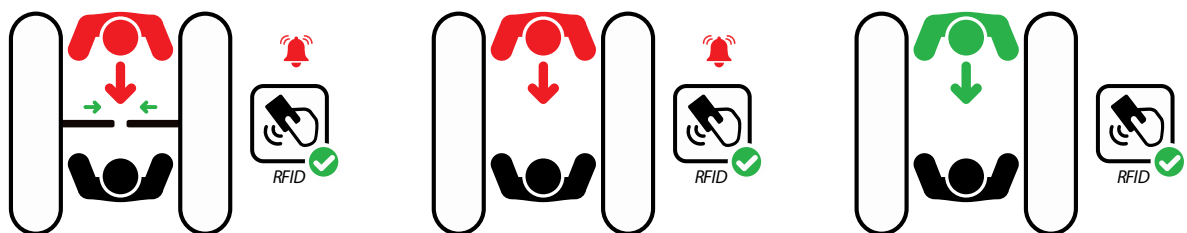

27EXXX : Anti-tailgate Setting

The Anti-tailgate Setting (27E000) will only be effective when the Anti-pinch Area Setting is set to (25E001).


- **27E000:** Close
- **27E001:** Only alarm (Default)
- **27E002:** No detection

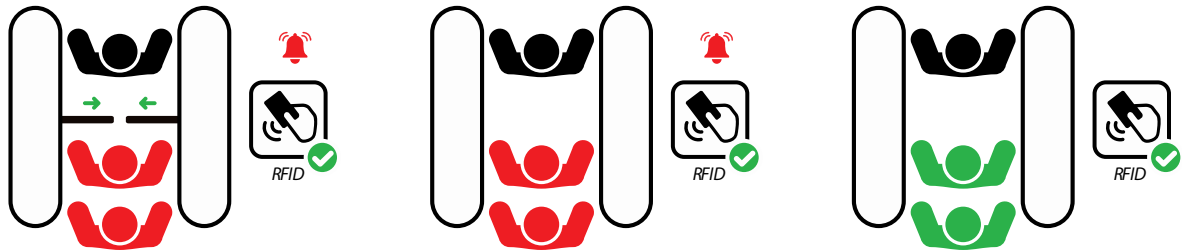

28EXXX : Gate Closing Position


The Gate Closing Position (28E001) will only be effective when the Anti-pinch Area Setting is set to (25E001).

- **28E000:** Last pair (Default)
- **28E001:** Penultimate pair

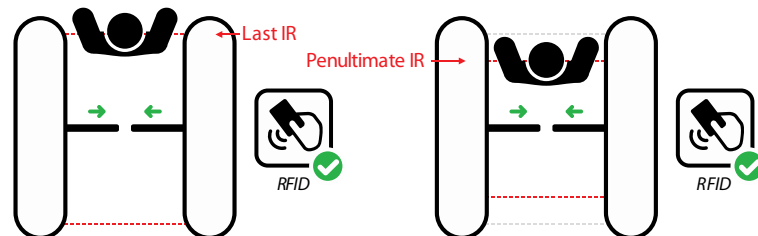

29EXXX : Anti-pinch Action Setting

- **29E000:** Stop
- **29E001:** Open (Default)
- **29E002:** Close the function

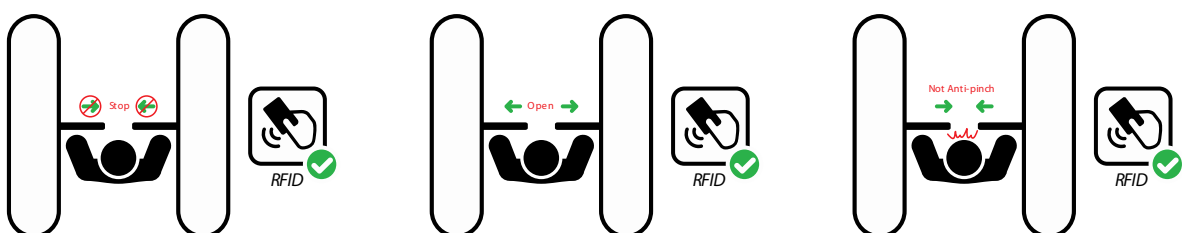

8 Maintenance

8.1 Chassis Maintenance

The chassis is made up of Cold-rolled SPCC Steel (GB700). If it is used for substantial period, then there may be rust stains on its surface. Regularly clean the surface with a clean cloth carefully. Coat the surface with anti-rust oil and do not cover the infrared sensor.

8.2 Movement Maintenance

Before doing maintenance, turn off the power. Open the door, wipe the surface dust, and apply lubricant for smooth movement.

8.3 Power Supply Maintenance

- Switch off the power supply before maintenance.
- Check the power plug connection, if found loose, fix it properly.
- Do not change any connection position randomly.
- Check the external power supply insulation periodically.
- Do periodic check for any kind of leakage.
- Check if the technical parameters of interface are normal.
- Check the service life of the electronic components and replace accordingly.

Caution: All the above-mentioned maintenance methods for flap barrier must be carried out by a professional technician, especially the movement and the electric control part. For ensuring operational safety, first switch off the power supply when the barrier is not in use. Perform the safety check on a weekly basis to ensure that the turnstile is safe and ready for user operation.


9 Troubleshooting

No.	Failure Descriptions	Analysis and Solution
1	The traffic indicator light does not respond or the indication is incorrect.	Check that the control panel traffic indicator wiring is correct or that the contact is poor.
2	After swiping the card, there is only one gate unlocked.	Check the mode setting of the Main and sub devices and the 5-core connection lines. See the wiring diagram for the specific connection circuit.
3	The barrier doesn't close when the opening delay time is ended.	Check to see if the opening delay time is too long or whether the IR sensor is covered.
4	When the gate is self-tested, the wing arm is not in the normal closing position!	In the process of self-test, there are obstacles, please remove the obstacles, restart the self-test after power-on!

10 Packing List

The package consists of the following items:

- **Saturn-F1000**

	Saturn-F1000 (Main and Sub)	2
	Power Cable	1
	Expansion Screw M12*100	8
	Washer	8
	Expansion Screw Washers	8
	Keys	2
	Stainless Steel Maintenance Wipes	1
	Hex Wrench	1

● **Saturn-F1200**

	Saturn-F1200	1
	Power Cable	1
	Expansion Screw M12*100	4
	Washer	4
	Expansion Screw Washers	4
	Key	1
	Stainless Steel Maintenance Wipes	1
	Hex Wrench	1

Revision History

Revision	Date	Author	Reviewer	Description
V1.0	08/15/2025	Stella.Xia		Original Document

ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

